


# Step-by-Step Tutorial for Using LinkSprite JPEG Color Camera Serial UART Interface Model LS-Y201



### Hardware needed

1. The camera itself

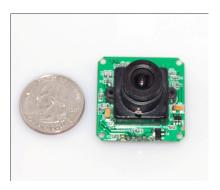

- 2. 5V power supply
- 3. RS232 Cable with DB9 female connector

### Hardware connection





9 PIN DE-9 FEMALE at the Cable.

Pin	Name	RS232	V.24	Dir	Description
1	(D)CD	CF	109	<b>←</b>	(Data) Carrier Detect
2	RXD	вв	104	<b>←</b>	Receive Data
3	TXD	ва	103	$\rightarrow$	Transmit Data
4	DTR	CD	108.2	$\rightarrow$	Data Terminal Ready
5	GND	AB	102	_	System Ground
6	DSR	СС	107	<b>←</b>	Data Set Ready
7	RTS	CA	105	$\rightarrow$	Request to Send
8	CTS	СВ	106	<b>←</b>	Clear to Send
9	RI	CE	125	<b>—</b>	Ring Indicator

TXD(out) of camera is connected to pin 2 (RXD) of the DE-9 FEMALE.


RXD(in) of camera is connected to pin 3 (TXD) of the DE-9 FEMALE.

GND of camera is connected to pin 5 (GND) of the DE-9 FEMALE, and also connected to GND of Power.

+5V of camera is connected to power.



### A photo of setup:

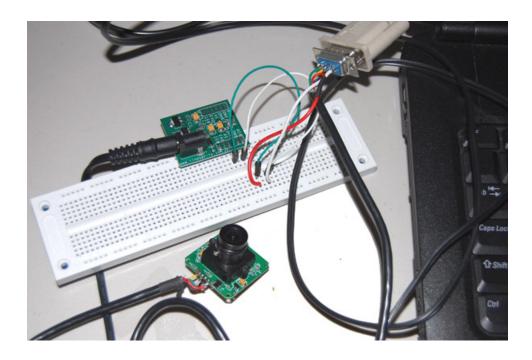

## Software Needed

X-CTU from digi.com

Evaluation Utility: <a href="http://www.linksprite.com/download/showdownload.php?id=36&lang=en">http://www.linksprite.com/download/showdownload.php?id=36&lang=en</a>


## **Test Procedure**

Step 1: Sanity Check

Power On Reset.


X-CTU shows reset message:



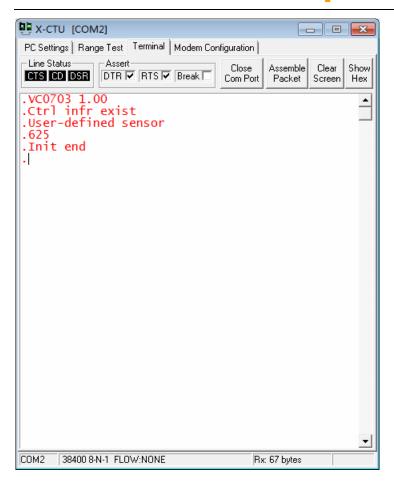

Step 2: Launch the evaluation GUI



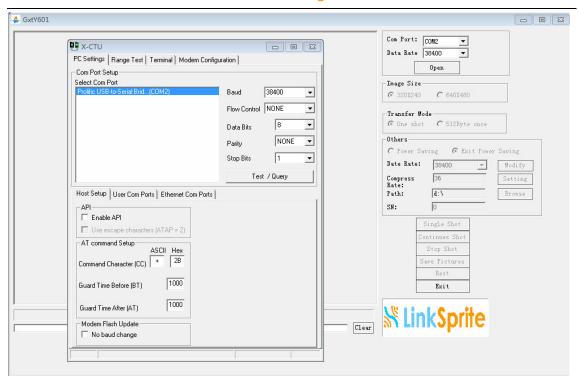


Click "Open" under the COM/Data Rate Section.


Modify the path for capture files. Note: this is a must. If the path is pointing to an invalid or unwritable location, the program may crash.

Step 3-a: Take picture with the evaluation GUI



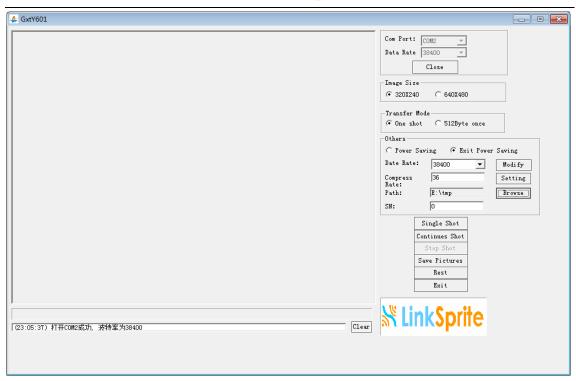

### Click "Single Shot":

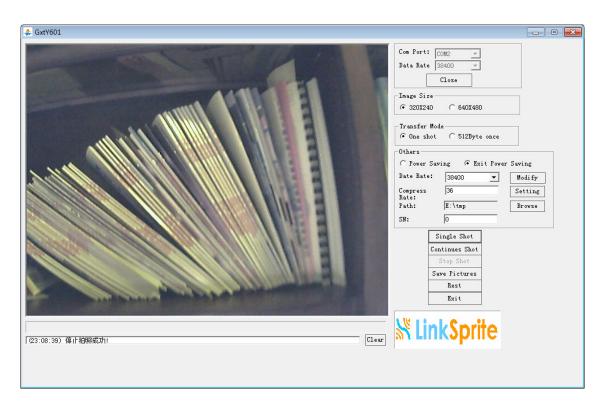




### Step 3-b: Take picture with X-CTU

Compose command in HEX (refer to use manual) and Send data. X-CTU will show the command you just send and the Camera's returned message.

### Take Picture command:

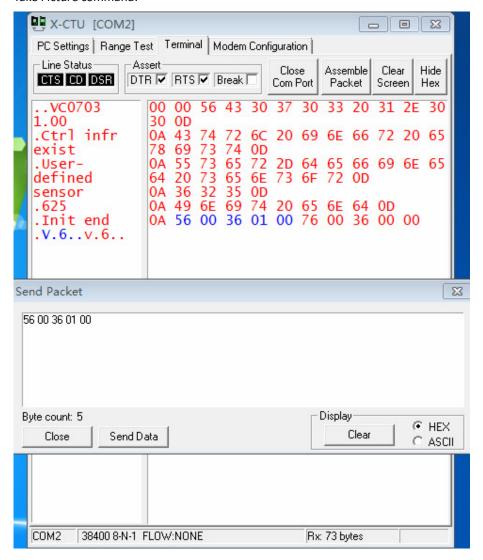



# LinkSprite Technologies, Inc.

Add: 1410 Cannon Mountain Dr, Longmont, CO 80503

**Tel:** 720-204-8599

Email: sales@linksprite.com

**Technical support:** <a href="mailto:support@linksprite.com">support@linksprite.com</a>

Web: www.linksprite.com