

Telit
GM862-PCS
GM862-GPRS
GM862-GSM
Product Description

DAI Telecom S.p.a. 2004

Contents

| | | |
|----------|--|-----------|
| 1 | OVERVIEW | 9 |
| 2 | GENERAL PRODUCT DESCRIPTION | 13 |
| 2.1 | Dimensions | 13 |
| 2.2 | Weight | 14 |
| 2.3 | Environmental requirements | 14 |
| 2.3.1 | Temperature range | 14 |
| 2.3.2 | Vibration Test (non functional) | 15 |
| 2.4 | Operating Frequency | 15 |
| 2.5 | Transmitter output power | 15 |
| 2.6 | Reference sensitivity | 15 |
| 2.7 | Antenna | 16 |
| 2.7.1 | Antenna connector | 16 |
| 2.8 | Supply voltage | 18 |
| 2.9 | Power consumption | 18 |
| 2.10 | Embodied Battery charger | 18 |
| 2.11 | User Interface | 19 |
| 2.11.1 | Speech Coding | 19 |
| 2.11.2 | Sim Reader | 19 |
| 2.11.3 | SMS | 19 |
| 2.11.4 | Real Time Clock and Alarm | 19 |
| 2.11.5 | Data/fax transmission | 19 |
| 2.11.6 | Local security management | 20 |
| 2.11.7 | Call control | 20 |
| 2.11.8 | Phonebook | 20 |
| 2.11.9 | Characters management | 20 |
| 2.11.10 | SIM related functions | 20 |
| 2.11.11 | Call status indication | 20 |
| 2.11.12 | Indication of network service availability | 20 |
| 2.11.13 | Automatic answer (Voice, Data or FAX) | 21 |
| 2.11.14 | Supplementary services (SS) | 21 |
| 2.11.15 | Acoustic signaling | 21 |
| 2.11.16 | DTMF tones | 21 |
| 2.11.17 | Buzzer output | 22 |
| 2.12 | EMC | 22 |

| | | |
|-------------|--|-----------|
| 2.13 | Logic level specifications | 22 |
| 2.13.1 | Reset signal..... | 23 |
| 2.14 | Audio levels specifications | 25 |
| 2.15 | Interface connectors on GM862-GPRS | 26 |
| 2.16 | Mounting the GM862-GPRS on your Board..... | 31 |
| 2.16.1 | Antenna Coaxial cable fixing..... | 31 |
| 2.16.2 | Precautions..... | 32 |
| 3 | APPLICATION BOARD: GM862-S1 | 33 |
| 3.1 | Application Board Description..... | 33 |
| 4 | EVALUATION KIT: GM862/S1 EVK | 34 |
| 4.1 | Evaluation Kit description | 35 |
| 4.1.1 | Power Supply | 35 |
| 4.1.2 | Serial interface..... | 36 |
| 4.1.3 | Audio | 36 |
| 4.1.4 | GPIO and Leds..... | 36 |
| 4.1.4.1 | Telit GM862-GPRS module interface connector..... | 36 |
| 5 | SERVICE AND FIRMWARE UPDATE | 38 |
| 5.1.1.1 | Step-by-Step upgrade procedure | 38 |
| 6 | AT COMMAND..... | 40 |
| 6.1 | Definitions..... | 40 |
| 6.2 | AT Command Syntax..... | 41 |
| 6.2.1 | Command lines..... | 41 |
| 6.2.2 | Information responses and result codes | 42 |
| 6.2.3 | Command Response Timeout..... | 42 |
| 6.2.4 | Command issuing timing..... | 45 |
| 6.2.5 | Factory Profile and parameters stored in the profile | 45 |
| 6.3 | Command Availability Table | 46 |
| 6.4 | Hayes Compliant AT Commands | 52 |
| 6.4.1 | Generic Modem Control..... | 52 |
| 6.4.1.1 | &F - restore factory configuration..... | 52 |
| 6.4.1.2 | Z - soft reset..... | 52 |
| 6.4.1.3 | +FCLASS - select active service class | 53 |
| 6.4.1.4 | &Y - designate a default reset profile | 53 |
| 6.4.1.5 | &W - store current configuration..... | 54 |
| 6.4.1.6 | &Z - store telephone number in the Telit GM862-GPRS module internal phonebook..... | 54 |
| 6.4.1.7 | &N - display internal phonebook stored numbers | 55 |
| 6.4.1.8 | +GMI - request manufacturer identification..... | 55 |
| 6.4.1.9 | +GMM - request model identification | 55 |
| 6.4.1.10 | +GMR - request revision identification..... | 56 |
| 6.4.1.11 | +GCAP - request capabilities list..... | 56 |

| | | |
|------------|--|-----------|
| 6.4.1.12 | +GSN - request serial number..... | 56 |
| 6.4.1.13 | &V - display current configuration & profile..... | 57 |
| 6.4.1.14 | &V0 - display current configuration & profile..... | 58 |
| 6.4.1.15 | &V1 - display S registers values..... | 58 |
| 6.4.1.16 | &V2 - display last connection statistics..... | 59 |
| 6.4.1.17 | \V - single line connect message..... | 59 |
| 6.4.1.18 | %L - report line signal level..... | 60 |
| 6.4.1.19 | %Q - report line quality..... | 60 |
| 6.4.2 | DTE - modem interface control..... | 61 |
| 6.4.2.1 | E - command echo..... | 61 |
| 6.4.2.2 | Q - quiet resut codes..... | 61 |
| 6.4.2.3 | V- result code form..... | 62 |
| 6.4.2.4 | X - extended result codes..... | 62 |
| 6.4.2.5 | I - Request identifier and software checksum..... | 63 |
| 6.4.2.6 | &C - data carrier detect (DCD) control..... | 63 |
| 6.4.2.7 | &D - data terminal ready (DTR) control..... | 64 |
| 6.4.2.8 | &K - flow control..... | 64 |
| 6.4.2.9 | &S - data set ready (DSR) control..... | 65 |
| 6.4.2.10 | \R - ring (RI) control..... | 66 |
| 6.4.2.11 | +IPR - fixed DTE interface rate..... | 66 |
| 6.4.2.12 | +IFC - DTE - DTA flow control..... | 67 |
| 6.4.2.13 | +ILRR - DTE - modem rate reporting..... | 68 |
| 6.4.2.14 | +ICF - DTE - modem character format..... | 69 |
| 6.4.3 | Call Control..... | 70 |
| 6.4.3.1 | D - dial..... | 70 |
| 6.4.3.2 | T - set tone dial..... | 72 |
| 6.4.3.3 | P - set pulse dial..... | 72 |
| 6.4.3.4 | A - answer..... | 72 |
| 6.4.3.5 | A/ - Last command automatic repetition..... | 73 |
| 6.4.3.6 | H - disconnect..... | 73 |
| 6.4.3.7 | O - return to On Line Mode..... | 74 |
| 6.4.3.8 | &G - guard tone..... | 74 |
| 6.4.3.9 | &P - pulse dial make/break ratio..... | 75 |
| 6.4.4 | Modulation control..... | 75 |
| 6.4.4.1 | +MS - modulation control..... | 75 |
| 6.4.4.2 | %E - enable/disable line quality monitor and auto retrain or fallback / fallforward..... | 76 |
| 6.4.5 | Compression control..... | 77 |
| 6.4.5.1 | +DS - set data compression..... | 77 |
| 6.4.5.2 | +DR - data compression reporting..... | 77 |
| 6.4.6 | Break control..... | 78 |
| 6.4.6.1 | \B - transmit break to remote..... | 78 |
| 6.4.6.2 | \K - break handling..... | 78 |
| 6.4.7 | S parameters..... | 79 |
| 6.4.7.1 | S0 - number of rings to auto answer..... | 79 |
| 6.4.7.2 | S1 - ring counter..... | 79 |
| 6.4.7.3 | S2 - escape character..... | 80 |
| 6.4.7.4 | S3 - carriage return character..... | 80 |
| 6.4.7.5 | S4 - line feed character..... | 81 |
| 6.4.7.6 | S5 - backspace character..... | 81 |
| 6.4.7.7 | S7 - wait time for carrier, silence or dial tone..... | 82 |
| 6.4.7.8 | S10 - lost carrier to hang up delay..... | 82 |
| 6.4.7.9 | S12 - escape prompt delay..... | 83 |
| 6.4.7.10 | S25 - delay to DTR off..... | 83 |
| 6.4.7.11 | S30 - disconnect inactivity timer..... | 84 |
| 6.4.7.12 | S38 - delay before forced hang up..... | 84 |
| 6.5 | ETSI GSM 07.07 AT Commands..... | 85 |

| | | |
|----------|--|-----|
| 6.5.1 | General..... | 85 |
| 6.5.1.1 | +CGMI - request manufacturer identification..... | 85 |
| 6.5.1.2 | +CGMM - request model identification..... | 85 |
| 6.5.1.3 | +CGMR - request revision identification..... | 85 |
| 6.5.1.4 | +CGSN - request product serial number identification..... | 86 |
| 6.5.1.5 | +CSCS - select TE character set..... | 86 |
| 6.5.1.6 | +CIMI - request international mobile subscriber identity (IMSI)..... | 87 |
| 6.5.2 | Call control..... | 88 |
| 6.5.2.1 | +CBST - select bearer service type..... | 88 |
| 6.5.2.2 | +CRLP - radio link protocol..... | 89 |
| 6.5.2.3 | +CR - service reporting control..... | 90 |
| 6.5.2.4 | +CEER - extended error report..... | 91 |
| 6.5.2.5 | +CRC - cellular result codes..... | 92 |
| 6.5.3 | Network service handling..... | 93 |
| 6.5.3.1 | +CNUM - subscriber number..... | 93 |
| 6.5.3.2 | +CREG - network registration report..... | 94 |
| 6.5.3.3 | +COPS - operator selection..... | 96 |
| 6.5.3.4 | +CLCK - facility lock/ unlock..... | 97 |
| 6.5.3.5 | +CPWD - change facility password..... | 98 |
| 6.5.3.6 | +CLIP - calling line identification presentation..... | 99 |
| 6.5.3.7 | +CLIR - calling line identification restriction..... | 100 |
| 6.5.3.8 | +CCFC - call forwarding number and conditions..... | 101 |
| 6.5.3.9 | +CCWA - call waiting..... | 103 |
| 6.5.3.10 | +CHLD - call holding services..... | 104 |
| 6.5.3.11 | +CUSD - unstructured supplementary service data..... | 105 |
| 6.5.3.12 | +CAOC - advice of charge..... | 107 |
| 6.5.3.13 | +CLCC - list current calls..... | 108 |
| 6.5.3.14 | +CSSN - SS Notification..... | 109 |
| 6.5.3.15 | +CCUG - Closed User Group supplementary service control..... | 110 |
| 6.5.4 | Mobile Equipment control..... | 111 |
| 6.5.4.1 | +CPAS - phone activity status..... | 111 |
| 6.5.4.2 | +CFUN Set phone functionality (Power Saving Management)..... | 112 |
| 6.5.4.3 | +CPIN - enter PIN..... | 113 |
| 6.5.4.4 | +CSQ- signal quality..... | 115 |
| 6.5.4.5 | +CPBS - select phonebook memory storage..... | 116 |
| 6.5.4.6 | +CPBR - read phonebook entries..... | 117 |
| 6.5.4.7 | +CPBF - find phonebook entries..... | 118 |
| 6.5.4.8 | +CPBW - write phonebook entry..... | 119 |
| 6.5.4.9 | +CCLK - Clock Management..... | 120 |
| 6.5.4.10 | +CALA - Alarm Management..... | 121 |
| 6.5.4.11 | +CALM - alert sound mode..... | 123 |
| 6.5.4.12 | +CRSL - ringer sound level..... | 123 |
| 6.5.4.13 | +CLVL - loudspeaker volume level..... | 124 |
| 6.5.4.14 | +CMUT - microphone mute control..... | 124 |
| 6.5.4.15 | +CACM - accumulated call meter..... | 125 |
| 6.5.4.16 | +CAMM - accumulated call meter maximum..... | 125 |
| 6.5.4.17 | +CPUC - price per unit and currency table..... | 126 |
| 6.5.5 | Mobile equipment errors..... | 127 |
| 6.5.5.1 | +CMEE - report mobile equipment error..... | 127 |
| 6.5.5.2 | +CME ERROR: - ME error result code..... | 128 |
| 6.5.6 | Voice Control (TIA IS-101)..... | 129 |
| 6.5.6.1 | +VTS: - DTMF tones transmission..... | 129 |
| 6.5.7 | Commands For GPRS..... | 130 |
| 6.5.7.1 | +CGACT - PDP context activate or deactivate..... | 130 |
| 6.5.7.2 | +CGATT - GPRS attach or detach..... | 131 |
| 6.5.7.3 | +CGDATA - Enter data state..... | 132 |
| 6.5.7.4 | +CGDCONT - define PDP context..... | 133 |

| | | |
|------------|---|------------|
| 6.5.7.5 | +CGPADDR - show PDP address | 134 |
| 6.5.7.6 | +CGREG - GPRS network registration status | 135 |
| 6.5.7.7 | +CGQMIN - quality of service profile (minimum acceptable) | 136 |
| 6.5.7.8 | +CGQREQ - quality of service profile (requested)..... | 137 |
| 6.5.8 | Commands For Battery Charger..... | 138 |
| 6.5.8.1 | +CBC - Battery Charge | 138 |
| 6.6 | ETSI GSM 07.05 AT Commands for SMS and CB services | 139 |
| 6.6.1 | General configuration..... | 139 |
| 6.6.1.1 | +CSMS - select message service..... | 139 |
| 6.6.1.2 | +CPMS - preferred message storage..... | 140 |
| 6.6.1.3 | +CMGF - message format..... | 141 |
| 6.6.1.4 | +CSMP – Set parameters in text mode..... | 141 |
| 6.6.1.5 | +CSDH – Show parameters in text mode..... | 142 |
| 6.6.1.6 | +CSAS – Save setting text mode..... | 142 |
| 6.6.1.7 | +CRES – Restore text mode settings | 143 |
| 6.6.1.8 | +CSCB – Select Cell Broadcast Message types | 144 |
| 6.6.1.9 | +CMS ERROR - message service failure result code..... | 145 |
| 6.6.2 | Message configuration..... | 146 |
| 6.6.2.1 | +CSCA - service center address | 146 |
| 6.6.3 | Message receiving and reading | 147 |
| 6.6.3.1 | +CNMI - new message indications to Terminal Equipment..... | 147 |
| 6.6.3.2 | +CMGL - list messages | 149 |
| 6.6.3.3 | +CMGR - read message | 151 |
| 6.6.4 | Message sending and writing..... | 153 |
| 6.6.4.1 | +CMGS - send message | 153 |
| 6.6.4.2 | +CMSS - send message from storage..... | 154 |
| 6.6.4.3 | +CMGW - write message to memory | 155 |
| 6.6.4.4 | +CMGD - delete message..... | 156 |
| 6.7 | Custom AT Commands | 157 |
| 6.7.1 | General configuration..... | 157 |
| 6.7.1.1 | #CAP - Change Audio Path..... | 157 |
| 6.7.1.2 | #SRS - Select ringer sound..... | 158 |
| 6.7.1.3 | #SRP –Select Ringer Path | 159 |
| 6.7.1.4 | #STM - Signalling Tones Mode | 160 |
| 6.7.1.5 | #PCT – display PIN Counter..... | 160 |
| 6.7.1.6 | #SHDN – Software Shut Down | 161 |
| 6.7.1.7 | #WAKE – Wake from Alarm mode..... | 162 |
| 6.7.1.8 | #QTEMP –Query Temperature overflow..... | 163 |
| 6.7.1.9 | #SGPO –Set General Purpose Output | 164 |
| 6.7.1.10 | #GGPI – Read General Purpose Input | 165 |
| 6.7.1.11 | #GPIO –General Purpose Input/Output pin control..... | 166 |
| 6.7.1.12 | #MONI – Monitor Cells | 168 |
| 6.7.1.13 | #QSS – Query SIM Status..... | 169 |
| 6.7.1.14 | #ACAL – Set Automatic Call..... | 170 |
| 6.7.1.15 | #SMOV – SMS Overflow..... | 171 |
| 6.7.1.16 | #SHFEC – Set Handsfree echo canceller..... | 171 |
| 6.7.1.17 | #HFMICG – Handsfree Microphone Gain | 172 |
| 6.7.1.18 | #HSMICG – Handset Microphone Gain | 172 |
| 6.7.1.19 | #SHFSD – Set Handsfree side tone..... | 173 |
| 6.7.1.20 | #/ – Repeat last command..... | 173 |
| 6.7.1.21 | #BND – Select Band (DCS 1800 or PCS 1900) | 174 |
| 6.8 | FAX Class 1 Commands | 175 |
| 6.8.1 | General configuration..... | 175 |
| 6.8.1.1 | +FCLASS - select active service class | 175 |

| | | |
|-------------|---|------------|
| 6.8.1.2 | +FMI – Report manufacturer ID..... | 176 |
| 6.8.1.3 | +FMM? – Report model ID | 176 |
| 6.8.1.4 | +FMR – Report revision ID..... | 177 |
| 6.8.2 | Transmission/Reception control..... | 177 |
| 6.8.2.1 | +FTS – Stop Transmission and pause | 177 |
| 6.8.2.2 | +FRS – Wait for receive silence | 178 |
| 6.8.2.3 | +FTM – Transmit data modulation | 178 |
| 6.8.2.4 | +FRM – Receive data modulation..... | 179 |
| 6.8.2.5 | +FTH – Transmit data with HDLC framing..... | 179 |
| 6.8.2.6 | +FRH – Receive data with HDLC framing..... | 180 |
| 6.8.3 | Serial port control..... | 180 |
| 6.8.3.1 | +FLO – Select flow control specified by type..... | 180 |
| 6.8.3.2 | +FPR – Select serial port rate..... | 181 |
| 6.8.3.3 | +FDD – Double escape character replacement control..... | 181 |
| 6.9 | Easy GPRS Extension..... | 182 |
| 6.9.1 | Overview..... | 182 |
| 6.9.2 | Easy GPRS definition..... | 182 |
| 6.9.2.1 | Configuring the GPRS access..... | 183 |
| 6.9.2.2 | Configuring the embedded TCP/IP stack..... | 183 |
| 6.9.2.3 | Defining the Internet peer to be contacted | 183 |
| 6.9.2.4 | Open the connection with the internet host..... | 183 |
| 6.9.2.5 | Close the Socket and deactivate the context | 184 |
| 6.9.3 | Known limitations | 184 |
| 6.9.4 | Easy GPRS custom AT command Definition..... | 185 |
| 6.9.4.1 | #USERID – Authentication User ID control | 185 |
| 6.9.4.2 | #PASSW – Authentication Password control | 186 |
| 6.9.4.3 | #PKTSZ –Packet Size control..... | 187 |
| 6.9.4.4 | #DSTO – Data Sending Timeout control..... | 188 |
| 6.9.4.5 | #SKTTO – Socket inactivity timeout control..... | 189 |
| 6.9.4.6 | #SKTSET – Socket definition control | 190 |
| 6.9.4.7 | #SKTOP – Socket Open command | 191 |
| 6.9.4.8 | #QDNS – Query DNS..... | 191 |
| 6.9.4.9 | #SKTSAV – Socket Parameters Save Command | 192 |
| 6.9.4.10 | #SKTRST – Socket Parameters Reset Command | 193 |
| 6.10 | Easy Camera custom commands | 194 |
| 6.10.1 | Camera management..... | 194 |
| 6.10.1.1 | #CAMON – Camera ON..... | 194 |
| 6.10.1.2 | #CAMOFF – Camera OFF | 194 |
| 6.10.1.3 | #TPHOTO – Camera Take Photo | 195 |
| 6.10.1.4 | #RPHOTO – Camera Read Photo..... | 195 |
| 6.10.1.5 | #CAMQUA – Camera Select Quality of Photo..... | 196 |
| 6.10.1.6 | #CMODE – Camera Select Operating MODE..... | 197 |
| 6.10.2 | Email management | 198 |
| 6.10.2.1 | #ESMTP – Email SMTP server..... | 198 |
| 6.10.2.2 | #EADDR – Email sender address | 199 |
| 6.10.2.3 | #EUSER – Email authentication USER NAME..... | 200 |
| 6.10.2.4 | #EPASSW – Email authentication PASSWORD..... | 201 |
| 6.10.2.5 | #SEMAIL - Send Email | 202 |
| 7 | CONFORMITY ASSESSMENT ISSUES..... | 203 |
| 7.1 | GM862-GPRS: Conformity Assessment | 204 |
| 7.2 | GM862-GSM: Conformity Assessment..... | 206 |



7.3 GM862-PCS: Conformity Assessment.....208

7.4 GM862-PCS FCC Equipment Authorization.....210

8 GM862-GPRS TECHNICAL SUPPORT..... 211

9 LIST OF ACRONYMS 212

10 DOCUMENT CHANGE LOG 214

1 Overview

Aim of this document is the description of features, functions and interfaces of the [Telit GM862-PCS](#), [Telit GM862-GPRS](#), [Telit GM862-GSM modules](#).

The [Telit GM862-PCS](#), [Telit GM862-GPRS](#), [Telit GM862-GSM modules](#) are small, lightweight and low power consumption devices that allow digital communication services wherever a GSM 900, DCS 1800, PCS1900¹ network is present; they are the evolution of the previous [Telit GM862](#) module, with an on board SIM Reader and therefore standalone Full Type Approval.

The [Telit GM862-PCS module](#) is the improved GPRS triband evolution of the previous wireless telecommunication module [Telit GM862-GPRS](#), therefore allowing worldwide operations. It includes all the features of the previous GPRS module such as GPRS, Voice, Circuit Switch Data transfer, Fax, Phonebook and SMS support, furthermore it has been enhanced with the third band PCS1900 support, hot removal sensing on board SIM Reader, therefore standalone FTA, and the higher upload speed of the GPRS Class 10 Packet Data transfer. Furthermore a battery charger circuitry has been embodied inside the module.

It is specifically designed and developed by [Telit](#) for OEM usage and dedicated to portable data, voice and telematics applications needing the added triband and GPRS Class 10 improved speed features and the battery charger such as:

- ❑ **Fast Worldwide GPRS Telemetry and Telecontrol (SCADA applications)**
- ❑ **Worldwide Smart GPRS Security systems**
- ❑ **Worldwide Smart GPRS Vending machines**
- ❑ **Fast Worldwide GPRS POS terminals**
- ❑ **Worldwide PDAs**
- ❑ **Worldwide Phones and Payphones**
- ❑ **Worldwide Smart Automotive and Fleet Management applications**
- ❑ **Battery powered applications needing a battery charger**

The [Telit GM862-GPRS module](#) is the improved GPRS evolution of the previous wireless telecommunication module [Telit GM862](#). It includes all the features of the previous GSM module such as Voice, Circuit Switch Data transfer, Fax, Phonebook and SMS support, furthermore it has been enhanced with the on board SIM Reader, therefore standalone FTA, and the speed and flexibility of the Packet Data transfer and the always connected feature of the GPRS system.

It is specifically designed and developed by [Telit](#) for OEM usage and dedicated to voice and telematics applications needing the added GPRS features such as:

¹ PCS1900 network is supported only by the GM862-PCS module.

- ❑ **GPRS Telemetry and Telecontrol (SCADA applications)**
- ❑ **Smart GPRS Security systems**
- ❑ **Smart GPRS Vending machines**
- ❑ **GPRS POS terminals**
- ❑ **PDA's**
- ❑ **Phones and Payphones**
- ❑ **Smart Automotive and Fleet Management applications**

The [Telit GM862-GSM module](#) is the evolution of the previous wireless telecommunication module [Telit GM862](#). It includes all the features of the previous module such as Voice, Circuit Switch Data transfer, Fax, Phonebook and SMS support; furthermore it has been improved with the on board SIM Reader and standalone FTA.

It is specifically designed and developed by [Telit](#) for OEM usage and dedicated to cost effective voice and telematics applications where the Packed Data features of the GPRS are not a constrain such as:

- ❑ **Telemetry and Telecontrol (SCADA applications)**
- ❑ **Security systems**
- ❑ **Cost Effective Vending machines**
- ❑ **Low cost POS terminals**
- ❑ **Phones and Payphones**
- ❑ **Automotive and Fleet Management applications**
- ❑ **Domestic Appliances with simple remote control**

The [Telit GM862-PCS, GM862-GPRS, GM862-GSM modules](#) will evolve in future in order to face the competitive telecommunication market requirements supporting the new incoming standards:

- ❑ *Bluetooth support*
- ❑ *GPS embedded functionality*
- ❑ *Support to Satellite voice and data communication (Globalstar System)*

Furthermore the [Telit GM862-PCS, GM862-GPRS, GM862-GSM modules](#) have the full conformity assessment against R&TTE Directive and they don't require any further certification test effort and expense.

Telit **GM862 Module Pin-to-Pin Upgrade Policy** will enable you to include in your application the new **Telit GM862-PCS, GM862-GPRS, GM862-GSM modules** and future versions in place of the **Telit GM862**, allowing you to save your investments and to successfully penetrate new markets.²

Moreover, Telit is the only world mobile's manufacturer that produces Satellite ETSI standard compliant telecommunication modules (Globalstar System) compatible with the **Telit GM862-GPRS module**; (for more info on Globalstar system see www.globalstar.com; for more info on Telit Globalstar telecommunication modules see www.telital.com and www.GM862.com).

In areas where the GSM system is not accessible or the application requires a back-up solution, Globalstar system provides reliable voice and data telecommunication compliant to the ETSI standard.

By developing your application with one of the **Telit GM862-PCS, GM862-GPRS, GM862-GSM modules** you will be capable to simply extend it, if required, to satellite compatible. Your application will even work if no GSM network is available.

In order to meet the competitive OEM and vertical market stringent requirements, Telit supports its customers with a dedicated **GM862 Module Support Policy** with:

- ❑ an **Evaluation Kit** to help you develop your application;
- ❑ a dedicated Website (www.GM862.com) with all updated information available;
- ❑ an **Application Module** for your **Telit GM862-PCS, GM862-GPRS, GM862-GSM**: for compatibility with the previous product **Telit GM862-S1** the **Telit GM862** module can be replaced in the Application Module with one of the new **Telit GM862-PCS, GM862-GPRS, GM862-GSM** and therefore bring the new PCS, GPRS, GSM features to your product, without any further change.
- ❑ a **Full Quality Certification Laboratory**, to support you in case your application requires additional certification effort to comply with the European or International laws (see par.7, Conformity Assessment Issues
- ❑ a high level specialist technical support (see par.8, GM862-GPRS Technical Support) to assist you in your development;
- ❑ free SW releases upgrade download (via the Website) every time a new functionality will be added to the **Telit modules** SW.

For more updated information concerning product Roadmap and availability, technical characteristics, commercial and other issues please check the **Telit GM862 modules** dedicated Website www.GM862.com or mail to:

ts-gm862@telital.com, for any **Technical** information or support you may need

ci-gm862@telital.com, for any **Commercial**, sales or marketing related info

af-gm862@telital.com, for **After Sales** issues

² The GM862 Pin-to-Pin Upgrade Policy applies to the hardware and software that the product features support.

For Example by substituting the GM862-GPRS with the GM862-GSM all the hardware features remain unaffected but only the GSM software functions will be compatible and supported, the GPRS will be lost.

NOTE: All the characteristics referred to the **Telit GM862-GPRS module** where not expressly stated apply also to the other products **Telit GM862-PCS, Telit GM862-GSM**.

NOTE: Some of the performances of the **Telit GM862 family modules** depend on SW version installed on the module itself. In particular on Chapter 6, dedicated to the supported AT commands, the minimum SW version required to support each specific AT command is reported.

The **Telit GM862 family modules** SW group is continuously working in order to add new features and improve the overall performances. From time to time that a new SW version is released, it will be freely distributed by the **Telit GM862-GPRS module** dedicated Website

The **Telit GM862 family modules** are easily upgradeable by the developer using the **Telit GM862 family module** Flash Programmer.

For more info about this topic (and not only !) please check **Telit GM862 family modules** dedicated Website www.GM862.com and www.telit.net


2 General Product Description


2.1 Dimensions

The **Telit GM862-GPRS module** overall dimension are:

- **Lenght:** 43.9 mm
- **Width:** 43.9 mm
- **Thickness:** 6.9 mm
- **Volume:** @ 13 cm³

The layout of **Telit GM862-GPRS module** is shown in the following figure:

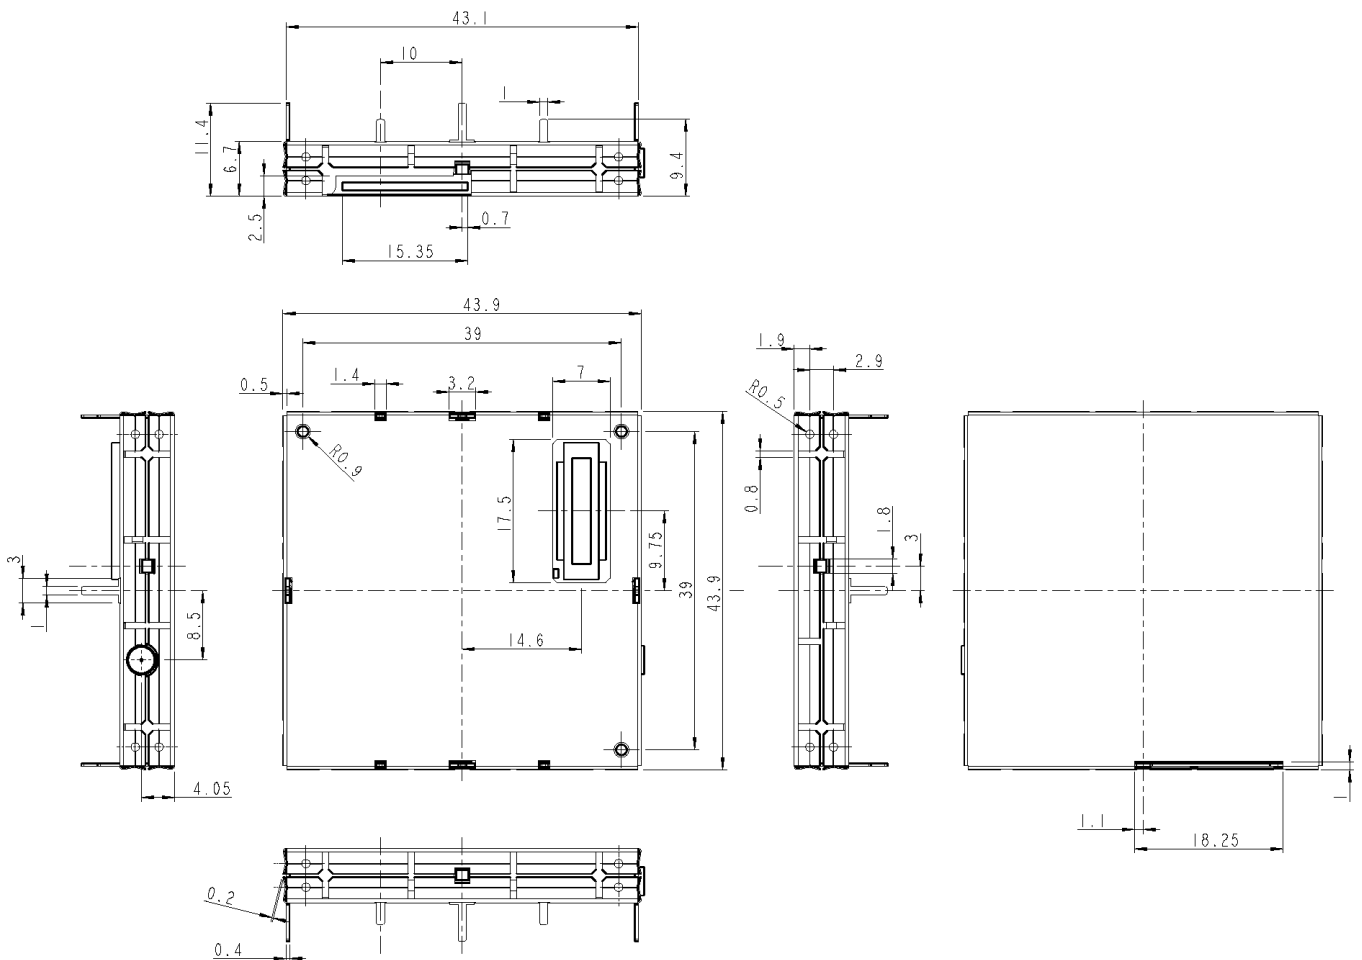

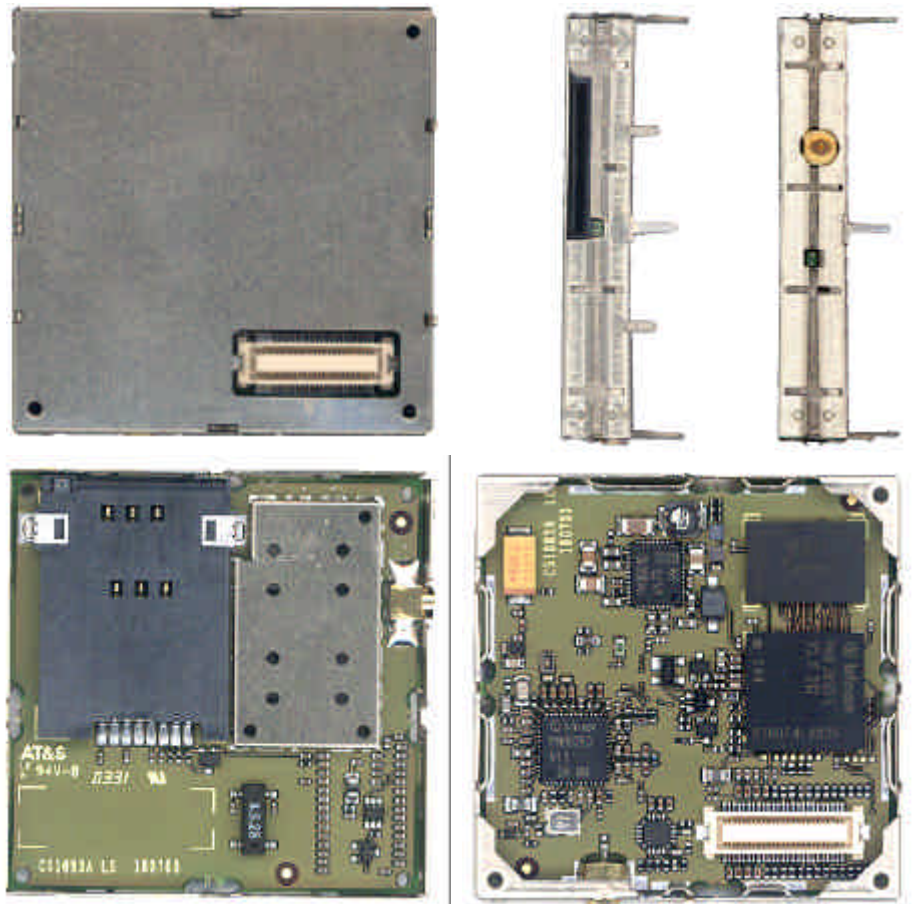

2.2 Weight

The [Telit GM862-GPRS module](#) weight is **23 gr** with shield and **16 gr** without shield.

2.3 Environmental requirements

The [Telit GM862-GPRS module](#) is compliant with the applicable ETSI reference documentation GSM 05.05 Release1999 ETSI EN300910 V8.4.1

2.3.1 Temperature range

- Temperature in normal functional conditions $-10^{\circ}\text{C} \div +55^{\circ}\text{C}$
- Temperature in extreme functional conditions* $-20^{\circ}\text{C} \div +70^{\circ}\text{C}$
- Temperature in storage conditions $-30^{\circ}\text{C} \div +85^{\circ}\text{C}$

*these temperature can affect the sensitivity and performance of the module

2.3.2 Vibration Test (non functional)

- 10 ÷ 12Hz ASD = 1.92m²/s³
- 12 ÷ 150Hz -3dB/oct

2.4 Operating Frequency

The operating frequencies in GSM, DCS, PCS modes are conform to the GSM specifications.

| Mode | Freq. TX (MHz) | Freq. RX (MHz) | Channels (ARFC) | TX - RX offset |
|-----------|-----------------|-----------------|-----------------|----------------|
| E-GSM-900 | 890.0 - 914.8 | 935.0 - 959.8 | 0 - 124 | 45 MHz |
| | 880.2 - 889.8 | 925.2 - 934.8 | 975 - 1023 | |
| DCS-1800 | 1710.2 - 1784.8 | 1805.2 - 1879.8 | 512 - 885 | 95 MHz |
| PCS-1900 | 1850.2 - 1909.8 | 1930.2 - 1989.8 | 512 - 810 | 80 MHz |

NOTE: PCS 1900 is supported only in the [Telit GM862-PCS module](#)

2.5 Transmitter output power

GSM-900

The GM862-GPRS transceiver module in GSM-900 operating mode are of **class 4** in accordance with the specification which determine the nominal 2W peak RF power (+33dBm) on 50 Ohm.

DCS-1800

The GM862-GPRS transceiver module in DCS-1800 operating mode are of **class 1** in accordance with the specifications which determine the nominal 1W peak RF power (+30dBm) on 50 Ohm.

PCS-1900

The GM862-PCS transceiver module in PCS-1900 operating mode are of **class 1** in accordance with the specifications which determine the nominal 1W peak RF power (+30dBm) on 50 Ohm.

2.6 Reference sensitivity

GSM-900

The sensitivity of the GM862-GPRS transceiver module according to the specifications for the class 4 GSM-900 portable terminals is better than **-102dBm** in all the operational conditions.

DCS-1800

The sensitivity of the GM862-GPRS transceiver module according to the specifications for the class 1 portable terminals GSM 1800 is better than **-102dBm** in normal operating conditions.

PCS-1900

The sensitivity of the GM862-PCS transceiver module according to the specifications for the class 1 portable terminals PCS 1900 is better than **-102dBm** in normal operating conditions.

2.7 Antenna

The antenna that the customer chooses to use, depending on his application, should fulfil the following requirements:


| | |
|--------------------------|---|
| Frequency range | Standard Dual Band frequency range, Standard Tri Band frequency range for -PCS |
| Bandwith | 80 MHz in GSM & 170 MHz in DCS & 140 MHz PCS band |
| Gain | > 0 dB (referenced to 1/2 dipole) |
| Impedance | 50 ohm |
| Input power | > 2 W peak power |
| VSWR absolute max | <= 10:1 |
| VSWR recommended | <= 2:1 |

NOTE: PCS 1900 frequency coverage is required only for the [Telit GM862-PCS module](#)

2.7.1 Antenna connector

The [Telit GM862-GPRS module](#) includes a 50 Ohm MMCX coaxial female 2 PIN Angle Coax SMD J01341A0081 connector to allow the antenna connection.

On the user application side the following connector must be used:

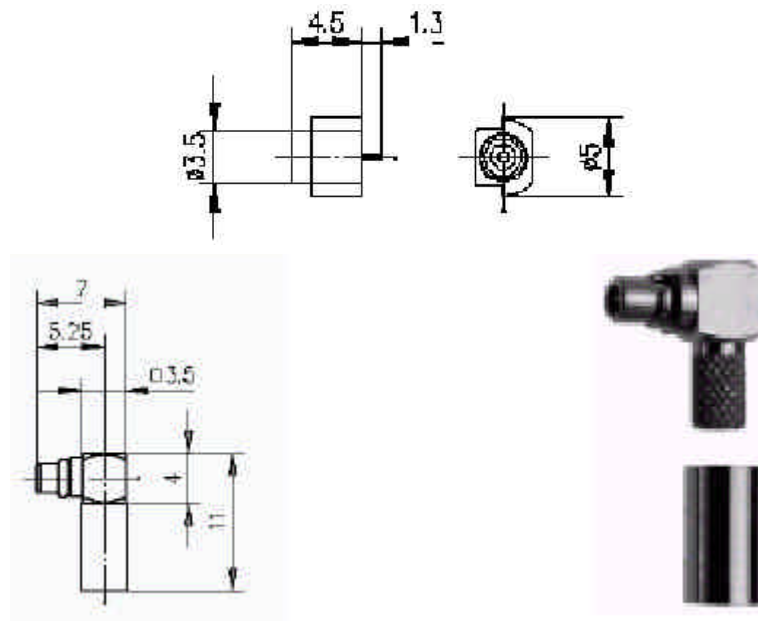

a) Telegärtner MMCX angle plug crimp - Order n. J01340A0121

connector is locatable at:

Telegärtner - K. Gärtner GmbH

Lerchenstrasse 35, D-71144 Steinenbronn

Phone: (+49) 71 57 125 100

NOTE: be very careful when connecting the [Telit GM862-GPRS module](#) RF connector. The [Telit GM862-GPRS module](#) RF connector can be damaged if not connected with the proper antenna RF connector. The minimum number of insertion cycles are recommended.

2.8 Supply voltage

The external power supply must be connected to VBATT signal (see paragraph 2.15, Interface connectors on GM862-GPRS) and must fulfil the following requirements:

- Nominal operating voltage 3.8 V
- Operating voltage range 3.4 V - 4.2 V

2.9 Power consumption

The typical current consumption of the [Telit GM862-GPRS module](#) are:

- Power off current (typical) 26 μ A;
- Stand-by current < 17 mA_{rms} (< 4 mA_{rms} using command AT+CFUN)
- Operating current 250 mA_{rms} @ typical network conditions
- Operating current 350 mA_{rms} 1.9 A_{peak} @ worst network conditions

2.10 Embodied Battery charger

This feature is available only on the [Telit GM862-PCS](#).

The battery charger is suited for 3.7V Li-Ion rechargeable battery (suggested capacity 500-1000mAh). The Charger needs only a CURRENT LIMITED power source input and charges the battery directly through VBATT connector pins.

- Battery charger input pin CHARGE
- Battery pins VBATT, GND
- Battery charger input voltage min 5.0 V
- Battery charger input voltage typ 5.5 V
- Battery charger input voltage max 7.0 V
- Battery charger input current max 400mA
- Battery type Rechargeable Li-Ion

NOTE: If embodied battery charger is used, then a LOW ESR capacitor of at least 100 μ F must be mounted in parallel to VBATT GM862-PCS pins.

NOTE: when power is supplied to the CHARGE pin, a battery must always be connected to the VBATT pins of the GM862-PCS.

2.11 User Interface

The user interface is managed by AT commands specified on the GSM 07.07 and 07.05 specification and listed in the chapter 6, AT Command.

2.11.1 Speech Coding

The [Telit GM862-PCS](#), [Telit GM862-GPRS](#) and [Telit GM862-GSM modules](#) vocoder supports the following rates:

- Half Rate.
- Full rate,
- Enhanced Full Rate

2.11.2 Sim Reader

The [Telit GM862-PCS/-GPRS/-GSM modules](#) support phase 2 GSM11.14 - SIM 3 volts ONLY. For 5V SIM operation an external level translator can be added.

Furthermore the [Telit GM862-GPRS/-GSM module](#) have an internal built-in SIM card reader, so there's no need for an external SIM housing.

The [Telit GM862-PCS](#) has an enhanced internal built-in SIM card reader that allows also hot removal of the SIM sensing, therefore the SIM can be extracted and reinserted while the module is still on, so there's no need for an external SIM housing.

NOTE: On the [Telit GM862-PCS](#) the hot removal of the SIM sensing is not supported during power saving mode (+CFUN: 5).

2.11.3 SMS

The [Telit GM862-GPRS module](#) supports the following SMS types:

Mobile Terminated (MT) class 0 – 2 with signalling of new incoming SMS, SIM full, SMS read

Mobile Originated class 0 – 3 with writing, memorise in SIM and sending

Cell Broadcast compatible with CB DRX with signalling of new incoming SMS.

2.11.4 Real Time Clock and Alarm

The [Telit GM862-GPRS module](#) supports the Real Time Clock and Alarm functions through AT commands, furthermore an alarm output pin (GPIO6) can be configured to indicate the alarm with a hardware line output.

2.11.5 Data/fax transmission

The [Telit GM862-GPRS module](#) supports:

- Packed Data transfer GPRS Class B, Multislot Class 8. (only for the [Telit GM862-GPRS module](#))

- Packed Data transfer GPRS Class B, Multislot Class 10. (only for the [Telit GM862-PCS module](#))
- Data transmission according to the GSM 07.07, 07.05
- CSD up to 14.4 Kbps
- Fax service, Class 1 Group 3
- Fax service, Class 2 Group 3 (future SW release)

2.11.6 Local security management

With lock of Subscriber Identity module (SIM), and security code request at power-up.

2.11.7 Call control

Call cost control function.

2.11.8 Phonebook

Function available to store the telephone numbers in SIM memory.

Capability depends on SIM version/memory

2.11.9 Characters management

Availability of lowercase, uppercase and IRA characters. (international reference alphabet)

In SMS PDU mode all character set are supported.

2.11.10 SIM related functions

Activation/deactivation of the numbers stored in phone book FDN, ADN and PINs. Extension at the PIN2 for the PUK2 insertion capability for lock condition.

2.11.11 Call status indication

By AT commands.

2.11.12 Indication of network service availability

By AT commands and LED indication on dedicated output.

The STAT_LED is an Open Collector output where it is possible to directly connect a LED to show information on the network service availability and Call status.

STAT_LED indications

| LED status | Device Status |
|--|---|
| permanently off | device off |
| fast blinking (period 1s, Ton 0,5s) | Net search / Not registered / turning off |
| slow blinking (period 3s, Ton 0,3s) | Registered full service |
| permanently on | a call is active |

2.11.13 Automatic answer (Voice, Data or FAX)

After n (depends of settings) rings automatically answers with beep (see S0 param).

2.11.14 Supplementary services (SS)

- Call Barring,
- Call Forwarding,
- Calling Line Identification Presentation (CLIP),
- Calling Line Identification Restriction (CLIR),
- Call Waiting, other party call Waiting Indication,
- Call Hold, other party Hold / Retrieved Indication,
- Closed User Group supplementary service (CUG),
- Advice of Charge,
- Unstructured SS Mobile Originated (MO)

2.11.15 Acoustic signaling

The acoustic signalling of [Telit GM862-GPRS module](#) on the selected acoustic device are the following:

- Call waiting;
- Ringing tone;
- SMS received tone;
- Busy tone;
- Power on/off tone;
- Off Hook dial tone;
- Congestion tone;
- Connected tone;
- Call dropped;
- No service tone;
- Alarm tone.

2.11.16 DTMF tones

DTMF tones managed by specific AT commands.

These tones are generated with AT commands only during voice calls.

The minimum duration of a DTMF tone is 100 ms.

| Group low | Group high | | |
|-----------|------------|---------|---------|
| | 1209 Hz | 1336 Hz | 1477 Hz |
| 697 Hz | 1 | 2 | 3 |
| 770 Hz | 4 | 5 | 6 |
| 852 Hz | 7 | 8 | 9 |
| 941 Hz | * | 0 | # |

2.11.17 Buzzer output

The General Purpose I/O pin GPIO7 can be configured to output the BUZZER output signal, with only an external Mosfet/transistor and a diode a Buzzer can be directly driven.

The ringing tone and the other signaling tones can be redirected to this Buzzer output with a specific AT command.

2.12 EMC

Compliant to & ETS 300–342–1 and all applicable GSM Specifications.

Compliant to Directive 1999/05/CE.

2.13 Logic level specifications

Where not specifically stated, all the interface circuits work at 2.8V CMOS logic levels.

The following table shows the logic level specifications used in the [Telit GM862-GPRS module](#) interface circuits:

Absolute Maximum Ratings -Not Functional

| Parameter | Min | Max |
|--|-------|--------|
| Input level on any digital pin when on | -0.3V | +3.75V |
| Input voltage on analog pins when on | -0.3V | +3.0 V |

Operating Range - Interface levels (2.8V CMOS)

| Level | Min | Max |
|-------------------|------|-------|
| Input high level | 2.1V | 3.3V |
| Input low level | 0V | 0.5V |
| Output high level | 2.2V | 3.0V |
| Output low level | 0V | 0.35V |

For 2,0V signals:

Operating Range - Interface levels (2.0V CMOS)

| Level | Min | Max |
|-------------------|-------|-------|
| Input high level | 1.6V | 3.3V |
| Input low level | 0V | 0.4V |
| Output high level | 1,65V | 2.2V |
| Output low level | 0V | 0.35V |

2.13.1 Reset signal

| Signal | Function | I/O | Pin |
|--------|-------------|-----|----------------------|
| RESET | Phone reset | I/O | 23 (connector SO301) |

RESET is used to reset the [Telit GM862-GPRS module](#). Whenever this signal is pulled low, the GM862-GPRS is reset. When the device is reset it stops any operation and after the release of the reset it shuts down, without doing any detach operation from the network where it is registered to. This behavior is not a proper shut down because any GSM device is requested to issue a detach request on turn off. For this reason the Reset signal must not be used to normally shutting down the device, but only as an emergency exit in the rare case the device remains stucked waiting for some network response.

The RESET is internally controlled on start-up to achieve always a proper power-on reset sequence, so there's no need to control this pin on start-up. It may only be used to reset a device already on that is not responding to any command.

NOTE: do not use this signal to power off the [Telit GM862-GPRS module](#). Use the ON/OFF signal (Pin 17 of SO301) to perform this function or the AT#SHDN command.

Reset Signal Operating levels:

| Signal | Min | Max |
|------------------|-------|------|
| RESET Input high | 2.2V* | 3.3V |
| RESET Input low | 0V | 0.2V |

* this signal is internally pulled up so the pin can be left floating if not used.

If unused, this signal may be left unconnected. If used, then it **must always be connected with an open collector transistor**, to permit to the internal circuitry the power on reset and undervoltage lockout functions.

2.14 Audio levels specifications

The audio of the [Telit GM862-GPRS, module](#) is organised into two main paths:

- internal path (called also MT)
- external path (called also HF)

These two paths are meant respectively for handset and headset/handsfree use.

The [Telit GM862-GPRS module](#) has a built in echo canceller and a noise suppressor, tuned separately for the two audio paths; for the internal path the echo canceller parameters are suited to cancel the echo generated by a handset, while for the external audio path they are suited for a handsfree use.

For more information on the audio refer to the Hardware User Guide.

The following table reports all the audio level specifications.

Microphone characteristics

| | Internal audio mic. input | External audio mic. input |
|---|---|---|
| Line coupling | AC (100nF cond.) | AC (100nF cond.) |
| Line type | Balanced | Balanced |
| Differential input resistance | 25k Ω | 25k Ω |
| Line nominal sensitivity | 50mV _{rms} | 3mV _{rms} |
| Max input voltage | 360mV _{rms} | 22mV _{rms} |
| Microphone nominal sensitivity - Analog Gain suggested | -45dB _{V_{rms}/Pa} / +24dB | -45dB _{V_{rms}/Pa} / +10dB |
| Echo canceller type | handset | Car kit hands free |

Speaker characteristics


| | Internal audio ear. output | External audio ear. output |
|-----------------------------|--------------------------------|--------------------------------|
| Line coupling | DC | DC |
| Line type | Bridged | Bridged |
| Speaker impedance | $\geq 16\Omega \pm 5\%$ @ 1kHz | $\geq 16\Omega \pm 5\%$ @ 1kHz |
| Minimum load impedance | 15 Ω | 15 Ω |
| Signal bandwidth | 150-8000 Hz @ -3dB | 150-8000 Hz @ -3dB |
| Maximum output | 1700mV _{rms} | 850mV _{rms} |
| Maximum power output | 30mW | 7.5mW |
| Volume level steps (SW) | -2dB | -2dB |
| Number of volume steps (SW) | 10 | 10 |

2.15 Interface connectors on GM862-GPRS






The **Telit GM862-GPRS module** has two interface connectors and a SIM Card reader:

- 1) **SO601: Antenna connector** (see 2.7.1, Antenna connector)
- 2) **SO301: Interface connector**
- 3) **SO402: SIM Card Reader**

The GM862-GPRS transceiver module interface connector SO301 is a CSTP 50 pin vertical SMD Molex 52991-0508 (male). Its pin-out (down view) is:

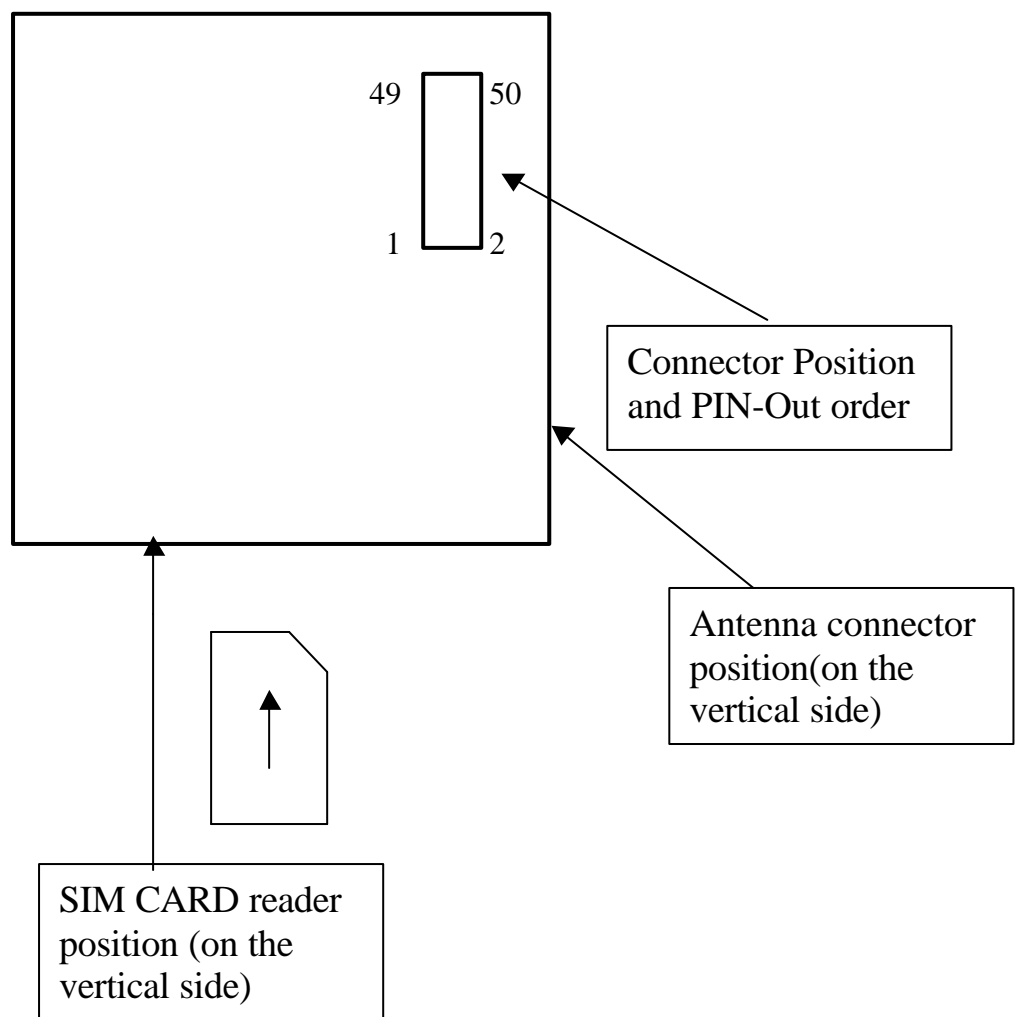

Molex 52991-0508 (male) GM862-GPRS Connector LAY-OUT

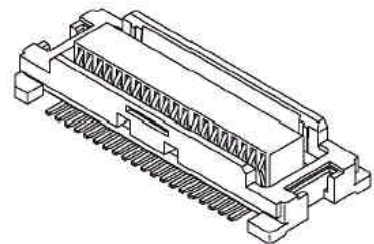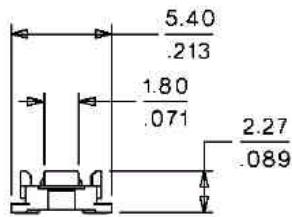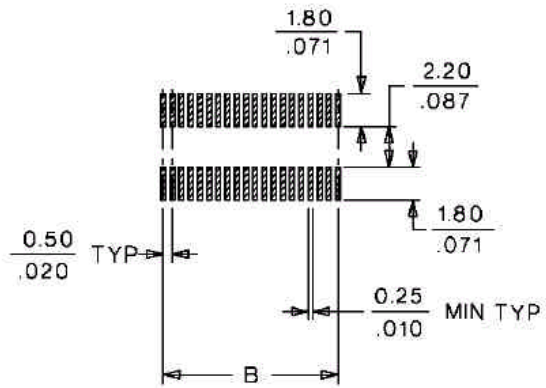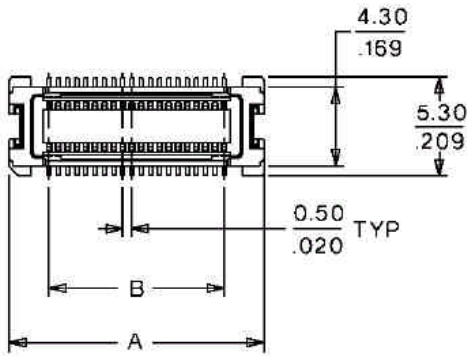

| Molex 52991-0508 (male) GM862-GPRS Connector PIN-OUT | | | | | |
|---|----------------------------|------------|---|-------------------------|----------------|
| Pin | Signal | I/O | Function | Internal Pull up | Type |
| 1 | VBATT | - | Main power supply | | Power |
| 2 | GND | - | Ground | | Power |
| 3 | VBATT | - | Main power supply | | Power |
| 4 | GND | - | Ground | | Power |
| 5 | VBATT | - | Main power supply | | Power |
| 6 | GND | - | Ground | | Power |
| 7 | VBATT | - | Main power supply | | Power |
| 8 | CHARGE | AI | Charger input (5) | | Power |
| 9 | EAR_HF+ | AO | Handsfree ear output, phase + | | Audio |
| 10 | EAR_MT- | AO | Handset earphone signal output, phase - | | Audio |
| 11 | EAR_HF- | AO | Handsfree ear output, phase - | | Audio |
| 12 | EAR_MT+ | AO | Handset earphone signal output, phase + | | Audio |
| 13 | MIC_HF- | AI | Handsfree microphone input; phase -, nominal level 3mVrms | | Audio |
| 14 | MIC_MT+ | AI | Handset microphone signal input; phase+, nominal level 50mVrms | | Audio |
| 15 | MIC_HF+ | AI | Handsfree microphone input; phase +, nominal level 3mVrms | | Audio |
| 16 | MIC_MT- | AI | Handset microphone signal input; phase-, nominal level 50mVrms | | Audio |
| 17 | ON/OFF | I | Input command for switching power ON or OFF (toggle command). The pulse to be sent to the GM862 must be equal or greater than 1 second. | 10K Ω | CMOS 2.8V |
| 18 | AXE | I | Handsfree switching | 47K Ω | 2.0V signal |
| 19 | SIMIO | I/O | External SIM signal - Data I/O | | 3V ONLY |
| 20 | C103/TXD | I | Serial data input (TXD) from DTE | | CMOS 2.8V |
| 21 | PWRCTL/ CAM_SYNC | O | Module Status ON indication (Signal output for power on/off control of external devices) / Camera Interface on -PCS (4) | 220 Ω | CMOS 2.8V |
| 22 | SIMVCC | - | External SIM signal – Power (3) | | 3V ONLY |
| 23 | RESET | I | Reset input | 2K Ω | see par.2.13.1 |
| 24 | SIMRST | O | External SIM signal – Reset | | 3V ONLY |

| | | | | | |
|----|------------------------|-----|---|------|-----------------|
| 25 | TEST32kHz/ MON1_CAM | | For test purpose (1) / Camera Interface on -PCS (4) | | CMOS 2.8V |
| 26 | SIMCLK | O | External SIM signal – Clock | | 3V ONLY |
| 27 | CCIN | I/O | External SIM signal - Presence (active low) | 47KW | CMOS 2.8V |
| 28 | GPIO2 | O | General purpose output (Open Collector) / Camera Interface on -PCS (4) | | Open Collector |
| 29 | C106/CTS | O | Output for Clear to send signal (CTS) to DTE | | CMOS 2.8V |
| 30 | C125/RING | O | Output for Ring indicator signal (RI) to DTE | | CMOS 2.8V |
| 31 | GPIO1 | I | General purpose input | | transistor base |
| 32 | CLKSXM / PD[0] | | DAI - For test purpose (1) / Camera Interface on -PCS (4) | | CMOS 2.8V |
| 33 | C107/DSR | O | Output for Data set ready signal (DSR) to DTE | | CMOS 2.8V |
| 34 | TXDD / PD[1] | | DAI - For test purpose (1) / Camera Interface on -PCS (4) | | CMOS 2.8V |
| 35 | EMMI TX | O | TX Data for debug monitor (1) | | CMOS 2.8V |
| 36 | C109/DCD | O | Output for Data carrier detect signal (DCD) to DTE | | CMOS 2.8V |
| 37 | C104/RXD | O | Serial data output to DTE | | CMOS 2.8V |
| 38 | SCLK / PD[2] | | DAI - For test purpose (1) / Camera Interface on -PCS (4) | | CMOS 2.8V |
| 39 | STAT_LED | O | Status indicator led | | Open Collector |
| 40 | RXDD / PD[3] | | DAI - For test purpose (1) / Camera Interface on -PCS (4) | | CMOS 2.8V |
| 41 | EMMI RX | | RX Data for debug monitor (1) | | CMOS 2.8V |
| 42 | RFSD / PD[4] | | DAI - For test purpose (1) / Camera Interface on -PCS (4) | | CMOS 2.8V |
| 43 | C108/DTR | I | Input for Data terminal ready signal (DTR) from DTE (4) | | CMOS 2.8V |
| 44 | TFSD / PD[5] | | DAI - For test purpose (1) / Camera Interface on -PCS (4) | | CMOS 2.8V |
| 45 | C105/RTS | I | Input for Request to send signal (RTS) from DTE | | CMOS 2.8V |
| 46 | GPIO3 / PD[6] | I/O | Configurable general purpose I/O pin / Camera Interface on -PCS (4) | | CMOS 2.8V |
| 47 | GPIO4 / | I/O | Configurable general purpose I/O pin / | | CMOS 2.8V |

| | | | | | |
|----|-------------------------------------|-----|--|--|-----------|
| | IICSDA | | Camera Interface on -PCS (4) | | |
| 48 | GPIO5 / CAM_DRDY | I/O | Configurable general purpose I/O pin / Camera Interface on -PCS (4) | | CMOS 2.8V |
| 49 | GPIO6 /ALARM / PD[7] | I/O | GP I/O pin or ALARM output pin / Camera Interface on -PCS (4) | | CMOS 2.8V |
| 50 | GPIO7 /BUZZER /CAM_PWR _ON | I/O | GP I/O pin or BUZZER output pin / Camera Interface on -PCS (4) | | CMOS 2.8V |

- (1) For the exclusive use of the Technical Support Service
- (2) An earphone with a 150 ohm impedance can be directly connected to EAR+ and EAR-
- (3) On this pin a maximum of 47nF bypass capacitor is allowed.
- (4) When activating the Easy camera these pins will not be available for other use (Camera interface available only on GM862-PCS)
- (5) charger is available only on GM862-PCS. For the other products the pin is GND

2.16 Mounting the GM862-GPRS on your Board

In order to electrically connect your board to the [Telit GM862-GPRS module](#), use a **CSTP 2x25 pin vertical SMD SCH-SCH Molex 53748 - 0504 (female, low profile)** as a counterpart to the **CSTP 50 pin vertical SMD Molex 52991-0508 (male)** of your [Telit GM862-GPRS module](#).

When mounting the [Telit GM862-GPRS module](#) on your board, take care of soldering the GM862-GPRS shielding reeds on a ground plane or signal.


NOTE: be very careful when connecting the [Telit GM862-GPRS module](#) RF connector. The [Telit GM862-GPRS module](#) RF connector can be damaged if not connected with the proper antenna RF connector. The minimum number of insertion cycles is recommended.

2.16.1 Antenna Coaxial cable fixing


The following constraints must be respected in the [Telit GM862-GPRS](#) antenna cable connection:

- The fixing point of the coaxial cable must not be placed too close to the antenna connector of the [GM862-GPRS](#), leaving at least 30mm of flexible cable between the fixed point and the plug end.
- The fixing point must be at the same height of the [GM862-GPRS](#) antenna connector, eventually using a wedge between the PCB and the cable if it is directly fixed to the PCB.
- The flexible cable must never be bent with a radius lower than 25mm (RG174 cable).
- The cable must be a RG174 type or more flexible ones.

The following pictures explain these constraints:

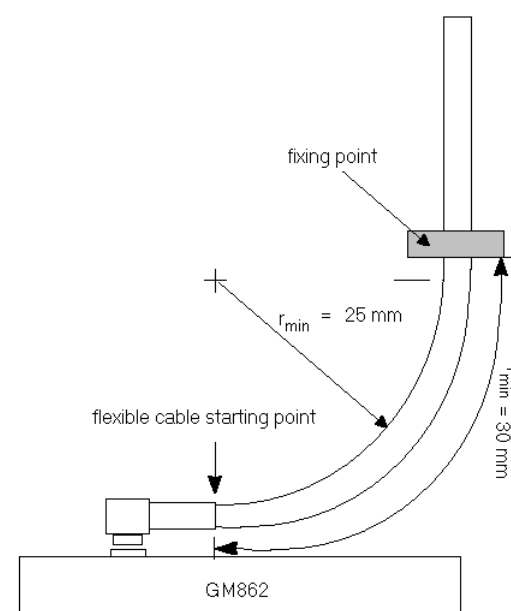

- Angle connector fixing example -

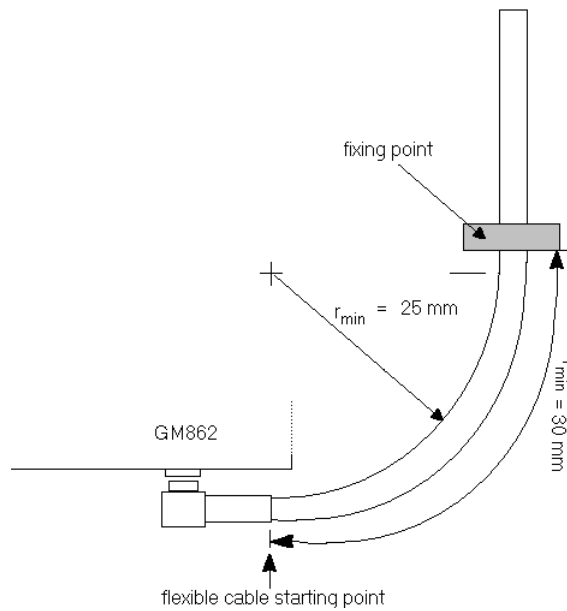

- Angle connector fixing example 2 -

NOTE: in the examples the cable is always bent, this is not a constrain. If the installation does not require it, then the cable can be kept straight, ensuring that the fixing is without sliding.

2.16.2 Precautions


- The plug should be inserted in the connector only after the installation of the [Telit GM862-GPRS module](#) in the board. This is to prevent accidental breaking of the antenna connection during the transport.
- The coaxial cable must be fixed at least in one point, without sliding possibilities.
- The plug insertion/removal must be done axially with the female connector of the GM862-GPRS, keeping lateral strains to a minimum.
- The insertion/crimping pull out force must be less than 15N.

3 Application Board: GM862-S1

In order to use the [Telit GM862-GPRS module](#) as a stand-alone product, it is not anymore required any [Application Board](#) since the new [Telit GM862-GPRS module](#) has the full ETSI Type Approval as a stand-alone product.

The [Telit GM862-GPRS module](#) is fully backward compatible and therefore the upgrade of old projects that were designed using the [Telit S1 Board](#) to interface with the [Telit GM862 module](#) can be made by simply replacing the [Telit GM862 module](#) with the new [Telit GM862-GPRS module](#) in the [Telit S1 Board](#).

Telit GM862-S1

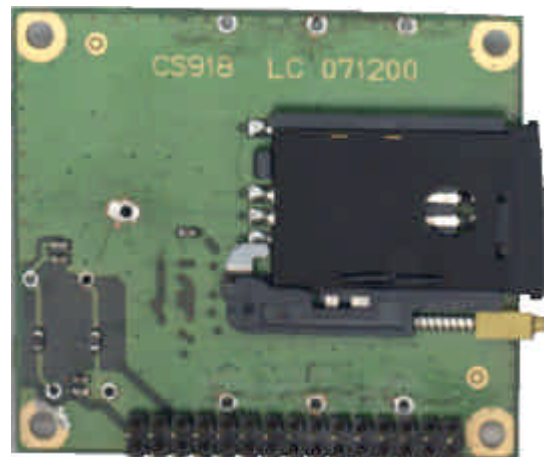

3.1 Application Board Description

For a detailed description of the hardware interfaces, the recommended accessories and the connections to the [Telit GM862-S1](#) please refer to the Telit GM862 Product Description document.

4 Evaluation Kit: GM862/S1 EVK


In order to assist you in the development of your [Telit GM862-GPRS module](#) based application, Telit can supply an [Evaluation Kit](#) that interfaces the [Telit GM862-GPRS module](#) directly and also to the previous [Application Board GM862-S1](#) with appropriate power supply, SIM card housing, RS 232 serial port level translator, direct UART connection, Handset, Headset and Hands-free (car kit) audio, antenna.

The EVK provides a fully functional solution for a complete data/phone application.

The standard serial RS232 9 pin connector placed on the [Evaluation Kit](#) allows the connection of the EVK system with a PC or other DTE.

The development of the applications utilizing the [Telit GM862-GPRS module](#) must present a proper design of all the interfaces towards and from the module (e.g. power supply, audio paths, level translators), otherwise a decrease in the performances will be introduced or, in the worst case, a wrong design can even lead to an operating failure of the module.

In order to assist the hardware designer in his project phase, the EVK board presents a series of different solutions, which will cover the most common design requirements on the market, and which can be easily integrated in the OEM design as building blocks or can be taken as starting points to develop a specific one.

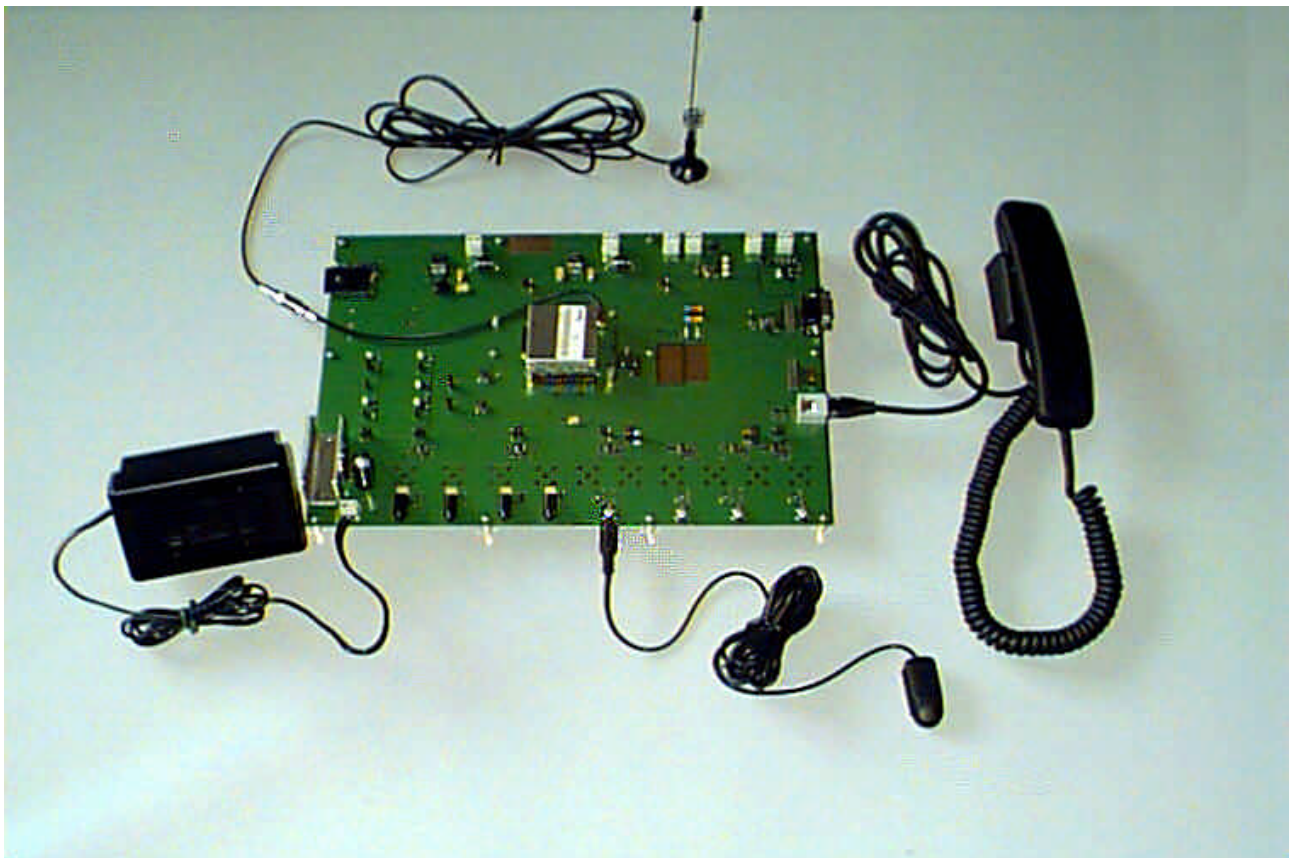


GM862-GPRS Evaluation Kit

4.1 Evaluation Kit description

For a detailed description of the [Telit GM862/S1 Evaluation Kit](#) refer to the documentation provided with the Telit GM862-GPRS Hardware User Guide.

The [Telit GM862/S1 Evaluation Kit](#) can be divided into different blocks depending on the function they implement.

A schematic showing the EVK board and its blocks is shown:

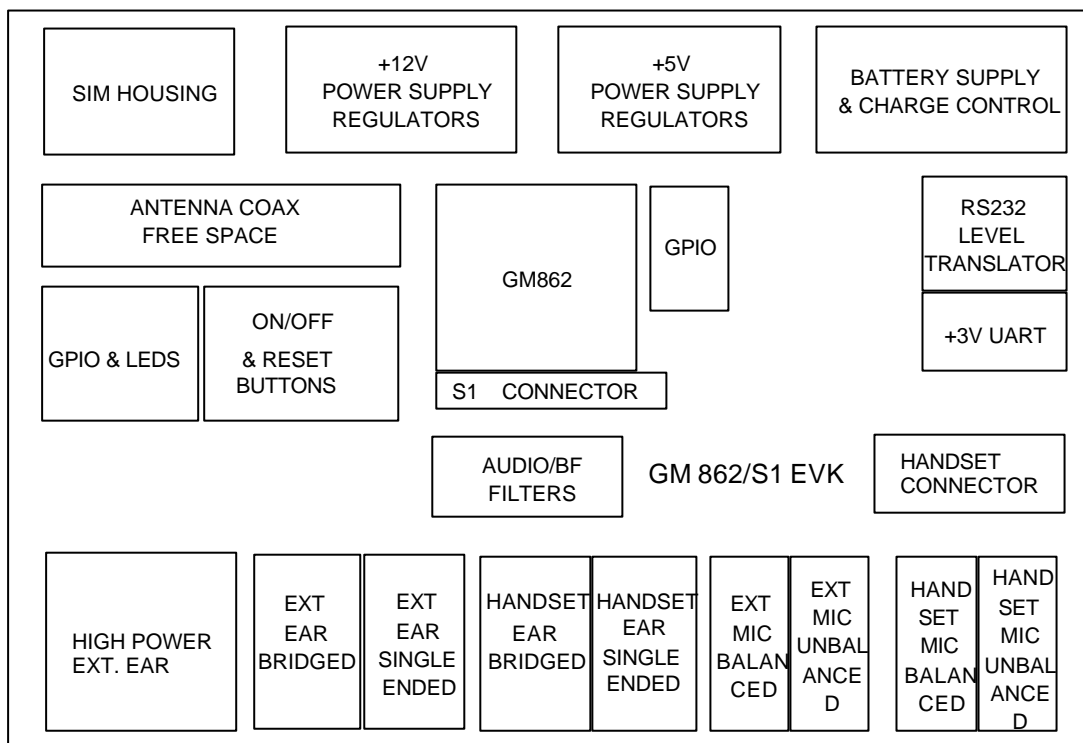

4.1.1 Power Supply

In the Board there are three different power sources, that embrace a wide range of applications, from the automotive +12V input to the stand alone battery powered device.

The power sources nominal input voltages are:

- +12V input (typically automotive)
- +5V input (typically embedded systems)
- +3.8V input (Li-Ion Battery)

Each one of these power sources can supply both the [Telit GM862-GPRS module](#) and the whole circuitry embodied in the [Evaluation Kit](#).

Only one of these power sources can be used at a time and it is selectable with two jumpers.

For the battery power supply a Li-Ion battery charger circuit is provided.

4.1.2 Serial interface

The communications between your application and the [Telit GM862-GPRS module](#) must be done through a serial interface which can be a standard CMOS UART or a RS232 port.

All levels of the RS232 port are conform to RS232 and V.24 standard and a PC serial port can be directly connected to this connector.

Both these interfaces are supported.

4.1.3 Audio

The [Evaluation Kit board](#) provides two software/hardware selectable audio paths, the internal and the external one. All the handset, headset and hands free-car kit functions are supported.

Furthermore for each audio path two solution are presented: single ended and balanced.


4.1.4 GPIO and Leds

All the General Purpose Input Output ports of the [Telit GM862-GPRS module](#) are supported in a dedicated connector and several leds are added as a debug aid.

4.1.4.1 [Telit GM862-GPRS module](#) interface connector

The PL401 transceiver interface connector placed on the [Telit GM862/S1 Evaluation Kit](#) is a female CSTP 2x25 pin vertical SMD SCH-SCH Molex 53748 - 0504 (low profile). See pin out on the SO301 connector on [Telit GM862-GPRS module](#).

Molex 53748-0504 (female, low profile) Connector LAY-OUT

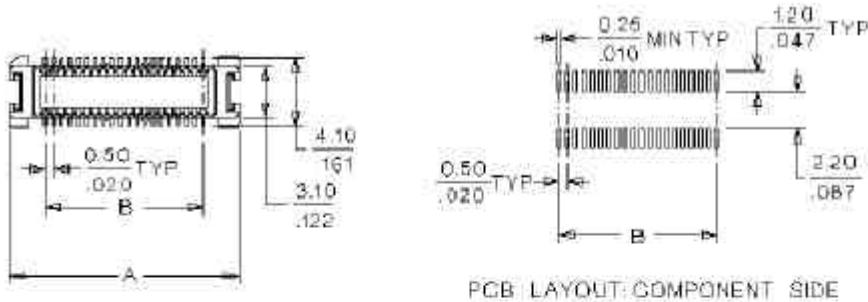

5 Service and firmware update

The serial cable used for the communication with a PC can be also used to update the [Telit GM862-GPRS module](#) firmware. The RS232 connector DB type 9 pin 90° is used to connect the [Telit GM862/S1 Evaluation Kit](#) to any DTE .


All levels are conformed to RS232 and V.24 standard and a PC serial port can be directly connected to this connector.

The firmware update can be done with a specific software tool provided by Telit that runs on windows based PCs.

5.1.1.1 Step-by-Step upgrade procedure

- I. Download the specific software for upgrading (Transfer Flash Image GM862_PCS_xxx.zip).from the site www.gm862.com, or request it at this e-mail address ts-gm862@telit.net

- II. Unzip the file GM862_PCS_xxx.zip. A new exe file will be created.

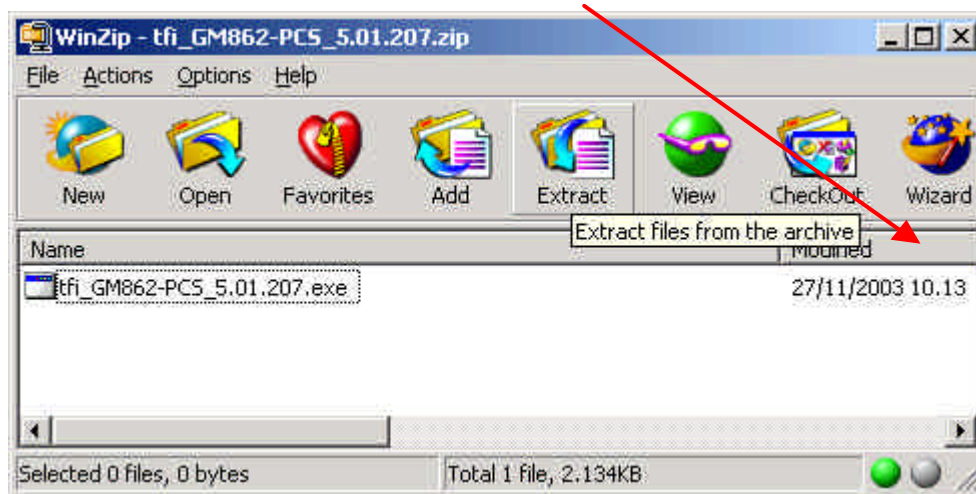


- III. Mount the [Telit GM862-PCS module](#) in the [Evaluation Kit](#) and supply power. Do not turn on the module for now.
- IV. Run the file *TFI_GM862-PCS_xxxx.exe*. The following window should be displayed, Select the language preferred by pressing the correspondent button.




- V. Press OK to the initial message.



- VI. Select the right COM port and speed. Note that to go faster than 115200 you need a special hardware on the PC. Then Press the Download button and within 5 seconds press the ON/OFF button on the board (turn on the module). Keep pressed the ON/OFF button for 5 seconds and then leave it.

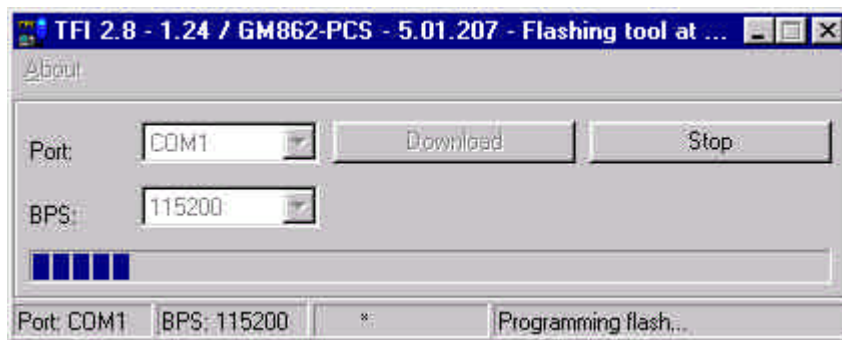

Wait for the end of programming green message OK

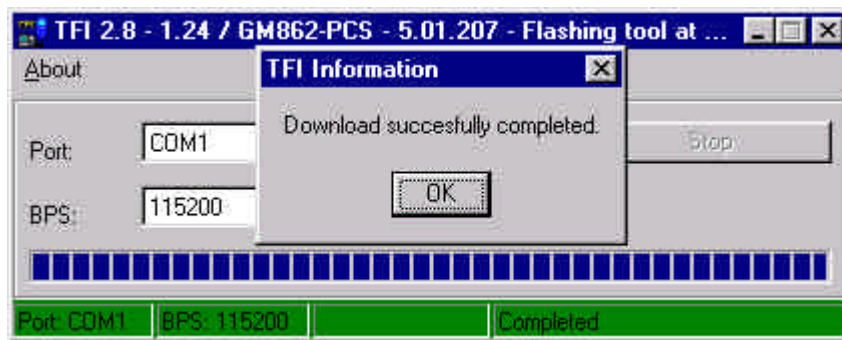

Your **Telit GM862-PCS module** is now programmed with the new firmware.

6 AT Command

The [Telit GM862-GPRS module](#) can be driven via the serial interface using the standard AT commands³. The [Telit GM862-GPRS module](#) is compliant with:

1. Hayes standard AT command set, in order to maintain the compatibility with existing SW programs.
2. ETSI GSM 07.07 specific AT command and GPRS specific commands.
3. ETSI GSM 07.05 specific AT commands for SMS (Short Message Service) and CBS (Cell Broadcast Service)
4. FAX Class 1 compatible commands

Moreover the [Telit GM862-GPRS module](#) supports also Telit proprietary AT commands for special purposes.

In the following the dedicated description of how to use the AT commands with the [Telit GM862-GPRS module](#).

6.1 Definitions

The following syntactical definitions apply:

<CR> Carriage return character, is the command line and result code terminator character, which value, in decimal ASCII between 0 and 255, is specified within parameter S3.

The default value is 13.

<LF> Linefeed character, is the character recognised as line feed character. Its value, in decimal ASCII between 0 and 255, is specified within parameter S4. The default value is 10.

The line feed character is output after carriage return character if verbose result codes are used (V1 option used) otherwise, if numeric format result codes are used (V0 option used) it will not appear in the result codes.

<...> Name enclosed in angle brackets is a syntactical element. They do not appear in the command line.

[...] Optional subparameter of a command or an optional part of TA information response is enclosed in square brackets. Brackets themselves do not appear in the command line. When subparameter is not given in AT commands which have a read command, new value equals to its previous value. In AT commands which do not store the values of any of their subparameters, and so have not a read command, which are called *action type* commands, action should be done on the basis of the recommended default setting of the subparameter.

³ The AT is an ATTENTION command and is used as a prefix to other parameters in a string. The AT command combined with other parameters can be set up in the communications package or typed in manually as a command line instruction.

6.2 AT Command Syntax

GSM commands use syntax rules of *extended* commands.

Every extended command has a *test command* (trailing =?) to test the existence of the command and to give information about the type of its subparameters. There are two types of extended command:

- *Parameter type* commands which also have a *read command* (trailing ?) to check the current values of subparameters.
- *Action type* commands do not store the values of any of their possible subparameters, and therefore do not have a read command.

6.2.1 Command lines

The basic structure of the command lines are:

- ATCMD1<CR> where AT is the command line prefix, CMD1 is a basic command (i.e. it have not + prefix) and CR is the command line terminator character
- ATCMD2=10<CR> where 10 is a subparameter
- AT+CMD1;+CMD2=, ,10<CR> These are two examples of extended commands (which have a + prefix). They are delimited with semicolon. In the second command the subparameter is omitted
- +CMD1?<CR> This is a read command for checking current subparameter values
- +CMD1=?<CR> This is a test command for checking possible subparameter values

These commands might be performed in a single command line as shown below:

```
ATCMD1 CMD2=10+CMD1;+CMD2=, ,10;+CMD1?;+CMD1=?<CR>
```

anyway it is always preferable to separate into different command lines the basic commands (i.e. without + prefix) and the extended commands (the ones with + prefix); furthermore it is suggested to avoid placing several action commands in the same command line, because if one of them fails, then an error message is received but it is not possible to argue which one of them has failed the execution.

If command V1 is enabled (verbose responses codes) and all commands in a command line has been performed successfully, result code <CR><LF>OK<CR><LF> is sent from the TA to the TE, if subparameter values of a command are not accepted by the TA or command itself is invalid, or command cannot be performed for some reason, result code <CR><LF>ERROR<CR><LF> is sent and no subsequent commands in the command line are processed.

If command V0 is enabled (numeric responses codes), and all commands in a command line has been performed successfully, result code 0<CR> is sent from the TA to the TE, if sub-parameter values of a command are not accepted by the TA or command itself is invalid, or command cannot be performed for some reason, result code 4<CR> and no subsequent commands in the command line are processed.

In case of errors depending on ME operation, ERROR (or 4) response may be replaced by +CME ERROR: <err> or +CMS ERROR: <err>.

6.2.2 Information responses and result codes

The TA response, in case of verbose response format enabled, for the previous examples command line could be as shown below:

```

information response to +CMD1?      <CR><LF>+CMD1:2,1,10<CR><LF>
information response to +CMD1=?     <CR><LF>+CMD1(0-2),(0,1),(0-15)<CR><LF>
final result code                   <CR><LF>OK<CR><LF>
  
```

Moreover there are other two types of result codes:

- *result codes* that inform about progress of TA operation (e.g. connection establishment CONNECT)
- *result codes* that indicate occurrence of an event not directly associated with issuance of a command from TE (e.g. ring indication RING).

Here the basic result codes according to ITU-T V25Ter recommendation

| <i>Result Codes</i> | |
|---------------------|--------------|
| Numeric form | Verbose form |
| 0 | OK |
| 1 | CONNECT |
| 2 | RING |
| 3 | NO CARRIER |
| 4 | ERROR |
| 6 | NO DIALTONE |
| 7 | BUSY |
| 8 | NO ANSWER |

6.2.3 Command Response Timeout

Every command issued to the [Telit GM862-GPRS module](#) returns a result response if response codes are enabled (default). The time needed to process the given command and return the response varies from command to command and may depend also from the network on which the command may interact. As a result every command is provided with a proper timeout time, if this time elapses without any result from the operation, then an ERROR response can be reported as if the operation was not successful and the operation is anyway terminated.

The timeout time is quite short for commands that imply only internal set up commands, but may be very long for command that interact with the network (or even a set of Networks).

The default timeout is 100 ms for all the commands that have no interaction with the network or upper software layers.

In the table below are listed all the commands whose timeout differs from the default 100 ms and their effective timeout is reported:

| Command | Timeout (Seconds) |
|---------|-------------------|
| +CBST | 0.2 |
| +CR | 0.2 |
| +CRC | 0.2 |
| +CRLP | 0.2 |
| +CSCS | 0.2 |
| +CEER | 5 |
| +CGMI | 5 |
| +CGMM | 5 |
| +CGMR | 5 |
| +CGSN | 20 |
| +CIMI | 20 |
| +CNUM | 20 |
| +CREG | 5 |
| +COPS | 180 |
| +CLCK | 180 |
| +CPWD | 180 |
| +CLIP | 180 |
| +CLIR | 180 |
| +CCFC | 180 |
| +CCWA | 20 |
| +CHLD | 20 |
| +CUSD | 180 |
| +CAOC | 20 |
| +CSSN | 20 |
| +CLCC | 20 |
| +CPAS | 5 |
| +CPIN | 20 |
| +CSQ | 5 |
| +CPBS | 5 |
| +CPBR | 20 |
| +CPBF | 20 |
| +CPBW | 20 |
| +CALM | 5 |
| +CRSL | 5 |

| | |
|--------|-----------------------|
| +CLVL | 5 |
| +CMUT | 5 |
| +CACM | 20 |
| +CAMP | 20 |
| +CPUC | 20 |
| +CMEE | 5 |
| +VTS | 20 |
| +GMI | 5 |
| +GMM | 5 |
| +GMR | 5 |
| +GSN | 20 |
| I3 | 5 |
| I4 | 5 |
| I5 | 5 |
| +CSMS | 5 |
| +CPMS | 5 |
| +CMGF | 5 |
| +CSCA | 20 |
| +CSMP | 5 |
| +CSDH | 5 |
| +CSAS | 5 |
| +CRES | 5 |
| +CNMI | 5 |
| +CMGS | 180 / 5 for prompt">" |
| +CMSS | 180 |
| +CMGW | 5 / 5 for prompt">" |
| +CMGD | 5 |
| +CMGR | 5 |
| +CMGL | 5 |
| #CAP | 10 |
| #SRS | 10 |
| #SRP | 10 |
| #STM | 10 |
| #PCT | 10 |
| #SHDN | 10 |
| #QTEMP | 10 |
| #SGPO | 10 |
| #GGPI | 10 |

| | |
|----------|-----|
| #MONI | 10 |
| +CGACT | 180 |
| +CGATT | 180 |
| +CGDATA | 20 |
| +CGDCONT | 20 |
| +CGPADDR | 20 |
| +CGQMIN | 20 |
| +CGQREQ | 20 |

6.2.4 Command issuing timing

The chain Command -> Response shall always be respected and a new command must not be issued before the GM862-GPRS has terminated all the sending of its response result code (whatever it may be).

This applies especially to applications that "sense" the OK text and therefore may send the next command before the complete code <CR><LF>OK<CR><LF> is sent by the GM862-GPRS.

It is advisable anyway to wait for at least 20ms between the end of the reception of the response and the issue of the next AT command.

If the response codes are disabled and therefore the module does not report any response to the command, then at least the 20ms pause time shall be respected.

During command mode, due to hardware limitations, under severe CPU load the serial port can lose some characters if placed in autobauding at high speeds. Therefore if you encounter this problem fix the baud rate with AT+IPR command.

6.2.5 Factory Profile and parameters stored in the profile

The GM862-GPRS stores several command configurations in the internal non volatile memory (see command &W), allowing to remember this status even after power off.

The parameters that are stored in the profile and their are:

```
GSM DATA MODE      : +CBST: 0,0,1
AUTOBAUD            : +IPR: 0
COMMAND ECHO        : E1
RESULT MESSAGES     : Q1
VERBOSE MESSAGES    : V1
EXTENDED MESSAGES   : X1
FLOW CONTROL OPTIONS : &K3
CTS (C106) OPTIONS  : &B2
DSR (C107) OPTIONS  : &S3
DTR (C108) OPTIONS  : &D0
DCD (C109) OPTIONS  : &C1
RI (C125) OPTIONS   : \R1
C108/1 OPERATION    : &D4
POWER SAVING        : +CFUN: 1
DEFAULT PROFILE     : &Y0
S REGISTERS: S0=0;S1=0;S2=43;S3=13;S4=10;S5=8;S7=60;S12=50;S25=5;S38=20
```

6.3 Command Availability Table

The available command, depending on the module are evidenced in the following table:

| COMMAND | PRODUCT | | |
|---------|-----------|------------|-----------|
| | GM862-PCS | GM862-GPRS | GM862-GSM |
| &F | • | • | • |
| Z | • | • | • |
| +FCLASS | • | • | • |
| &Y | • | • | • |
| &W | • | • | • |
| &Z | • | • | • |
| &N | • | • | • |
| +GMI | • | • | • |
| +GMM | • | • | • |
| +GMR | • | • | • |
| +GCAP | • | • | • |
| +GSN | • | • | • |
| &V | • | • | • |
| &V0 | • | • | • |
| &V1 | • | • | • |
| &V2 | • | • | • |
| \V | • | • | • |
| %L | • | • | • |
| %Q | • | • | • |
| E | • | • | • |
| Q | • | • | • |
| V | • | • | • |
| X | • | • | • |
| I | • | • | • |
| &C | • | • | • |
| &D | • | • | • |
| &K | • | • | • |
| &S | • | • | • |
| \R | • | • | • |

| | | | |
|-----------------------------------|---|---|---|
| +IPR | • | • | • |
| +IFC | • | • | • |
| +ILRR | • | • | • |
| +ICF | • | • | • |
| D | • | • | • |
| T | • | • | • |
| P | • | • | • |
| A | • | • | • |
| H | • | • | • |
| O | • | • | • |
| &G | • | • | • |
| &P | • | • | • |
| +MS | • | • | • |
| %E | • | • | • |
| +DS | • | • | • |
| +DR | • | • | • |
| \B | • | • | • |
| \K | • | • | • |
| S0 | • | • | • |
| S1 | • | • | • |
| S2 | • | • | • |
| S3 | • | • | • |
| S4 | • | • | • |
| S5 | • | • | • |
| S7 | • | • | • |
| S10 | • | • | • |
| S12 | • | • | • |
| S25 | • | • | • |
| S30 | • | • | • |
| S38 | • | • | • |
| ETSI GSM 07.07 AT COMMANDS | | | |
| +CGMI | • | • | • |
| +CGMM | • | • | • |
| +CGMR | • | • | • |

| | | | |
|-------|---|---|---|
| +CGSN | • | • | • |
| +CSCS | • | • | • |
| +CIMI | • | • | • |
| +CBST | • | • | • |
| +CRLP | • | • | • |
| +CR | • | • | • |
| +CEER | • | • | • |
| +CRC | • | • | • |
| +CNUM | • | • | • |
| +CREG | • | • | • |
| +COPS | • | • | • |
| +CLCK | • | • | • |
| +CPWD | • | • | • |
| +CLIP | • | • | • |
| +CLIR | • | • | • |
| +CCFC | • | • | • |
| +CCWA | • | • | • |
| +CHLD | • | • | • |
| +CUSD | • | • | • |
| +CAOC | • | • | • |
| +CLCC | • | • | • |
| +CSSN | • | • | • |
| +CCUG | • | • | • |
| +CPAS | • | • | • |
| +CFUN | • | • | • |
| +CPIN | • | • | • |
| +CSQ | • | • | • |
| +CPBS | • | • | • |
| +CPBR | • | • | • |
| +CPBF | • | • | • |
| +CPBW | • | • | • |
| +CCLK | • | • | • |
| +CALA | • | • | • |
| +CALM | • | • | • |

| | | | |
|-----------------------------------|---|---|---|
| +CRSL | • | • | • |
| +CLVL | • | • | • |
| +CMUT | • | • | • |
| +CACM | • | • | • |
| +CAMM | • | • | • |
| +CPUC | • | • | • |
| +CMEE | • | • | • |
| +VTS | • | • | • |
| +CGACT | • | • | |
| +CGATT | • | • | |
| +CGDATA | • | • | |
| +CGDCONT | • | • | |
| +CGPADDR | • | • | |
| +CGREG | • | • | |
| +CGQMIN | • | • | |
| +CGQREQ | • | • | |
| +CBC | • | | |
| ETSI GSM 07.05 AT COMMANDS | | | |
| +CSMS | • | • | • |
| +CPMS | • | • | • |
| +CMGF | • | • | • |
| +CSMP | • | • | • |
| +CSDH | • | • | • |
| +CSAS | • | • | • |
| +CRES | • | • | • |
| +CSCB | • | • | • |
| +CSCA | • | • | • |
| +CNMI | • | • | • |
| +CMGL | • | • | • |
| +CMGR | • | • | • |
| +CMGS | • | • | • |
| +CMSS | • | • | • |
| +CMGW | • | • | • |
| +CMGD | • | • | • |

| CUSTOM AT COMMANDS | | | |
|-------------------------|---|---|---|
| #CAP | • | • | • |
| #SRS | • | • | • |
| #SRP | • | • | • |
| #STM | • | • | • |
| #PCT | • | • | • |
| #SHDN | • | • | • |
| #WAKE | • | • | • |
| #QTEMP | • | • | • |
| #SGPO | • | • | • |
| #GGPI | • | • | • |
| #GPIO | • | • | • |
| #MONI | • | • | • |
| #QSS | • | • | • |
| #ACAL | • | • | • |
| #SMOV | • | • | • |
| #SHFEC | • | • | • |
| #HFMICG | • | • | • |
| #HSMICG | • | • | • |
| #SHFSD | • | • | • |
| #/ | • | • | • |
| #BND | • | | |
| FAX CLASS 1 AT COMMANDS | | | |
| +FCLASS | • | • | • |
| +FMI | • | • | • |
| +FMM? | • | • | • |
| +FMR | • | • | • |
| +FTS | • | • | • |
| +FRS | • | • | • |
| +FTM | • | • | • |
| +FRM | • | • | • |
| +FTH | • | • | • |
| +FRH | • | • | • |
| +FLO | • | • | • |

| | | | |
|--|---|---|---|
| +FPR | • | • | • |
| +FDD | • | • | • |
| EASY GPRS EXTENSION AT COMMANDS | | | |
| #USERID | • | • | |
| #PASSW | • | • | |
| #PKTSZ | • | • | |
| #DSTO | • | • | |
| #SKTTO | • | • | |
| #SKTSET | • | • | |
| #SKTOP | • | • | |
| #QDNS | • | • | |
| #SKTSAV | • | • | |
| #SKTRST | • | • | |
| EASY CAMERA EXTENSION AT COMMANDS | | | |
| #CAMON | • | | |
| #CAMOFF | • | | |
| #TPHOTO | • | | |
| #RPHOTO | • | | |
| #CAMQUA | • | | |
| #CMODE | • | | |
| #ESMTP | • | | |
| #EADDR | • | | |
| #EUSER | • | | |
| #EPASSW | • | | |
| #SEMAIL | • | | |

6.4 Hayes Compliant AT Commands

6.4.1 Generic Modem Control

6.4.1.1 &F - restore factory configuration

| &F – restore factory configuration | |
|---|---|
| Execute command | |
| AT&F | Calls the factory configuration, resetting the default profile. |
| Read command | |
| Write command | |
| Test command | |
| Example | |
| Reference | V25ter. |
| SW release | Version A |

6.4.1.2 Z - soft reset

| Z – soft reset | |
|-----------------------|--|
| Execute command | |
| ATZ <n> | Send a software reset to device, loading on the configuration the specified default profile. Parameter: <n > = 0...1 - profile Note: Must be the last command on the line. |
| Read command | |
| Write command | |
| Test command | |
| Example | |
| Reference | V25ter. |
| SW release | Version A |

6.4.1.3 +FCLASS - select active service class

| +FCLASS - select active service class | |
|--|---|
| Execute command | |
| Read command AT+FCLASS? | Returns the current configuration value of the parameter <n>. |
| Write command AT+FCLASS= <n> | Set the GM862-GPRS in specified connection mode (data, fax, voice), hence all the calls done after, will be data or voice. Parameter: <n>: 0 = data <n>: 1 = fax class 1 <n>: 8 = voice |
| Test command AT+FCLASS=? | Returns all supported values of the parameters <n>. |
| Example | |
| Reference | GSM 07.07 |
| SW release | Version A |

6.4.1.4 &Y - designate a default reset profile

| &Y – designate a default reset profile | |
|---|---|
| Execute command AT&Y <n> | The GM862-GPRS is able to store 2 complete configurations (see command &W). The command &Y defines which one of the 2 profiles will be the default profile to be loaded on startup. Parameter: <n> = 0...1 - profile Note: Differently from ATZ<n> command which simply loads the desired profile , with the command AT&Y the chosen profile becomes the one which will be loaded on every startup. |
| Read command | |
| Write command | |
| Test command | |
| Example | |
| Reference | |
| SW release | Version A |

6.4.1.5 &W - store current configuration

| &W – store current configuration | |
|--|---|
| Execute command AT&W <n> | Stores on profile n the complete configuration of the device. Parameter: <n> = 0...1 - profile |
| Read command | |
| Write command | |
| Test command | |
| Example | |
| Reference | |
| SW release | Version A |

6.4.1.6 &Z - store telephone number in the **Telit GM862-GPRS module internal phonebook**

| &Z – store telephone number in the GM862-GPRS internal phonebook | |
|---|--|
| Execute command AT&Z <n> = <nr> | The GM862-GPRS has a built in non volatile memory in which telephone numbers of a maximum 24 digits can be stored. The command AT&Z <n> = <nr> stores in the record n the telephone number nr. The records cannot be overwritten, they must be cleared before rewriting. Parameter: <n>: phonebook record <nr>: telephone number Note1: To delete the record <n> the command AT&Z<n>= must be issued. Note2: The records in the GM862-GPRS memory can be viewed with the command AT&N, while the telephone number stored in the record n can be dialled by giving the command ATDS=<n>. |
| Read command | |
| Write command | |
| Test command | |
| Example | |
| Reference | |
| SW release | Version A |

6.4.1.7 &N - display internal phonebook stored numbers

| &N – display internal phonebook stored numbers | |
|---|---|
| Execute command AT&N <n> | Returns the telephone number stored in the internal memory at the record number <n>. Parameter: <n> - phonebook record Note: if parameter <n> is omitted then all the internal records are shown. |
| Read command | |
| Write command | |
| Test command | |
| Example | |
| Reference | |
| SW release | Version A |

6.4.1.8 +GMI - request manufacturer identification

| +GMI – request manufacturer identification | |
|---|--|
| Execute command AT+GMI | Returns the manufacturer identification. |
| Read command | |
| Write command | |
| Test command | |
| Example | |
| Reference | V.25ter |
| SW release | Version A |

6.4.1.9 +GMM - request model identification

| +GMM – request model identification | |
|--|-----------------------------------|
| Execute command AT+GMM | Returns the model identification. |
| Read command | |
| Write command | |
| Test command | |
| Example | |
| Reference | V.25ter |
| SW release | Version A |

6.4.1.10 +GMR - request revision identification

| +GMR – request revision identification | |
|---|---|
| Execute command AT+GMR | Returns the software revision identification. |
| Read command | |
| Write command | |
| Test command | |
| Example | |
| Reference | V.25ter |
| SW release | Version A |

6.4.1.11 +GCAP - request capabilities list

| +GCAP – request capabilities list | |
|--|---|
| Execute command AT+GCAP | Returns the equipment supported command set list. |
| Read command | |
| Write command | |
| Test command | |
| Example | |
| Reference | V.25ter |
| SW release | Version A |

6.4.1.12 +GSN - request serial number

| +GSN – request serial number | |
|-------------------------------------|---|
| Execute command AT+GSN | Returns the device board serial number. Note: The number returned is not the IMSI, it is only the board number |
| Read command | |
| Write command | |
| Test command | |
| Example | |
| Reference | V.25ter |
| SW release | Version A |

6.4.1.13 &V - display current configuration & profile

| &V – display current configuration & profile | |
|---|--|
| Execute command AT&V | Returns all the configuration parameters settings. |
| Read command | |
| Write command | |
| Test command | |
| Example | <p>AT&V</p> <p>DTE SPEED : 19200</p> <p>DTE FORMAT : 8N1</p> <p>CELLULAR PHONE : GSM TELIT: Operative</p> <p>GSM DATA MODE : \N4=Not Trasparent</p> <p>AUTOBAUD : +IPR0=YES</p> <p>COMMAND ECHO : E1=YES</p> <p>RESULT MESSAGES : Q0=YES</p> <p>VERBOSE MESSAGES : V1=YES</p> <p>EXTENDED MESSAGES : X1=YES</p> <p>ECM TYPE MESSAGES : \V0=NO</p> <p>LINE SPEED : F8=9600</p> <p>CONSTANT DTE SPEED : \J0=YES</p> <p>FLOW CONTROL OPTIONS : &K3=HW bidirect.</p> <p>ERROR CORRECTION MODE : \N4=RLP</p> <p>CTS (C106) OPTIONS : &B2=OFF while disc.</p> <p>DSR (C107) OPTIONS : &S3=PHONE ready->ON</p> <p>DTR (C108) OPTIONS : &D0=ignored</p> <p>DCD (C109) OPTIONS : &C1=follows carrier</p> <p>RI (C125) OPTIONS : \R1=OFF dur. off-hk</p> <p>C108/1 OPERATION : &D4=NO</p> <p>POWER SAVING ON DTR : +CFUN:1=NO</p> <p>CALL ABORT : YES</p> <p>DEFAULT PROFILE : &Y0=user profile 1</p> <p>OK</p> |
| Reference | V25ter |
| SW release | Version A |

6.4.1.14 &V0 - display current configuration & profile

| &V0 – display current configuration & profile | |
|--|--|
| Execute command AT&V0 | Returns all the configuration parameters settings. Note: this command is the same as &V, it is included only for backwards compatibility. |
| Read command | |
| Write command | |
| Test command | |
| Example | |
| Reference | |
| SW release | Version A |

6.4.1.15 &V1 - display S registers values

| &V1 – display S registers values | |
|---|--|
| Execute command AT&V1 | Returns the value of the S registers in decimal and hexadecimal value in the format: REG DEC HEX <reg> <dec> <hex> where <reg> - S register number (0 .. 52) <dec> - current value in decimal notation <hex> - current value in hexadecimal notation |
| Read command | |
| Write command | |
| Test command | |
| Example | |
| Reference | |
| SW release | Version A |

6.4.1.16 &V2 - display last connection statistics

| &V2 – display last connection statistics | |
|---|---|
| Execute command AT&V2 | Returns the last connection statistics & connection failure reason. |
| Read command | |
| Write command | |
| Test command | |
| Example | |
| Reference | |
| SW release | Version A |

6.4.1.17 \V - single line connect message

| \V – Single line connect message | |
|--|---|
| Execute command AT\V <n> | Set single line connect message. Parameter: <n> = 0 - off <n> = 1 on |
| Read command | |
| Write command | |
| Test command | |
| Example | |
| Reference | |
| SW release | Version A |

6.4.1.18 %L - report line signal level

| %L – report line signal level | |
|--------------------------------|---|
| Execute command AT%L | Reports the line signal level. Note: Since on mobile phone there's no line connection, command is included only for compatibility and returns only OK. To check signal strength (level) use the +CSQ command. |
| Read command | |
| Write command | |
| Test command | |
| Example | |
| Reference | |
| SW release | Version A |

6.4.1.19 %Q - report line quality

| %Q – report line quality | |
|--------------------------------|---|
| Execute command AT%Q | Reports the line quality indicator. Note: Since on mobile phone there's no line connection, command is included only for compatibility and returns only OK. To check signal quality use the +CSQ command. |
| Read command | |
| Write command | |
| Test command | |
| Example | |
| Reference | |
| SW release | Version A |

6.4.2 DTE - modem interface control

6.4.2.1 E - command echo

| E – command echo | |
|---------------------------------------|--|
| Execute command | |
| Read command | |
| Write command ATE <n> | Controls the command echo response of the device, enabling or disabling the echo. Parameter: <n> = 0 - disables command echo, hence after this command the only characters received by DTE are the responses to commands sent to device. <n> = 1 - enables command echo (default) , hence command sent to the device are echoed back to the DTE before the response is given. |
| Test command | |
| Example | |
| Reference | V25ter |
| SW release | Version A |

6.4.2.2 Q - quiet result codes

| Q – quiet result codes | |
|---------------------------------------|--|
| Execute command | |
| Read command | |
| Write command ATQ <n> | Enables or disables the result codes. Parameter: <n> = 0 - enables result codes <n> = 1 - disables result codes Note: After disabling result codes with ATQ1, the device does not return a response to commands (usually OK), but command are executed anyway. |
| Test command | |
| Example | |
| Reference | V25ter |
| SW release | Version A |

6.4.2.3 V- result code form

| V – result code form | |
|---------------------------------------|---|
| Execute command | |
| Read command | |
| Write command ATV <n> | Sets the result code format. Parameter: <n> = 0 set the short format (terse) return codes are numbers 0-9. <n> = 1 set the long form (verbose) return codes. Note: Line feed is not issued before a short format result code. |
| Test command | |
| Example | |
| Reference | V25ter |
| SW release | Version A |

6.4.2.4 X - extended result codes

| X – extended result codes | |
|---------------------------------------|---|
| Execute command | |
| Read command | |
| Write command ATX <n> | Selects the result code messages subset used by the modem to inform the DTE of the result of the commands. Parameter: <n> = 0 - send only OK, CONNECT, RING, NO CARRIER, ERROR, NO ANSWER results. Busy tones reporting is disabled. <n> = 1,2,3,4 - reports all messages (default). |
| Test command | |
| Note | For complete control on CONNECT response message see also +DR command. |
| Reference | V25ter |
| SW release | Version A |

6.4.2.5 I - Request identifier and software checksum

| I – request identifier and software checksum | |
|---|--|
| Execute command | |
| Read command | |
| Write command ATI <n> | Returns the identifier and a software checksum. Parameter: <n> = 0 numerical identifier. <n> = 1 GM862-GPRS checksum <n> = 2 checksum check result <n> = 3 manufacturer, software product code <n> = 4 product name <n> = 5 DOB version |
| Test command | |
| Example | |
| Reference | V25ter |
| SW release | Version A |

6.4.2.6 &C - data carrier detect (DCD) control

| &C – Data carrier detect (DCD) control | |
|---|--|
| Execute command | |
| Read command | |
| Write command AT&C <n> | Controls the RS232 DCD output behaviour. Parameter: <n> = 0 DCD remains high always. <n> = 1 DCD follows the Carrier detect status: if carrier is detected DCD is high, otherwise DCD is low. (default) |
| Test command | |
| Example | |
| Reference | V25ter |
| SW release | Version A |

6.4.2.7 &D - data terminal ready (DTR) control

| &D – data terminal ready (DTR) control | |
|---|---|
| Execute command | |
| Read command | |
| Write command AT&D <n> | <p>Controls the GM862-GPRS behaviour to the RS232 DTR transitions.</p> <p>Parameter:</p> <p><n> = 0 DTR transitions are ignored.</p> <p><n> = 1 when the GM862-GPRS is connected, the high to low transition of DTR pin sets the device in command mode, the current connection is NOT closed.</p> <p><n> = 2 when the GM862-GPRS is connected , the high to low transition of DTR pin sets the device in command mode and the current connection is closed.</p> <p>Note: if AT&D2 command is issued, the device does not answer to incoming calls if DTR is low, even if ATA command is given.</p> |
| Test command | |
| Example | |
| Reference | V25ter |
| SW release | Version A |

6.4.2.8 &K - flow control

| &K – flow control | |
|--|--|
| Execute command | |
| Read command | |
| Write command AT&K <n> | <p>Controls the RS232 flow control behaviour.</p> <p>Parameter.</p> <p><n> = 0 - disabled</p> <p><n> = 1 - only CTS active, Hardware mono-directional</p> <p><n> = 2 - XON/XOFF software mono direction</p> <p><u><n> = 3 - RTS/CTS active, Hardware bi-directional (default)</u></p> <p><n> = 4 - XON/XOFF, Software bi-directional with filtering</p> <p><n> = 5 - XON/XOFF, Software bi-directional without filtering (Pass Through)</p> <p><n> = 6 - RTS/CTS active, Hardware bi-directional & software XON/XOFF (bi-directional) with filtering</p> |
| Test command | |
| Example | |
| Reference | |
| SW release | Version A |

6.4.2.9 &S - data set ready (DSR) control

| &S – data set ready (DSR) control | |
|--|--|
| Execute command | |
| Read command | |
| Write command AT&S <n> | <p>Controls the RS232 DSR pin behaviour:</p> <ul style="list-style-type: none"> n = 0 - always ON n = 1 - follows the GSM traffic channel indication. n = 2 - ON when connected n = 3 - ON when device is ready to receive commands <p>Note: if option 1 is selected then DSR is tied up when the device receives from the network the GSM traffic channel indication.</p> |
| Test command | |
| Example | |
| Reference | V25ter |
| SW release | Version A |

6.4.2.10 \R - ring (RI) control

| \R – ring (RI) control | |
|--|--|
| Execute command | |
| Read command | |
| Write command AT\R <n> | <p>controls the RING output pin behaviour.</p> <p>Parameter:</p> <p><n> = 0 - RING on during ringing and further connection</p> <p><n> = 1 – RING on during ringing</p> <p><n> = 2 - RING follows the ring signal</p> <p>Note: to check the ring option status use the &V command.</p> |
| Test command | |
| Example | |
| Reference | |
| SW release | Version A |

6.4.2.11 +IPR - fixed DTE interface rate

| +IPR – fixed DTE interface rate | |
|---|--|
| Execute command | |
| Read command AT+IPR? | Returns the current value of +IPR parameter. |
| Write command AT+IPR = <rate> | <p>Specifies the DTE speed at which the device accepts commands during command mode operation, it may be used to fix the DTE-DCE interface speed.</p> <p>Parameter:</p> <p><rate> = 0/300/1200/2400/4800/9600/19200/38400/57600/115200</p> <p>If <rate> is unspecified or set to 0, then automatic speed detection is enabled and also character format (see +ICF) is set to auto-detect.</p> <p>If <rate> is specified and not 0, DTE-DCE speed is fixed at that speed, hence no speed auto-detection (autobauding) is enabled.</p> |
| Test command AT+IPR=? | Returns the supported serial port speed list. |
| Example | |
| Reference | V25ter |
| SW release | Version A |

6.4.2.12 +IFC - DTE - DTA flow control

| +IFC – DTE-DTA flow control | |
|---|--|
| Execute command | |
| Read command AT+IFC? | Returns active flow control settings. |
| Write command AT+IFC = <by_te>, <by_ta> | <p>Response</p> <p>Selects the flow control behavior of the serial port in both directions: from DTE to DTA (<by_ta> option) and from DTA to DTE (<by_te>)</p> <p>Parameter:</p> <p><by_te> - flow control option for the data received by DTE, <by_ta> - flow control option for the data sent by DTA</p> <p><by_te> = 0 - flow control None <by_te> = 1 - XON/XOFF filtered <by_te> = 2 - C105 (RTS) <by_te> = 3 - XON/XOFF not filtered</p> <p><by_ta> = 0 - flow control None <by_ta> = 1 - XON/XOFF <by_ta> = 2 - C106 (CTS)</p> <p>Note: This command is equivalent to &K command.</p> |
| Test command AT+IFC=? | <p>Response</p> <p>Returns all supported values of the parameters <by_te> and <by_ta>.</p> |
| Example | |
| Reference | V25ter |
| SW release | Version A |

6.4.2.13 +ILRR - DTE - modem rate reporting

| +ILRR – DTE-modem rate reporting | |
|---|---|
| Execute command | |
| Read command AT+ILRR? | Returns active setting of port speed rate reporting information. |
| Write command AT+ILRR = <n> | Controls whether or not the +ILRR:<rate> information text is transmitted from the GM862-GPRS to the DTE. Parameter: <n> = 0 - local port speed rate reporting disabled <n> = 1 - local port speed rate reporting enabled Note: this information if enabled is sent upon connection. |
| Test command AT+ILRR=? | Returns all supported values of the parameter <n> |
| Example | |
| Reference | V25ter |
| SW release | Version A |

6.4.2.14 +ICF - DTE - modem character format

| +ICF – DTE-modem character format | |
|--|--|
| Execute command | |
| Read command AT+ICF? | Returns current value of the character format. |
| Write command AT+ICF = <format>[,<parity>] | <p>Defines the asynchronous character format to be used when autobauding is disabled.</p> <p>Parameter: <format> = 0..5, < parity> = 0/1 AT+ICF = 0 - auto detect AT+ICF = 1 - 8N2 AT+ICF = 2,0 - 8O1 AT+ICF = 2,1 - 8E1 AT+ICF = 3 - 8N1 AT+ICF = 5,0 - 7O1 AT+ICF = 5,1 - 7E1</p> <p>Note: the character format is defined as: number of bit per char, parity bit and stop bit; where parity can be None, Odd and Even. E.g. 8E1 means 8 bit per char with the even parity bit and 1 stop bit.</p> |
| Test command AT+ICF=? | Returns all supported values of the parameters <format> and <parity> |
| Example | |
| Reference | V25ter |
| SW release | Version A |

6.4.3 Call Control

6.4.3.1 D - dial

| D – dial | |
|---|---|
| Execute command ATD <number> | Starts a call to the phone number given as parameter. Parameter: <number> - phone number to be dialled Note: The call is a data call or voice call depending on +FCLASS setting. If AT+FCLASS=8 command was issued before calling then the call will be done as a voice call, instead if AT+FCLASS=0 command was issued the call will be a data one. The default value of +FCLASS is 0 hence calls are by default data ones. The numbers accepted are 0-9 and *,#,"A", "B", "C", "D",,"+". For backwards compatibility with landline modems modifiers "T", "P", "R", "," , "W", "!", "@" are accepted but have no effect. |
| ATD <number> ; | Issues a VOICE call to the number given regardless of the current value of the parameter +FCLASS, which remains unaffected. Parameter: <number> - phone number to be dialled. |
| ATD <n> [;] | Issues a call (VOICE if ";" modifier is added to the end of the command) to the number stored in the GM862-GPRS internal phonebook position number <n>. Parameter: <n> - internal phonebook position to be called |
| ATD> <n> [;] | Issues a call (VOICE if ";" modifier is added to the end of the command) to the number stored in the SIM phonebook in the record number <n>. Parameter: <n> - SIM phonebook position to be called |
| ATDL | Issues a call to the last number dialled. |
| ATDS=<nr> | Issues a call to the internally stored number at the position <nr>. (See commands &N and &Z) |
| ATD<n> I [;] | Issues a call [voice if ; is added] overwriting the CLIR setting in order to hide the CLI to the called party for the current call only. |
| ATD<n> i [;] | Issues a call [voice if ; is added] overwriting the CLIR setting in order to show the CLI to the called party for the current call only. |
| ATD<n> G[;] ATD<n>g[;] | Issues a call [voice if ; is added] checking the CUG supplementary service for the current call. Refer to +CCUG command. |
| ATD*<gprs_sc>[*<addr>][* [<L2P>][* [<cid>]]# | This command is specific of GPRS functionality and causes the MT to perform whatever actions are necessary to establish communication between the TE and the external PDN. Parameters: <GPRS_SC> - (GPRS Service Code) a digit string (value 99) which identifies a request to use the GPRS <addr> - string that identifies the called party in the address space applicable to the PDP. |

| D – dial | |
|-----------------|---|
| | <p><L2P>: a string which indicates the layer 2 protocol to be used (see +CGDATA command). For communications software that does not support arbitrary characters in the dial string, the following numeric equivalents shall be used: 1 - PPP Other values are reserved and will result in an ERROR response to the set command.</p> <p><cid>: a digit string which specifies a particular PDP context definition (see +CGDCONT command).</p> |
| Read command | |
| Write command | |
| Test command | |
| Example | |
| Reference | V25ter. |
| SW release | Version A |

6.4.3.2 T - set tone dial

| T – set tone dial | |
|-------------------------------|--|
| Execute command ATT | It has no effect is included only for backward compatibility with landline modems. |
| Read command | |
| Write command | |
| Test command | |
| Example | |
| Reference | V25ter. |
| SW release | Version A |

6.4.3.3 P - set pulse dial

| P – set pulse dial | |
|-------------------------------|--|
| Execute command ATP | It has no effect is included only for backward compatibility with landline modems. |
| Read command | |
| Write command | |
| Test command | |
| Example | |
| Reference | V25ter. |
| SW release | Version A |

6.4.3.4 A - answer

| A – answer | |
|-------------------------------|---|
| Execute command ATA | It is used to answer to an incoming call if automatic answer is disabled. Note: This command MUST be the last in the command line and must be followed immediately by a <CR> character. |
| Read command | |
| Write command | |
| Test command | |
| Example | |
| Reference | V25ter. |
| SW release | Version A |

6.4.3.5 A/ - Last command automatic repetition

| A/ – last command automatic repetition | |
|--|--|
| Execute command A/ | It is used to execute again the last received command. This command works only at fixed IPR. Note: This command has been substituted with AT#/ command. Refer to #/ command reference. |
| Read command | |
| Write command | |
| Test command | |
| Example | |
| Reference | |
| SW release | Version A |

6.4.3.6 H - disconnect

| H - disconnect | |
|-------------------------------|--|
| Execute command ATH | It is used to close the current conversation (voice, data or fax). Note: When a data conversation is active the device is in on-line mode commands are not sensed, instead characters are sent to the other interlocutor. To issue this command you must be in command mode operation, hence escape sequence (see register S2) may be required before issuing this command, otherwise if &D1 option is active, DTR pin should be tied low to return in the command mode. When a voice call is active, no escape sequence is needed. |
| Read command | |
| Write command | |
| Test command | |
| Example | |
| Reference | V25ter. |
| SW release | Version A |

6.4.3.7 O - return to On Line Mode

| O – return to on line mode | |
|-----------------------------------|--|
| Execute command ATO | It is used return to On-line mode from command mode. If there's no connection active returns ERROR. Note: After the issue of this command, if the device is in conversation, to send other commands to the device you must return to command mode by issuing the escape sequence or lowering DTR if &D1 option is active. |
| Read command | |
| Write command | |
| Test command | |
| Example | |
| Reference | V25ter. |
| SW release | Version A |

6.4.3.8 &G - guard tone

| &G – guard tone | |
|------------------------------------|---|
| Execute command AT&G | It is has no effect is included only for backward compatibility with landline modems. |
| Read command | |
| Write command | |
| Test command | |
| Example | |
| Reference | |
| SW release | Version A |

6.4.3.9 &P - pulse dial make/break ratio

| &P – pulse dial make/break ratio | |
|------------------------------------|--|
| Execute command AT&P | It is has no effect is included only for backward compatibility with landline modems.. |
| Read command | |
| Write command | |
| Test command | |
| Example | |
| Reference | |
| SW release | Version A |

6.4.4 Modulation control

6.4.4.1 +MS - modulation control

| +MS – modulation control | |
|--|--|
| Execute command | |
| Read command | |
| Write command AT+MS = <modulation>, <automode>, <min_speed>, <max_speed> | <p>This command has no effect is included only for backward compatibility with landline modems.</p> <p>Parameter:</p> <p><modulation> =V21 / V22 / V22B / V23C / V32 / V34 <automode> = 0/1 <min_speed> = 0 <max_speed> = 300-14400</p> <p>Note: to change modulation requested use +CBST command.</p> |
| Test command | |
| Example | |
| Reference | |
| SW release | Version A |

6.4.4.2 %E - enable/disable line quality monitor and auto retrain or fallback / fallforward

| %E – enable/disable line quality monitor and auto retrain or fallback/fallforward | |
|--|--|
| Execute command AT%E | It has no effect is included only for backward compatibility with landline modems. |
| Read command | |
| Write command | |
| Test command | |
| Example | |
| Reference | |
| SW release | Version A |

6.4.5 Compression control

6.4.5.1 +DS - set data compression

| +DS – set data compression | |
|---|---|
| Execute command | |
| Read command AT+DS? | Returns current value of the data compression parameter. |
| Write command AT+DS = <n> | Sets the V42 compression parameter. Parameter: <n> = 0 - no compression <n> = 1 - compression enabled Note: The only value supported is 0 - no compression |
| Test command AT+DS=? | Returns all supported values of the parameter n |
| Example | |
| Reference | V25ter |
| SW release | Version A |

6.4.5.2 +DR - data compression reporting

| +DR – data compression reporting | |
|---|---|
| Execute command | |
| Read command | |
| Write command AT+DR = <n> | Controls the data compression reporting upon connection. Parameter: <n> = 0 no data compression reporting is displayed at the connection <n> = 1 a data compression report message is sent by the device upon connection |
| Test command | |
| Example | |
| Reference | V25ter |
| SW release | Version A |

6.4.6 Break control

6.4.6.1 \B - transmit break to remote

| \B – transmit break to remote | |
|--------------------------------------|---|
| Execute command | |
| Read command | |
| Write command AT\b | It has no effect is included only for backward compatibility with landline modems |
| Test command | |
| Example | |
| Reference | |
| SW release | Version A |

6.4.6.2 \K - break handling

| \K – break handling | |
|---------------------------------------|--|
| Execute command | |
| Read command | |
| Write command AT\K<n> | Response It has no effect is included only for backward compatibility with landline modems <n> = 1.. 5 |
| Test command | |
| Example | |
| Reference | |
| SW release | Version A |

6.4.7 S parameters

6.4.7.1 S0 - number of rings to auto answer

| S0 – number of rings to auto answer | |
|--|--|
| Execute command | |
| Read command ATS0? | Returns the current value of S0 parameter. |
| Write command ATS0 = <n> | Sets the number of rings required before device automatically answers an incoming call. Parameter: <n> = 0-255 <n> = 0 auto answer disabled |
| Test command | |
| Example | |
| Reference | V25ter |
| SW release | Version A |

6.4.7.2 S1 - ring counter

| S1 – ring counter | |
|------------------------------|---|
| Execute command | |
| Read command ATS1? | S1 is incremented each time the device detects the ring signal of an incoming call. S1 is cleared if no ring occur over an eight seconds interval. This command returns the value of this parameter. |
| Write command | |
| Test command | |
| Example | |
| Reference | |
| SW release | Version A |

6.4.7.3 S2 - escape character

| S2 – escape character | |
|---|--|
| Execute command | |
| Read command | |
| Write command ATS2 = <char> | <p>S2 holds the decimal value of the ASCII character used as escape character. This command sets this character equal to <char>.</p> <p>Parameter: <char> - escape character 0-255</p> <p>Note: The escape sequence consists of three escape characters preceded by n ms of idle and followed by m ms of idle.</p> |
| Test command | |
| Example | |
| Reference | |
| SW release | Version A |

6.4.7.4 S3 - carriage return character

| S3 – carriage return character | |
|---|--|
| Execute command | |
| Read command | |
| Write command ATS3 = <char> | <p>Sets the command line and result code terminator character in decimal ASCII.</p> <p>Parameter: <char> - carriage return character 0-127</p> <p>Note: Default 13 (Carriage Return)</p> |
| Test command | |
| Example | |
| Reference | V25ter |
| SW release | Version A |

6.4.7.5 S4 - line feed character

| S4 – line feed character | |
|---|---|
| Execute command | |
| Read command | |
| Write command ATS4 = <char> | <p>Sets the character recognized as line feed character.</p> <p>Parameter: <char> - line feed character 0-127</p> <p>Note: Default 10 (Line Feed). The line feed character is output after carriage return character if verbose result codes are used (V1 option used).</p> |
| Test command | |
| Example | |
| Reference | V25ter |
| SW release | Version A |

6.4.7.6 S5 - backspace character

| S5 – backspace character | |
|---|--|
| Execute command | |
| Read command | |
| Write command ATS5 = <char> | <p>Sets the decimal ASCII character that is recognized as backspace character.</p> <p>Parameter: <char> - backspace character 1-127</p> <p>Note: Default 8 (backspace)</p> |
| Test command | |
| Example | |
| Reference | V25ter |
| SW release | Version A |

6.4.7.7 S7 - wait time for carrier, silence or dial tone

| S7 – wait time for carrier, silence or dial tone | |
|---|---|
| Execute command | |
| Read command | |
| Write command ATS7 = <sec> | <p>S7 sets the length of time in seconds that the device will wait for carrier before hanging up the call. The timer is started when the device finishes dialing (originate), or 2 seconds after going off-hook.</p> <p>Parameter: <sec> - 1-255</p> <p>Note: Default is 60 seconds</p> |
| Test command | |
| Example | |
| Reference | V25ter |
| SW release | Version A |

6.4.7.8 S10 - lost carrier to hang up delay

| S10 – lost carrier to hang up delay | |
|--|---|
| Execute command | |
| Read command | |
| Write command ATS10 = <time> | <p>S10 defines the maximum time allowed to a carrier loss before disconnecting.</p> <p>Parameter: <time> - tenth of seconds 1-255</p> <p>Note: default is 50 (5 seconds).</p> |
| Test command | |
| Example | |
| Reference | V25ter |
| SW release | Version A |

6.4.7.9 S12 - escape prompt delay

| S12 – escape prompt delay | |
|--|--|
| Execute command | |
| Read command | |
| Write command ATS12 = <time> | <p>Defines the guard time of silence before and after the escape sequence in order to accept it as a valid one.</p> <p>Parameter: <time> - 20-255 fiftieth of seconds</p> <p>Note: default is 50 (1 second)</p> |
| Test command | |
| Example | |
| Reference | |
| SW release | Version A |

6.4.7.10 S25 - delay to DTR off

| S25 –delay to DTR off | |
|--|---|
| Execute command | |
| Read command | |
| Write command ATS25 = <time> | <p>Defines how long the DTR must be off to consider the high to low transition as a valid one.</p> <p>Parameter: <time> - 1-255 hundredth of seconds</p> <p>Note: default is 5 (5 hundredth of second)</p> |
| Test command | |
| Example | |
| Reference | |
| SW release | Version A |

6.4.7.11 S30 - disconnect inactivity timer

| S30 –disconnect inactivity timer | |
|---|---|
| Execute command | |
| Read command | |
| Write command ATS30 = <min> | <p>Defines the inactivity timeout timer value in minutes. The Device disconnects if no characters are exchanged for a time period of at least S30 minutes.</p> <p>Parameter: <min> - 0-127 minutes <min> = 0 - means inactivity timer disabled, hence no disconnect on inactivity feature is enabled.</p> <p>Note: Default is 0</p> |
| Test command | |
| Example | |
| Reference | |
| SW release | Version A |

6.4.7.12 S38 - delay before forced hang up

| S38 –delay before forced hang up | |
|---|---|
| Execute command | |
| Read command | |
| Write command ATS38 = <sec> | <p>Defines the time in seconds that the device waits after a hang up command for transmit buffer to be emptied. 255 value means that disconnecting is done only after complete buffer upload.</p> <p>Parameter: <sec> - 0-255 s Note: Default is 20 s</p> |
| Test command | |
| Example | |
| Reference | |
| SW release | Version A |

6.5 ETSI GSM 07.07 AT Commands

6.5.1 General

6.5.1.1 +CGMI - request manufacturer identification

| +CGMI – request manufacturer identification | |
|--|--|
| Execute command AT+CGMI | Returns the device manufacturer identification code. |
| Read command | |
| Write command | |
| Test command | |
| Example | |
| Reference | GSM 07.07 |
| SW release | Version A |

6.5.1.2 +CGMM - request model identification

| +CGMM – request model identification | |
|---|---|
| Execute command AT+CGMM | Returns the device model identification code. |
| Read command | |
| Write command | |
| Test command | |
| Example | |
| Reference | GSM 07.07 |
| SW release | Version A |

6.5.1.3 +CGMR - request revision identification

| +CGMR – request revision identification | |
|--|--|
| Execute command AT+CGMR | Returns device software revision number. |
| Read command | |
| Write command | |
| Test command | |
| Example | |
| Reference | GSM 07.07 |
| SW release | Version A |

6.5.1.4 +CGSN - request product serial number identification

| +CGSN – request product serial number identification | |
|---|--|
| Execute command AT+CGSN | Returns the product serial number, identified as the IMEI of the mobile. |
| Read command | |
| Write command | |
| Test command | |
| Example | |
| Reference | GSM 07.07 |
| SW release | Version A |

6.5.1.5 +CSCS - select TE character set

| +CSCS – select TE character set | |
|---|---|
| Execute command | |
| Read command AT+CSCS? | Returns the current value of the active character set. |
| Write command AT+CSCS <chset> | Sets the current character set used by the device. Parameter: <chset> = "IRA" - char set Note: The only character set supported yet is the ITU-T.50 (IRA) |
| Test command AT+CSCS=? | Returns the supported values of the parameter chset. Yet only IRA is supported. |
| Example | |
| Reference | GSM 07.07 |
| SW release | Version A |

6.5.1.6 +CIMI - request international mobile subscriber identity (IMSI)

| +CIMI – request international mobile subscriber identity (IMSI) | |
|--|--|
| Execute command AT+CIMI | Returns the value of the Internal Mobile Subscriber Identity stored in the SIM. Note: A SIM card must be present in the SIM card housing, else the command returns ERROR. |
| Read command | |
| Write command | |
| Test command | |
| Example | |
| Reference | GSM 07.07 |
| SW release | Version A |

6.5.2 Call control

6.5.2.1 +CBST - select bearer service type

| +CBST – select bearer service type | |
|---|---|
| Execute command | |
| Read command AT+CBST? | Returns current value of the parameters <speed>,<name> and <ce> |
| Write command AT+CBST = <speed>,<name>,<ce> | <p>Selects the bearer service <name> with data rate <speed>, and the connection element <ce> to be used when data calls are originated. Values may also be used during mobile terminated data call setup, especially in case of single numbering scheme calls (refer +CSNS).</p> <p>Parameters:</p> <p>The default values of the subparameters are manufacturer specific since they depend on the purpose of the device and data services provided by it. Not all combinations of these subparameters are supported. The supported values are:</p> <p><speed> 0 – autobauding (automatic selection of the speed) 1 - 300 bps (V.21) 2 - 1200 bps (V.22) 3 - 1200/75 bps (V.23) 4 - 2400 bps (V.22bis) 6 - 4800 bps (V.32) 7 - 9600 bps (V.32) 14 - 14400 bps (V.34) 65 - 300 bps (V.110) 66 - 1200 bps (V.110) 68 - 2400 bps (V.110 or X.31 flag stuffing) 70 - 4800 bps (V.110 or X.31 flag stuffing) 71 - 9600 bps (V.110 or X.31 flag stuffing) 75 - 14400 bps (V110 or X.31 flag stuffing)</p> <p><name> 0 - data circuit asynchronous</p> <p><ce> 0 – transparent 1 - non transparent</p> <p>Default is +CBST = 7,0,1</p> |
| Test command AT+CBST=? | Returns the supported range of values of the parameters. |
| Example | |
| Reference | GSM 07.07 |
| SW release | Version A |

6.5.2.2 +CRLP - radio link protocol

| +CRLP – radio link protocol | |
|---|---|
| Execute command | |
| Read command AT+CRLP? | Returns the current value of the RLP protocol parameters. |
| Write command AT+CRLP = <iws>, <mws>, <T1>, <N2>, <ver> | <p>Radio link protocol (RLP) parameters used when non-transparent data calls are originated may be altered with this command.</p> <p>Parameters:</p> <p><iws> = 1...61 - IWF window Dimension</p> <p><mws> = 1...61 - MS window Dimension</p> <p><T1> = 39...255 – acknowledge timer (10 ms units).</p> <p><N2> = 1...255 – retransmission attempts</p> <p><ver> = 0 - protocol Version</p> <p>The default values are: 61,61,78,6,0</p> |
| Test command AT+CRLP=? | Returns supported range of values of the RLP protocol parameters. |
| Example | |
| Reference | GSM 07.07 |
| SW release | Version A |

6.5.2.3 +CR - service reporting control

| +CR – service reporting control | |
|--|--|
| Execute command | |
| Read command AT+CR? | Returns current intermediate report setting |
| Write command AT+CR = <mode> | <p>Controls whether or not intermediate result code +CR: <serv> is returned from the TA to the TE. If enabled, the intermediate result code is transmitted at the point during connect negotiation at which the TA has determined which speed and quality of service will be used, before any error control or data compression reports are transmitted, and before the intermediate result code CONNECT is transmitted.</p> <p>Parameter: <mode></p> <p><mode> = 0 - disables intermediate result code report</p> <p><mode> = 1 - enables intermediate result code report</p> <p>This command replaces V.25ter [14] command Modulation Reporting Control +MR, which is not appropriate for use with a GSM terminal.</p> <p>The result code parameter <serv> has the meaning:</p> <p>ASYNC - asynchronous transparent</p> <p>SYNC - synchronous transparent</p> <p>REL ASYNC - asynchronous non-transparent</p> <p>REL SYNC - synchronous non-transparent.</p> |
| Test command AT+CR=? | Returns the supported range of values of the parameter <mode>. |
| Example | |
| Reference | GSM 07.07 |
| SW release | Version A |

6.5.2.4 +CEER - extended error report

| +CEER – extended error report | |
|--------------------------------------|---|
| Execute command AT+CEER | <p>Reports a information text regarding some error condition that may occur:</p> <ul style="list-style-type: none"> - the failure in the last unsuccessful call setup (originating or answering) - the last call release - the last unsuccessful GPRS attach or unsuccessful PDP context activation, - the last GPRS detach or PDP context deactivation. <p>Note: if none of this condition has occurred since power up then No Error condition is reported</p> |
| Read command | |
| Write command | |
| Test command | |
| Example | |
| Reference | GSM 07.07 |
| SW release | Version A |

6.5.2.5 +CRC - cellular result codes

| +CRC – cellular result codes | |
|---|--|
| Execute command | |
| Read command AT+CRC? | Returns current value of the parameter <mode>. |
| Write command AT+CRC = <mode> | <p>Controls whether or not the extended format of incoming call indication is used. When enabled, an incoming call is indicated to the TE with unsolicited result code +CRING:<type> instead of the normal RING.</p> <p>Parameter: <mode> = 0 - disables extended format reporting <mode> = 1 - enables extended format reporting</p> <p>Note: On +CRING indication <type> parameter is the call type: <type> - call type: ASYNC asynchronous transparent data SYNC - synchronous transparent data REL ASYNC - asynchronous non-transparent data REL SYNC - synchronous non-transparent data FAX - facsimile (TS 62) VOICE - normal voice (TS 11)</p> |
| Test command AT+CRC=? | Returns supported values of the parameter <mode>. |
| Example | |
| Reference | GSM 07.07 |
| SW release | Version A |

6.5.3 Network service handling

6.5.3.1 +CNUM - subscriber number

| +CNUM – subscriber number | |
|-----------------------------------|--|
| Execute command AT+CNUM | <p>Returns the subscriber number i.e. the phone number of the device that is stored in the SIM card.</p> <p>Note: the returned number format is: +CNUM: [<alpha>] , <number> , <type> <alpha> - <u>optional</u> alphanumeric string associated to <number> <number> - string containing the phone number in the format <type> <type> - type of number: <type> = 145 - international numbering scheme (contains the character "+") <type> = 129 - national numbering scheme</p> |
| Read command | |
| Write command | |
| Test command | |
| Example | |
| Reference | GSM 07.07 |
| SW release | Version A |

6.5.3.2 +CREG - network registration report

| +CREG – network registration report | |
|--|--|
| Execute command | |
| Read command | |
| Write command AT+CREG = <mode> | <p>Enables/disables network registration reports depending on the parameter mode.</p> <p>Parameter: <mode></p> <ul style="list-style-type: none"> 0 – disable network registration unsolicited result code 1 - enable network registration unsolicited result code 2 - enable network registration unsolicited result code with network Cell identification data <p>If mode=1, network registration result code reports: +CREG: <stat></p> <ul style="list-style-type: none"> <stat> = 0 - not registered, ME is not currently searching a new operator to register to <stat> = 1 – registered, home network <stat> = 2 - not registered, but ME is currently searching a new operator to register to <stat> = 3 - registration denied <stat> = 4 -unknown <stat> = 5 - registered, roaming <p>If mode=2, network registration result code reports: +CREG: <stat>[,<Lac>,<Ci>]</p> <p>where: <Lac> is the Local Area Code for the currently registered on cell <Ci> is the Cell Id for the currently registered on cell</p> <p>Note: <Lac> and <Ci> are reported only if mode=2 and the mobile is registered on some network cell.</p> |
| Test command AT+CREG? | <p>Reports the <mode> and <stat> parameter values in the format: +CREG: <mode>,<stat>[,<Lac>,<Ci>]</p> <p>Note: <Lac> and <Ci> are reported only if mode=2 and the mobile is registered on some network cell.</p> |

| +CREG – network registration report | |
|-------------------------------------|---|
| Example | <pre> AT OK at+creg? +CREG: 0,2 (the GM862-GPRS is in network searching state) OK at+creg? +CREG: 0,2 OK at+creg? +CREG: 0,2 OK at+creg? +CREG: 0,2 OK at+creg? +CREG: 0,1 (the GM862-GPRS is registered) OK at+creg? +CREG: 0,1 OK </pre> |
| Reference | GSM 07.07 |
| SW release | Version A |

6.5.3.3 +COPS - operator selection

| +COPS – operator selection | |
|---|--|
| Execute command | |
| Read command AT+COPS? | Returns current value of <mode>,<format> and <oper> |
| Write command AT+COPS = [<mode>[,<format>[,<oper>]]] | <p>Forces an attempt to register the GSM network operator, <mode> parameter defines whether the operator selection is done automatically or it is forced with <oper> parameter.</p> <p>Parameters:</p> <p><mode> = 0 - automatic choice (the parameter <oper> will be ignored)</p> <p><mode> = 1 - manual choice</p> <p><mode> = 3 - set only <format> parameter (the parameter <oper> will be ignored)</p> <p><format> = 0 - alphanumeric max length 16 digits</p> <p><format> = 1 – alphanumeric short form</p> <p><format> = 2 - Numeric 5 digits [country code (3) + network code (2)]</p> <p><oper>: network operator in the <format> parameter defined format.</p> <p>Note: if manual choice selection operator is not available no other operators will be chosen for registration.</p> |
| Test command AT+COPS=? | <p>Returns the list of network operators in the format:</p> <p>+COPS: (<stat> ,<oper (in format=0)>,"",<oper (in format=2)>)</p> <p>where the new parameter stat defines the status of the operator:</p> <p><stat> = 0 – unknown</p> <p><stat> = 1 – available</p> <p><stat> = 2 – current</p> <p><stat> = 3 – forbidden</p> <p>Note: since with this command a network scan is done, this command may require some seconds before the output is given.</p> |
| Example | |
| Reference | GSM 07.07 |
| SW release | Version A |

6.5.3.4 +CLCK - facility lock/ unlock

| +CLCK – facility lock/unlock | |
|--|--|
| <p>Execute command</p> <p>AT+CLCK = <fac>, <mode>[,<passwd> [,<class>]]</p> | <p>It is used to lock or unlock a ME or a network facility.</p> <p>Parameters: <fac>:</p> <p>"SC" - SIM (PIN request) (device asks SIM password at power-up and when this lock command issued)</p> <p>"AO" - BAO (Barr All Outgoing Calls)</p> <p>"OI" - BOIC (Barr Outgoing International Calls)</p> <p>"OX" - BOIC-exHC (Barr Outgoing International Calls except to Home Country)</p> <p>"AI" - BAIC (Barr All Incoming Calls)</p> <p>"IR" - BIC-Roam (Barr Incoming Calls when Roaming outside the home country)</p> <p>"AB" - All Barring services (applicable only for <mode>=0)</p> <p>"AG" - All outGoing barring services (applicable only for <mode>=0)</p> <p>"AC" - All inComing barring services (applicable only for <mode>=0)</p> <p>"FD" - SIM fixed dialling memory feature (if PIN2 authentication has not been done during the current session, PIN2 is required as <passwd>)</p> <p>"PN" - network Personalisation</p> <p>"PU" - network subset Personalisation</p> <p><mode>: defines the operation to be done on the facility</p> <p><mode> = 0 - unlock facility</p> <p><mode> = 1 - lock facility</p> <p><mode> = 2 - query status (see below)</p> <p><passwd>: shall be the same as password specified for the facility from the DTE user interface or with command Change Password +CPWD</p> <p><class>: represents the class of information of the facility (sum of bits)</p> <p><class> = 1- voice (telephony)</p> <p><class> = 2 - data (refers to all bearer services)</p> <p><class> = 4 - fax (facsimile services) ()</p> |
| <p>Read command</p> <p>AT+CLCK=<fac>,2</p> | <p>query the status of the facility <fac>; returns</p> <p style="padding-left: 40px;">+CLCK:<status></p> <p style="padding-left: 40px;">where <status> defines the current status of the facility:</p> <p style="padding-left: 40px;">0 - not active (locked)</p> <p style="padding-left: 40px;">1 - active (unlocked)</p> <p>Note: For some facility the status is requested to the network, hence if no network is available the command returns the ERROR message.</p> |

| +CLCK – facility lock/unlock | |
|-------------------------------------|---|
| Write command | |
| Test command AT+CLCK=? | Reports all the facility supported by the device. |
| Example | |
| Reference | GSM 07.07 |
| SW release | Version A |

6.5.3.5 +CPWD - change facility password

| +CPWD – change facility password | |
|---|---|
| Execute command AT+CPWD = <fac>, <oldpwd>, <newpwd> | Changes the password for the facility lock function of the facility fac. Parameter: <fac>, <oldpwd>, <newpwd> Note: parameter <oldpwd> is the old password while <newpwd> is the new one. |
| Read command | |
| Write command | |
| Test command | |
| Example | |
| Reference | GSM 07.07 |
| SW release | Version A |

6.5.3.6 +CLIP - calling line identification presentation

| +CLIP – calling line identification presentation | |
|---|---|
| Execute command | |
| Read command AT+CLIP? | <p>Returns the status of the supplementary service CLI in the format: +CLIP: <n>, <m> where: <n> = 0 - CLI presentation disabled <n> = 1 - CLI presentation enabled <m>: status if the CLIP service on the GSM network <m> = 0 - CLIP not provisioned <m> = 1 - CLIP provisioned <m> = 2 - unknown (e.g. no network is present)</p> <p>Note: This command issues a status request to the network, hence it may take a few seconds to give the answer due to the time needed to exchange data with it.</p> |
| Write command AT+CLIP = <n> | <p>Enables or disables the calling line identification supplementary service presentation depending on the value of the parameter <n>. Parameters: <n> <n> = 0 - disables CLI indication <n> = 1 - enables CLI indication</p> <p>If enabled the device reports after each RING the response: +CLIP:<number>,<type> where: <number>: calling line number <type> - type of number: <type> = 145 - international numbering scheme (contains the character "+") <type> = 129 - national numbering scheme</p> <p>Note: The command changes only the report behaviour of the device, it does not change CLI supplementary service setting on the network.</p> |
| Test command AT+CLIP=? | Returns the supported values of the parameter <n> |
| Example | |
| Reference | GSM 07.07 |
| SW release | Version A |

6.5.3.7 +CLIR - calling line identification restriction

| +CLIR – calling line identification restriction | |
|---|---|
| Execute command | |
| Read command AT+CLIR? | <p>Reports the network & the device CLIR setting in the format: +CLIR:<n>,<m></p> <p>where</p> <p><n> is the facility status on the Mobile</p> <ul style="list-style-type: none"> 0 – CLIR facility according to CLIR service network status 1 – CLIR facility active (CLI not sent) 2 – CLIR facility not active (CLI sent) <p><m> is the facility status on the Network</p> <ul style="list-style-type: none"> 0 - CLIR service not provisioned 1 - CLIR service provisioned permanently 2 - unknown (e.g. no network present, etc.) 3 - CLI temporary mode presentation restricted 4 - CLI temporary mode presentation allowed |
| Write command AT+CLIR = <n>,<m> | <p>Refers to CLIR – service that allows a calling subscriber to enable or disable the presentation of the CLI to the called party when originating a call according to the parameters <n> and <m> given</p> <p>Parameters: <n>, <m></p> <p><n> is the facility status on the Mobile</p> <ul style="list-style-type: none"> 0 – CLIR facility according to CLIR service network status 1 – CLIR facility active (CLI not sent) 2 – CLIR facility not active (CLI sent) <p><m> is the facility status on the Network</p> <ul style="list-style-type: none"> 0 - CLIR service not provisioned 1 - CLIR service provisioned permanently 3 - CLI temporary mode presentation restricted 4 - CLI temporary mode presentation allowed <p>Note: This command set the default behaviour of the device in outgoing calls and of the network. The two settings should not be conflicting.</p> |
| Test command AT+CLIR=? | Reports the supported values of the parameter <n>. |
| Example | |
| Reference | GSM 07.07 |
| SW release | Version A |

6.5.3.8 +CCFC - call forwarding number and conditions

| +CCFC – call forwarding number and condition | |
|--|--|
| <p>Execute command</p> <p>AT+CCFC = <reason>, <cmd>[,<number>][,<type>][,<class>][,<time>]]]</p> | <p>Controls the call forwarding supplementary service. Registration, erasure, activation, deactivation, and status query are supported.</p> <p>Parameters:</p> <p><reason> = 0 – unconditional <reason> = 1 - mobile busy <reason> = 2 - no reply <reason> = 3 - not reachable <reason> = 4 - all calls (not with query command) <reason> = 5 - all conditional calls (not with query command)</p> <p><cmd> = 0 – disable <cmd> = 1 - enable <cmd> = 2 - query status (see below for further explanations) <cmd> = 3 – registration <cmd> = 4 – erasure</p> <p><number>: phone number of forwarding address in format specified by <type> parameter</p> <p><type>: type of address byte in integer format : 145 - international numbering scheme (contains the character "+") 129 - national numbering scheme</p> <p><class>: is a sum of integers each representing a class of information which the command refers; default 7 (voice + data + fax)</p> <p><class> = 1 - voice (telephony) <class> = 2 - data <class> = 4 - fax (facsimile services, from SW release C)</p> <p><time>: is the time in seconds after which the call is diverted if "no reply" reason is chosen. Valid only for "no reply" reason.</p> |

| +CCFC – call forwarding number and condition | |
|--|--|
| <p>Read command</p> <p>AT+CCFC = <reason>,2,[number>[, <type>[,dopo <time>s]]]</p> | <p>Queries the network for forwarding service settings on a specific reason. The result is in the form:</p> <p>+CCFC:<status>,<class>[,<number>[,<type>[,dopo <time>s]]]</p> <p>where:</p> <p><status> = 0 - service not active <status> = 1 - service active (calls will be forwarded)</p> <p><time>: - 1...30 when "no reply" option for reason is enabled or queried, this gives the time in <i>seconds</i> to wait before call is forwarded, default value is 20.</p> <p>The other parameters are as seen before.</p> <p>Note: When querying the status of a network service (<cmd>=2) the response line for 'not active' case (<status>=0) should be returned only if service is not active for any <class>.</p> |
| Write command | |
| <p>Test command</p> <p>AT+CCFC=?</p> | <p>Reports supported values for the parameter <reason>.</p> |
| Example | |
| Reference | GSM 07.07 |
| SW release | Version A |

6.5.3.9 +CCWA - call waiting

| +CCWA – call waiting | |
|--|--|
| <p>Execute command AT+CCWA = [<n>[,<cmd>[,<class>]]]</p> | <p>Controls the call waiting indication supplementary service. Activation, deactivation, and status query are supported.</p> <p>Parameters:</p> <p><n>: enables/disables call waiting indication reporting: <n> = 0 – disable <n> = 1 - enable</p> <p><cmd> enables/disables or queries the service at network level: <cmd> = 0 - disable <cmd> = 1 – enable <cmd> = 2 - query status</p> <p><class>: is a sum of integers each representing a class of information which the command refers; default 7 (voice + data + fax) <class> = 1 - voice (telephony) <class> = 2 - data <class> = 4 - fax (facsimile services)</p> <p>The response to the query command is in the form: +CCWA=<status>,<class></p> <p>Where</p> <p><status> represents the status of the service: <status> = 0 - inactive <status> = 1 - active</p> <p><class> is the class of calls the service status refers to.</p> <p>Note: if parameter <cmd> is omitted then network is not interrogated. Note2: In the query command the class parameter must not be issued. Note3: The difference between call waiting report disabling (AT+CCWA = 0,1,7) and call waiting service disabling (AT+CCWA = 0,0,7) is that in the first case the call waiting indication is sent to the device by network but this last one does not report it to the DTE; instead in the second case the call waiting indication is not generated by the network. Hence the device results busy to the third party in the 2nd case while in the 1st case a ringing indication is sent to the third party. Note4: The command AT+CCWA=1,0 is a non sense and must not be issued.</p> |
| <p>Read command AT+CCWA?</p> | <p>Reports the current value of the parameter <n>.</p> |
| <p>Write command</p> | |

| +CCWA – call waiting | |
|----------------------------------|---|
| Test command AT+CCWA=? | Reports the supported values for the parameter <n>. |
| Example | |
| Reference | GSM 07.07 |
| SW release | Version A |

6.5.3.10 +CHLD - call holding services

| +CHLD – call holding services | |
|---|---|
| Execute command AT+CHLD = <n> | <p>Controls the network call hold service. With this service it is possible to disconnect temporarily a call and keep it suspended while it is retained by the network, contemporary it is possible to connect another party or make a multiparty connection.</p> <p>The action of the command depends on the value of the parameter</p> <p>Parameter:</p> <p><n> = 0 Releases all pending calls</p> <p><n> = 1 Releases all active calls (if present), and accepts or reconnects the pending or waiting call</p> <p><n> = 2 Suspends (into pending status) the active call and accepts or reconnects the waiting or pending call.</p> <p><n> = 3 NOT SUPPORTED</p> <p>Note: ONLY for VOICE calls</p> |
| Read command | |
| Write command | |
| Test command | |
| Example | |
| Reference | GSM 07.07 |
| SW release | Version A |

6.5.3.11 +CUSD - unstructured supplementary service data

| +CUSD – unstructured supplementary service data | |
|--|--|
| <p>Execute command AT+CUSD = <n>,[<str>]</p> | <p>Enables /disables the unstructured service data reporting.</p> <p>Parameters:</p> <p><n>: is used to disable/enable the presentation of an unsolicited result code: +CUSD: <m>[,<str>,<dc>] to the TE.</p> <p><n>:</p> <p><n> = 0 - disable the result code presentation in the DTA</p> <p><n> = 1 - enable the result code presentation in the DTA</p> <p><dc> indicates which alphabet is used (Data Coding Scheme),refer to command Select TE Character Set +CSCS</p> <p><str> - USSD-string (when <str> parameter is not given, network is not interrogated):</p> <ul style="list-style-type: none"> - if TE character set other than "HEX": ME/TA converts GSM alphabet into current TE character set according to rules of GSM 07.05 - if TE character set is "HEX": ME/TA converts each 7-bit character of GSM alphabet into two IRA character long hexadecimal number (e.g. character ? (GSM 23) is presented as 17 (IRA 49 and 55)) -if<dc> indicates that 8-bit data coding scheme is used: ME/TA converts each 8-bit octet into two IRA character long hexadecimal number (e.g. octet with integer value 42 is presented to TE as two characters 2A (IRA 50 and 65)) <p><m>:</p> <p><m> = 0 - no further user action required, hence network initiated USSD-Notify, or no further information needed after mobile initiated operation.</p> <p><m> = 1 - further user action required, hence network initiated USSD-Request, or further information needed after mobile initiated operation</p> <p><m> = 2 - USSD terminated by the network</p> <p><m> = 3 - other local client has responded</p> <p><m> = 4 - operation not supported</p> <p><m> = 5 - network time out</p> <p>Note: only mobile initiated operations are supported.</p> <p>Warning: In case of successful mobile initiated operation, DTA waits the USSD response from the network and sends it to the DTE before the final result code. This will block the AT command interface for the period of the operation.</p> |

| +CUSD – unstructured supplementary service data | |
|--|--|
| Read command AT+CUSD? | Reports the current value of the parameter <n> |
| Write command | |
| Test command AT+CUSD=? | Reports the supported values for the parameter <n>: <n> = 0 - result code presentation in the TA disabled <n> = 1 - result code presentation in the TA enabled |
| Example | |
| Reference | GSM 07.07 |
| SW release | Version A |

6.5.3.12 +CAOC - advice of charge

| +CAOC – advice of charge | |
|--|--|
| <p>Execute command AT+CAOC = <mode></p> | <p>Controls the advise of charge service; the command also includes the possibility to enable an unsolicited event reporting of the CCM information.</p> <p>If unsolicited reporting is enabled DTE sends the result code +CCCM: <acm> when the CCM value changes, but not more than every 10 seconds. <acm> - accumulated call meter value hexadecimal representation (3 byte)</p> <p>Parameter: <mode> = 0 - ACM (Accumulated Call Meter) read request <mode> = 1 - disables unsolicited ACM reporting <mode> = 2 - enables unsolicited ACM reporting</p> <p>Note: +CAOC command uses the ACM of the device internal memory, not the ACM stored in the SIM. The difference is that the internal memory ACM is reset at power up, while the SIM ACM is reset only on user request. Advice of Charge values stored in the SIM (ACM, ACMmax, PUCT) can be accessed with commands +CACM, +CAMM and +CPUC.</p> |
| <p>Read command AT+CAOC?</p> | <p>Reports the value of ACM in the format: +CAOC: xxxxxx.</p> |
| <p>Write command</p> | |
| <p>Test command AT+CAOC=?</p> | <p>Reports the supported values for <mode> parameter.</p> |
| <p>Example</p> | |
| <p>Reference</p> | <p>GSM 07.07</p> |
| <p>SW release</p> | <p>Version A</p> |

6.5.3.13 +CLCC - list current calls

| +CLCC – list current calls | |
|---|--|
| <p>Execute command AT+CLCC</p> | <p>Reports the list of current calls active and their characteristics by sending the report +CLCC:<id>,<dir>,<stat>,<mode>,<mpty>[,<number>,<type>] for each active call, where: <id> - call identification number <dir> - call direction 0 - mobile originated call 1 - mobile terminated call <stat> - state of the call 0 - active 1 - held 2 - dialing (MO call) 3 - alerting (MO call) 4 - incoming (MT call) 5 - waiting (MT call) <mode> - call type 0 – voice 1 – data 2 – fax 9 - unknown <mpty> - multiparty call flag 0 - call is not one of multiparty (conference) call parties 1 - NOT SUPPORTED <number>: phone number in format specified by <type> <type>: type of phone number byte in integer format 145 - international numbering scheme (contains the character "+") 129 - national numbering scheme Note: If no call is active then only OK message is sent. This command is useful in conjunction with command +CHLD to know the various call status for call holding.</p> |
| Read command | |
| Write command | |
| Test command | |
| Example | |
| Reference | GSM 07.07 |
| SW release | Version A |

6.5.3.14 +CSSN – SS Notification

| +CSSN – SS notification | |
|--|--|
| Execute command | |
| Read command | |
| Write command AT+CSSN = <n>, <m> | <p>Enable/disable the supplementary service related network initiated notifications, during the origin of outgoing calls (+CSSI) and incoming calls (+CSSU)</p> <p>Parameters:</p> <p><n>: sets the +CSSI result code presentation status 0 disable 1 enable</p> <p><m>: sets the +CSSU result code presentation status 0 disable 1 enable</p> |
| Test command | |
| Example | |
| Reference | GSM 07.07 |
| SW release | Version A |

5.4.3.15 +CCUG – Closed User Group supplementary service control

| +CCUG – Closed User Group supplementary service control | |
|--|---|
| Execute command | |
| Read command AT+CCUG? | Reports the current value of the parameters in the format: +CCUG: <n>,<index>,<info> |
| Write command AT+CCUG=<n>[,<index>[,<info>]] | Enable/disable the CUG supplementary service Parameters: <n> 0 - disables the temporary CUG settings for all the successive calls 1 - enables the temporary CUG settings for all the successive calls <index> 0..9 - CUG index 10 - no index (preferential CUG taken from subscriber data) <info> 0 - no information 1 - suppress Outgoing Access (OA) 2 - suppress preferential CUG 3 - suppress OA and preferential CUG |
| Test command AT+CCUG=? | Reports the supported range of values for the parameters <n>,<index>, <info> |
| Example | |
| Reference | GSM 07.07 |
| SW release | Version A |

6.5.4 Mobile Equipment control

6.5.4.1 +CPAS - phone activity status

| +CPAS – phone activity status | |
|-----------------------------------|--|
| Execute command AT+CPAS | reports the device status in the form +CPAS: <pas> where <pas> - phone activity status 0 - ready (Device allows commands from TA/TE) 1 - unavailable (Device does not allow commands from TA/TE) 2 - unknown (Device is not guaranteed to respond to instructions) 3 - ringing (Device is ready for commands from TA/TE, but the ringer is active) 4 - call in progress (Device is ready for commands from TA/TE, but a call is in progress) |
| Read command AT+CPAS? | same as Execute command. |
| Write command | |
| Test command AT+CPAS=? | Reports the supported range of values of <pas>. |
| Example | ATD03282131321; OK AT+CPAS? +CPAS: 3 (the called phone is ringing) OK AT+CPAS? +CPAS: 3 OK AT+CPAS? +CPAS: 4 (the called phone has answered to your call) OK ATH OK |
| Reference | GSM 07.07 |
| SW release | Version A |

6.5.4.2 +CFUN Set phone functionality (Power Saving Management)

| +CFUN – power saving management | |
|---|---|
| Execute command | |
| Read command AT+CFUN? | <p>reports the power saving status in the form: +CFUN: <fun></p> <p>where <fun> - power saving status 1 - power saving disabled 5 - power saving enabled</p> <p>Note: The phone functionality remains always FULL.</p> |
| Write command AT+CFUN=<fun> | <p>Enables/disables the power saving function.</p> <p>If enabled it reduces the power consumption during the idle time, thus allowing a longer standby time with a given battery capacity.</p> <p>Parameters: <fun>: is the power saving function mode 1 - Mobile full functionality with power saving disabled (default) 5 - Mobile full functionality with power saving enabled</p> <p>Note: To place the telephone in power saving mode, set the <fun> parameter at value = 5 and the line DTR (RS232) must be set to OFF. Once in power saving, the CTS line switch to the OFF status to signal that the telephone is really in power saving condition.</p> <p>During the power saving condition, before sending any AT command on the serial line, the DTR must be enabled and it must be waited for the CTS (RS232) line to go in ON status.</p> <p>Until the DTR line is ON, the telephone will not return back in the power saving condition.</p> <p>Note2: The power saving function does not affect the network behavior of the GM862-GPRS, even during the power save condition the module remains registered on the network and reachable for incoming calls or SMS. If a call incomes during the power save, then the module will wake up and proceed normally with the unsolicited incoming call code</p> |
| Test command | |
| Example | |
| Reference | GSM 07.07 |
| SW release | Version A |

6.5.4.3 +CPIN - enter PIN

| +CPIN – enter PIN | |
|--|--|
| Execute command | |
| Read command AT+CPIN? | <p>Reports the PIN/PUK/PUK2 request status of the device in the form: +CPIN:<code></p> <p>where <code> is the PIN/PUK/PUK2 request status code:</p> <ul style="list-style-type: none"> READY - device is not pending for any password SIM PIN - device is waiting SIM PIN to be given SIM PUK - device is waiting SIM PUK to be given SIM PIN2 - device is waiting SIM PIN2 to be given; this <code> is returned only when the last executed command resulted in PIN2 authentication failure (i.e. +CME ERROR: 17) SIM PUK2 - device is waiting SIM PUK2 to be given; this <code> is returned only when the last executed command resulted in PUK2 authentication failure (i.e. +CME ERROR: 18) PH-NET PIN - device is waiting network personalization password to be given PH-NETSUB PIN - device is waiting network subset personalization password to be given <p>Note: Pin pending status at startup depends on PIN facility setting, to change or query the default power up setting use the AT+CLCK=SC,<mode>, <pin> command.</p> |
| Write command AT+CPIN = <pin>[,<newpin>] | <p>Sends to the device a password (SIM PIN, SIM PUK, PH-SIM PIN, etc.) which may be required to further operate the device.</p> <p>If the PIN required is SIM PUK or SIM PUK2, the <newpin> is required. This second pin, <newpin>, will replace the old pin in the SIM.</p> <p>The command may be used to change the SIM PIN by sending it with both parameters <pin> and <newpin> when if PIN request is pending; if no PIN request is pending the command will return an error code and to change the PIN the command +CPWD must be used instead.</p> <p>Parameters: <pin>, <newpin></p> <p>Note: the only commands which are accepted when device is pending SIM PIN, SIM PUK, or PH-SIM are: +CGMI, +CGMM, +CGMR, +CGSN, D112; (emergency call), +CPAS, +CPIN.</p> <p>To check the status of the PIN request use the command AT+CPIN?</p> |
| Test command | |

| +CPIN – enter PIN | |
|--------------------------|---|
| Example | AT+CMEE=1 OK AT+CPIN? +CME ERROR: 10 (error because you have to insert the SIM) AT+CPIN? +CPIN: READY (this response is after you have inserted the SIM) OK |
| Reference | GSM 07.07 |
| SW release | Version A |

6.5.4.4 +CSQ- signal quality

| +CSQ – signal quality | |
|--|--|
| <p>Execute command AT+CSQ</p> | <p>Reports received signal quality indicators in the form +CSQ:<rss>,<ber> where <rss> - received signal strength indication 0 - 113 dBm or less 1 - 111 dBm 2...30 - 109dBm ... -53 dBm / 2 dBm per step 31 - 51 dBm or greater 99 - not known or not detectable <ber> - bit error rate % 0 - less than 0.2 % 1 - 0.2% a 0.4% 2 - 0.4% a 0.8% 3 - 0.8% a 1.6% 4 - 1.6% a 3.2% 5 - 3.2% a 6.4% 6 - 6.4% a 12.8% 7 - more than 12.8% 99 - not known or not detectable Note: this command should be used instead of the AT%Q and AT%L commands, since GSM relevant parameters are the radio link ones and no line is present, hence %Q %L and have no meaning.</p> |
| Read command | |
| Write command | |
| <p>Test command AT+CSQ=?</p> | <p>Returns the supported range of values of the parameters <rss>and <ber>.</p> |
| Example | |
| Reference | GSM 07.07 |
| SW release | Version A |

6.5.4.5 +CPBS - select phonebook memory storage

| +CPBS – select phonebook memory storage | |
|---|---|
| Execute command | |
| Read command | |
| Write command AT+CPBS = <storage> | <p>Selects phonebook memory storage <storage>, which will be used by other phonebook commands.</p> <p>Parameter: <storage></p> <p>"SM" - SIM phonebook</p> <p>"FD" - SIM fixed dialling-phonebook (only phase 2/2+ SIM)</p> <p>"LD" - SIM last-dialling-phonebook (+CPBW and +CPBF are not applicable for this storage)</p> <p>"MC" - device missed (unanswered received) calls list (+CPBW and +CPBF are not applicable for this storage)</p> <p>"RC" - ME received calls list (+CPBW and +CPBF are not applicable for this storage)</p> |
| Test command | |
| Example | |
| Reference | GSM 07.07 |
| SW release | Version A |

6.5.4.6 +CPBR - read phonebook entries

| +CPBR – read phonebook entries | |
|--|---|
| Execute command | |
| Read command | |
| Write command AT+CPBR = <index>[,<index2>] | <p>returns phonebook entries in locations number from <index1> to <index2> from the current phonebook memory storage selected with +CPBS. If <index2> is omitted, only location <index1> is returned.</p> <p>Parameters: <index>, <index2></p> <p>The response format is: +CPBR: <index>,<number>,<type>,<name></p> <p>where</p> <p><index> - the current position number of the PB index (to see the range of values use +CPBR=?)</p> <p><number> - the phone number stored in the format <type></p> <p><type> - type of phone number byte in integer format</p> <p>145 - international numbering scheme (contains the character "+")</p> <p>129 - national numbering scheme</p> <p><name> - the alphanumeric text associated to the number (e.g. name of address)</p> <p>Note: If all queried locations are empty (but available), no information text lines will be returned, while if listing fails in an ME error, +CME ERROR: <err> is returned.</p> |
| Test command AT+CPBR=? | <p>Returns the supported range of values of the parameters in the form +CPBR: (<minIndex> - <maxIndex>),<nlength>,<tlength></p> <p>where</p> <p><minIndex> - the minimum <i>index</i> number</p> <p><maxIndex>- the maximum <i>index</i> number</p> <p><nlength> - maximum <i>number</i> field length</p> <p><tlength> - maximum <i>name</i> field length</p> <p>Note: remember to select the PB storage with +CPBS command before issuing PB commands.</p> |
| Example | |
| Reference | GSM 07.07 |
| SW release | Version A |

6.5.4.7 +CPBF - find phonebook entries

| +CPBF – find phonebook entries | |
|--|--|
| Execute command | |
| Read command | |
| Write command AT+CPBF = <text> | <p>Issues a search for the phonebook records that have the <i>text</i> sub-string at the start of the <i>name</i> field and returns a report in the form</p> <p>+CPBF: <index>,<number>,<type>,<name></p> <p>where index, number, type and name have the same meaning than in the command +CPBR report.</p> <p>If no PB records satisfy the search criteria then an ERROR message is reported.</p> <p>Parameter: <text></p> <p>Note: text is NOT case sensitive and may or not be included in double brackets.</p> |
| Test command AT+CPBF=? | <p>Reports the maximum lengths of fields <number> and <name> in the PB entry in the form:</p> <p>+CPBF: <max_number_length>,<max_name_length></p> |
| Example | |
| Reference | GSM 07.07 |
| SW release | Version A |

6.5.4.8 +CPBW - write phonebook entry

| +CPBW – write phonebook entry | |
|---|--|
| Execute command | |
| Read command | |
| Write command AT+CPBW = [<index>],[<number>[, <type>[,<name>]]] | <p>Stores at the position <index> a Phonebook record defined by <number>,<type> and <name> parameters</p> <p>Parameters: <index>, <number>, <type>, <name></p> <p><number> - the phone number in the format <type></p> <p><type> - the type of number</p> <p>145 - international numbering scheme (contains the character "+")</p> <p>129 - national numbering scheme</p> <p><name> - the text associated to the number.</p> <p>Note: If record number <index> already exists, it will be overwritten. If only <index> is given, the record number <index> is deleted. If <index> is omitted, the number <number> is stored in the first free phonebook location. Text in the <name> field and number in the <number> field may or may not be included in double brackets.</p> |
| Test command AT+CPBW=? | <p>Reports the maximum lengths of fields <number> and <name> in the PB entry in the form:</p> <p>+CPBW: <max_number_length>,<max_name_length></p> |
| Example | |
| Reference | GSM 07.07 |
| SW release | Version A |

6.5.4.9 +CCLK - Clock Management

| +CCLK – Clock Management | |
|--|---|
| Execute command | |
| Read command AT+CCLK? | Reports the current time stored in the internal Real Time Clock in the format: +CCLK: <time> |
| Write command AT+CCLK = <time> | Stores in the internal Real Time Clock the current time defined by the parameter <time> Parameter: <time> - current time in the format : "yy/MM/dd,hh:mm:ss±zz" where: yy - year MM - month (in digits) dd - day hh - hour mm - minute ±zz - time zone in quarter of an hour (difference between the GMT and the local time) |
| Test command | |
| Example | AT+CCLK="02/09/07,22:30:00+04" OK AT+CCLK? +CCLK: 02/09/07,22:30:25+4 OK |
| Reference | GSM 07.07 |
| SW release | Version A |

6.5.4.10 +CALA - Alarm Management

| +CALA – Alarm Management | |
|---|---|
| Execute command | |
| Read command AT+CALA? | <p>Reports the current alarm time stored in the internal Real Time Clock, if present, in the format:</p> <p>+CALA: <time>,<n>,<type>[,<text>]</p> |
| Write command AT+CALA = [<time> [,<n>[,<type>[,<text>]]]] | <p>Stores in the internal Real Time Clock the current alarm time and settings defined by the parameters <time>, <n>,<type>,<text>.</p> <p>When the RTC time reaches the alarm time then the alarm starts, the behaviour of the GM862-GPRS depends upon the setting <type> and if the device was already ON at the moment when the alarm time had come.</p> <p>Parameter:</p> <p><time> - current alarm time in the format : "yy/MM/dd,hh:mm:ss±zz" as defined for +CCLK command.</p> <p><type> - alarm behaviour type</p> <ul style="list-style-type: none"> 0 - reserved for other equipment use. 1 - the GM862-GPRS simply wakes up fully operative as if the ON/OFF pin had been pressed. If the device is already ON at the alarm time, then it does nothing. 2 - the GM862-GPRS wakes up in "alarm mode" if at the alarm time it was off, otherwise it remains fully operative. In both cases the GM862-GPRS issues an unsolicited code every 3s: +ALARM: <text> Where <text> is the other +CALA parameter previously set. The device keeps on sending the unsolicited code every 3s until a #WAKE or #SHDN command is received or a 90s timeout occurs. If the device is in "alarm mode" and it does not receive the #WAKE command within 90s then it shuts down. (default) 3 - the GM862-GPRS wakes up in "alarm mode" if at the alarm time it was off, otherwise it remains fully operative. In both cases the GM862-GPRS starts playing the alarm tone on the selected path for the ringer (see command #SRP) The device keeps on playing the alarm tone until a #WAKE or #SHDN command is received or a 90s timeout occurs. If the device is in "alarm mode" and it does not receive the #WAKE command within 90s then it shuts down. |

| | |
|---|--|
| | <p>4 - the GM862-GPRS wakes up in "alarm mode" if at the alarm time it was off, otherwise it remains fully operative. In both cases the GM862-GPRS brings the pin GPIO6 high, provided its <direction> has been set to alarm output, and keeps it in this state until a #WAKE or #SHDN command is received or a 90s timeout occurs. If the device is in "alarm mode" and it does not receive the #WAKE command within 90s then it shuts down.</p> <p>5 - the GM862-GPRS will make both the actions as for type=2 and type=3.</p> <p>6 - the GM862-GPRS will make both the actions as for type=2 and type=4.</p> <p>7 - the GM862-GPRS will make both the actions as for type=3 and type=4.</p> <p><n> = 0 - index of the alarm The only value supported for <n> is 0.</p> <p><text> - unsolicited alarm code text string In the case that <type> is equal to 2 or 5 or 6, then the unsolicited text parameter <text> can be set by this parameter.</p> <p>Note: The "alarm mode" is indicated by hardware pin CTS to the ON status and DSR to the OFF status, while the "power saving" status is indicated by a CTS - OFF and DSR - OFF status. The normal operating status is indicated by DSR - ON.</p> <p>During the "alarm mode" the device will not make any network scan and will not register to any network and therefore is not able to dial or receive any call or SMS, the only commands that can be issued to the GM862-GPRS in this state are the #WAKE and #SHDN, every other command must not be issued during this state.</p> |
| <p>Test command AT+CALA=?</p> | <p>Reports the supported range of values for the parameters <time>,<n>, <type> and <text> maximum length</p> |
| <p>Example</p> | <p>AT+CALA="02/09/07,23:30:00+04" OK</p> |
| <p>Reference</p> | <p>GSM 07.07</p> |
| <p>SW release</p> | <p>Version A</p> |

6.5.4.11 +CALM - alert sound mode

| +CALM – alert sound mode | |
|--|---|
| Execute command | |
| Read command | |
| Write command AT+CALM = <mode> | It is used to select the general alert sound mode of the device. Parameter: <mode> = 0 - normal mode <mode> = 1 - silent mode (no sound will be generated by the device) Note: if silent mode (1) is selected then incoming calls will not produce alerting sounds but only the message RING or +CRING. |
| Test command AT+CALM=? | Returns the supported values for the parameter <mode>. |
| Example | |
| Reference | GSM 07.07 |
| SW release | Version A |

6.5.4.12 +CRSL - ringer sound level

| +CRSL – ringer sound level | |
|---|---|
| Execute command | |
| Read command AT+CRSL? | Reports the current <level> setting of the call ringer in the format: +CRSL: <level> |
| Write command AT+CRSL = <level> | It used to select the incoming call ringer sound level of the device. Parameter: <level> - ringer sound level <level> = 0 - Off <level> = 1 - low <level> = 2 - middle <level> = 3 - high <level> = 4 – progressive |
| Test command AT+CRSL=? | Reports <level> supported values range in the format: +CRSL: (0-4) |
| Example | |
| Reference | GSM 07.07 |
| SW release | Version A |

6.5.4.13 +CLVL - loudspeaker volume level

| +CLVL – loudspeaker volume level | |
|---|--|
| Execute command | |
| Read command AT+CLVL? | Reports the current <level> setting of the loudspeaker volume in the format: +CLVL: <level> |
| Write command AT+CLVL = <level> | It used to select the volume of the internal loudspeaker audio output of the device. Parameter: <level> - loudspeaker volume varies between 0 (min) and 10 (max). |
| Test command AT+CLVL=? | Reports <level> supported values range in the format: +CLVL: (0-10) |
| Example | |
| Reference | GSM 07.07 |
| SW release | Version A |

6.5.4.14 +CMUT - microphone mute control

| +CMUT – microphone mute control | |
|---|--|
| Execute command | |
| Read command AT+CMUT? | Reports the selected microphone (internal/external) mute status in the format: +CMUT: <n> |
| Write command AT+CMUT = <n> | Enables/disables the muting of the microphone audio line depending on n parameter value Parameter: <n > = 0 - microphone active <n > = 1 - microphone muted Note: this command mutes/activates both microphone audio paths, internal mic and external mic. |
| Test command AT+CMUT=? | Reports the supported values for <n> parameter. |
| Example | |
| Reference | GSM 07.07 |
| SW release | Version A |

6.5.4.15 +CACM - accumulated call meter

| +CACM – accumulated call meter | |
|---|---|
| Execute command | |
| Read command AT+CACM? | Reports the current value of the SIM ACM in the format +CACM: <n> Note: the value <n> is in units whose price and currency is defined with command +CPUC |
| Write command AT+CACM = <pwd> | Resets the SIM Accumulated Call Meter (ACM). Internal memory CCM remains unchanged. Parameter: <pwd> - PIN2 password Note: to access this command PIN2 password is required |
| Test command | |
| Example | |
| Reference | GSM 07.07 |
| SW release | Version A |

6.5.4.16 +CAMM - accumulated call meter maximum

| +CAMM – accumulated call meter maximum | |
|---|---|
| Execute command | |
| Read command AT+CAMM? | Reports the maximum value of ACM stored in SIM in the format: +CAMM : <acmmax> |
| Write command AT+CAMM = <acmmax>, <pwd> | Sets the Advice of Charge related Accumulated Call Meter ACM maximum value in SIM (see also +CACM command). This value represents the maximum number of home units allowed to be consumed by the subscriber. When ACM reaches <acmmax> value further calls are prohibited. SIM PIN2 is required to set the value. Parameter: <acmmax>- maximum number of units allowed to be consumed <pwd>- PIN2 password Note: The <acmmax> = 0 value disables the feature. |
| Test command | |
| Example | |
| Reference | GSM 07.07 |
| SW release | Version A |

6.5.4.17 +CPUC - price per unit and currency table

| +CPUC – price per unit and currency table | |
|--|---|
| Execute command | |
| Read command AT+CPUC? | Reports the current values of <currency> and <ppu> parameters in the format: +CACM : <currency>,<ppu> |
| Write command AT+CPUC = <currency>,<ppu>,<pwd> | <p>Sets the values of Advice of Charge related price per unit and currency table in SIM. The price per Unit currency table information can be used to convert the home units (as used in commands +CAOC, +CACM and +CAMM) into currency units.</p> <p>Parameters:</p> <p><currency> - three-character currency code string (e.g. LIT, USD, DEM etc..)</p> <p><ppu> - price per unit string (dot is used as decimal separator) e.g. 1989.27</p> <p><pwd> - SIM PIN2</p> <p>Note: SIM PIN2 is required to set the values.</p> |
| Test command | |
| Example | |
| Reference | GSM 07.07 |
| SW release | Version A |

6.5.5 Mobile equipment errors

6.5.5.1 +CMEE - report mobile equipment error

| +CMEE – report mobile equipment error | |
|--|--|
| Execute command | |
| Read command | |
| Write command AT+CMEE = <n> | <p>Enables/disables the report of result code.</p> <p>+CME ERROR: <err></p> <p>as an indication of an error relating to the +Cxxx commands issued. When enabled, device related errors cause the +CME ERROR: <err> final result code instead of the default ERROR final result code. ERROR is anyway returned normally when the error message is related to syntax, invalid parameters, or DTE functionality.</p> <p>Parameter:</p> <p><n> - enable flag</p> <p><n> = 0 - disable +CME ERROR:<err> reports, use only ERROR report.</p> <p><n> = 1 - enable +CME ERROR:<err> reports, with <err> in numeric format</p> <p><n> = 2 - disable +CME ERROR: <err> reports, with <err> in verbose format</p> |
| Test command | |
| Example | |
| Reference | GSM 07.07 |
| SW release | Version A |

6.5.5.2 +CME ERROR: - ME error result code

This is NOT a command, it is the error response to +Cxxx GSM 07.07 commands.

Syntax: AT+CME ERROR:<err>

Parameter: <err> - error code can be either numeric or verbose.

<err> values:

| <i>Numeric Format</i> | <i>Verbose Format</i> |
|-----------------------|---|
| 0 | phone failure |
| 1 | no connection to phone |
| 2 | phone-adaptor link reserved |
| 3 | operation not allowed |
| 4 | operation not supported |
| 5 | PH-SIM PIN required |
| 6 | NOT SUPPORTED |
| 7 | NOT SUPPORTED |
| 10 | SIM not inserted |
| 11 | SIM PIN required |
| 12 | SIM PUK required |
| 13 | SIM failure |
| 14 | SIM busy |
| 15 | SIM wrong |
| 16 | incorrect password |
| 17 | SIM PIN2 required |
| 18 | SIM PUK2 required |
| 20 | memory full |
| 21 | invalid index |
| 22 | not found |
| 23 | memory failure |
| 24 | text string too long |
| 25 | invalid characters in text string |
| 26 | dial string too long |
| 27 | invalid characters in dial string |
| 30 | no network service |
| 31 | network timeout |
| 32 | network not allowed - emergency calls only |
| 40 | network personalization PIN required |
| 41 | network personalization PUK required |
| 42 | network subset personalization PIN required |
| 43 | network subset personalization PUK required |
| 44 | service provider personalization PIN required |
| 45 | service provider personalization PUK required |
| 46 | corporate personalization PIN required |
| 47 | corporate personalization PUK required |
| 100 | unknown |

6.5.6 Voice Control (TIA IS-101)

6.5.6.1 +VTS: - DTMF tones transmission

| +VTS – DTMF tones transmission | |
|---|---|
| Execute command | |
| Read command | |
| Write command AT+VTS = <DTMF> | Allows the transmission of DTMF tones Parameter: <DTMF> - a single ASCII character in the set 0-9, #, *, A-D Note: this commands operates in voice mode only |
| Test command AT+VTS=? | Returns +VTS(,),() |
| Example | |
| Reference | GSM 07.07 / TIA IS-101 |
| SW release | Version A |

6.5.7 Commands For GPRS

6.5.7.1 +CGACT - PDP context activate or deactivate

| + CGACT – PDP context activate or deactivate | |
|--|---|
| Execute command | |
| Read command AT+CGACT? | Returns the current activation states for all the defined PDP contexts. |
| Write command AT+CGACT = <state>[, <cid>[, <cid>[,...]]] | The command is used to activate or deactivate the specified PDP context (s) Parameters: <state> - indicates the state of PDP context activation 0 - deactivated 1 - activated <cid> - a numeric parameter which specifies a particular PDP context definition (see +CGDCONT command) |
| Test command AT+CGACT=? | Reports information on the supported PDP context activation states parameters in the format: +CGACT: (0,1) |
| Example | AT+CGACT? +CGACT: 1 , 1 OK AT+CGACT=1 , 1 OK |
| Reference | GSM 07.07 |
| SW release | Version A |

6.5.7.2 +CGATT - GPRS attach or detach

| +CGATT – GPRS attach or detach | |
|--|--|
| Execute command AT+CGATT = <state> | The command is used to attach the terminal to, or detach the terminal from, the GPRS service depending on the parameter <state>. Parameter: <state> - indicates the state of GPRS attachment 0 - detached 1 - attached |
| Read command AT+CGATT? | Returns the current GPRS service state. |
| Write command | |
| Test command AT+CGATT=? | Requests information on the supported GPRS service states. |
| Example | AT+CGATT? +CGATT: 0 OK AT+CGATT=? +CGATT: (0,1) OK AT+CGATT=1 OK |
| Reference | GSM 07.07 |
| SW release | Version A |

6.5.7.3 +CGDATA - Enter data state

| + CGDATA – Enter data state | |
|--|--|
| Execute command AT+CGDATA = [<L2P> ,<cid> [,<cid> [,...]]] | The command causes to perform whatever actions are necessary to establish communication with the network using one or more GPRS PDP types. Parameters: <L2P> - string parameter that indicates the layer 2 protocol to be used "PPP" - PPP Point-to-point protocol If the value is omitted, the layer 2 protocol is unspecified <cid> - numeric parameter which specifies a particular PDP context definition (see +CGDCONT command). |
| Read command | |
| Write command | |
| Test command AT+CGDATA=? | Requests information on the supported layer 2 protocols. Reports the supported <L2P> parameters values |
| Example | AT+CGDATA=? +CGDATA: ("PPP") OK AT+CGDATA="PPP",1 OK |
| Reference | GSM 07.07 |
| SW release | Version A |

6.5.7.4 +CGDCONT - define PDP context

| + CGDCONT – define PDP context | |
|---|--|
| Execute command | |
| Read command AT+CGDCONT? | Returns the current settings for each defined context in the format: +CGDCONT : <cid>,<PDP_type>,<APN>,<PDP_addr>,<d_comp>,<h_comp>,<pd1> [...,<pdN>]]]]]]]] |
| Write command AT+CGDCONT = [<cid> [,<PDP_type> [,<APN>[,<PDP_addr>,<d_comp> [,<h_comp>[,<pd1> [...,<pdN>]]]]]]]]] | <p>The command specifies PDP context parameter values for a PDP context identified by the (local) context identification parameter, <cid></p> <p>Parameters:</p> <p><cid> (PDP Context Identifier) : a numeric parameter which specifies a particular PDP context definition. The range of permitted values (minimum value = 1) is returned by the test form of the command.</p> <p><PDP_type> (Packet Data Protocol type) : a string parameter which specifies the type of packet data protocol</p> <p>"IP" - Internet Protocol</p> <p>"PPP" - Point to Point Protocol</p> <p><APN> (Access Point Name) : a string parameter which is a logical name that is used to select the GGSN or the external packet data network.</p> <p>If the value is null or omitted, then the subscription value will be requested.</p> <p><PDP_address>: a string parameter that identifies the terminal in the address space applicable to the PDP. The allocated address may be read using the +CGPADDR command.</p> <p><d_comp>: a numeric parameter that controls PDP data compression</p> <p>0 - off (default if value is omitted)</p> <p>1 - on</p> <p><h_comp>: a numeric parameter that controls PDP header compression</p> <p>0 - off (default if value is omitted)</p> <p>1 - on</p> <p><pd1>, ... <pdN>: zero to N string parameters whose meanings are specific to the <PDP_type></p> |
| Test command AT+CGDCONT=? | Returns values supported as a compound value |
| Example | <pre>AT+CGDCONT? +CGDCONT: 1, "IP", "uni.tim.it", "10.10.10.10",0,0 OK</pre> |

| | |
|------------|---|
| | AT+CGDCONT=? +CGDCONT: (1-3),"IP",,(0-1),(0-1) OK AT+CGDCONT=1,"IP","uni.tim.it","10.10.10.10",0,0 OK |
| Reference | GSM 07.07 |
| SW release | Version A |

6.5.7.5 +CGPADDR - show PDP address

| + CGPADDR – show PDP address | |
|---|---|
| Execute command | |
| Read command | |
| Write command AT+CGPADDR = [<cid> [<cid> [...]]] | Returns a list of PDP addresses for the specified context identifiers in the format: +CGPADDR: <cid>,<PDP_addr> [<CR><LF>+CGPADDR: <cid>,<PDP_addr>] Parameters: <cid> - a numeric parameter which specifies a particular PDP context definition (see +CGDCONT command). If no <cid> is specified, the addresses for all defined contexts are returned. <PDP_address> - a string that identifies the terminal in the address space applicable to the PDP. The address may be static or dynamic. For a static address, it will be the one set by the +CGDCONT command when the context was defined. For a dynamic address it will be the one assigned during the last PDP context activation that used the context definition referred to by <cid>,<PDP_addr> is omitted if none is available |
| Test command AT+CGPADDR=? | Returns a list of defined <cid>s. |
| Example | AT+CGPADDR=1,2 +CGPADDR = 1,"10.10.15.15" +CGPADDR = 2,"10.10.20.10" OK AT+CGPADDR=? +CGPADDR: (1-3) OK |
| Reference | GSM 07.07 |
| SW release | Version A |

6.5.7.6 +CGREG - GPRS network registration status

| + CGREG – GPRS network registration status | |
|---|--|
| Execute command | |
| Read command AT+CGREG? | Returns the status of result code presentation mode <n> and the integer <stat> which shows whether the network has currently indicated the registration of the terminal in the format: +CGREG:<n>,<stat>. |
| Write command AT+CGREG = <n> | <p>The command controls the presentation of an unsolicited result code +CGREG: <stat></p> <p>when <n>=1 and there is a change in the terminal GPRS network registration status, or an unsolicited code +CGREG: <stat>[,<lac>,<ci>]</p> <p>when <n>=2 and there is a change of the network cell.</p> <p>Parameter:</p> <p><n> - result code presentation mode</p> <ul style="list-style-type: none"> 0 - disable network registration unsolicited result code 1 - enable network registration unsolicited result code +CGREG: <stat> 2 - enable network registration and location information unsolicited result code +CGREG:<stat>[,<lac>,<ci>] <p>where:</p> <p><lac> - location area code in hexadecimal format (e.g. "00C3" equals 195 in decimal)</p> <p><ci> - cell ID in hexadecimal format</p> <p><stat> - registration status</p> <ul style="list-style-type: none"> 0 - not registered, terminal is not currently searching a new operator to register to 1 - registered, home network 2 - not registered, but terminal is currently searching a new operator to register to 3 - registration denied 4 - unknown 5 - registered, roaming |
| Test command AT+CGREG=? | Returns supported values for parameter <n> |
| Example | |
| Reference | GSM 07.07 |
| SW release | Future Software Release |

6.5.7.7 +CGQMIN - quality of service profile (minimum acceptable)

| + CGQMIN – quality of service profile (minimum acceptable) | |
|---|--|
| Execute command | |
| Read command AT+CGQMIN? | Returns the current settings for each defined context in the format: +CGQMIN: <cid>,<precedence>,<delay>,<reliability>,<peak>,<mean> |
| Example | |
| Write command AT+CGQMIN = [<cid> [,<precedence > [,<delay> [,<reliability> [,<peak> [,<mean>]]]]] | <p>This command allows to specify a minimum acceptable profile which is checked by the terminal against the negotiated profile returned in the Activate PDP Context Accept message</p> <p>Parameters: <cid> - PDP context identification (see +CGDCONT command).</p> <p>The following parameters are defined according to GSM 03.60: <precedence> - precedence class <delay> - delay class <reliability> - reliability class <peak> - peak throughput class <mean> - mean throughput class</p> <p>If a value is omitted for a particular class then this class is not checked.</p> |
| Test command AT+CGQMIN=? | Returns values supported as a compound value. |
| Example | <pre>AT+CGQMIN=1,0,0,3,0,0 OK AT+CGQMIN? +CGQMIN: 1,0,0,5,0,0 OK AT+CGQMIN=? +CGQMIN: (0-3),(0-3),(0-5),(0-9),(0-19,31) OK</pre> |
| Reference | GSM 07.07 |
| SW release | Version A |

6.5.7.8 +CGQREQ - quality of service profile (requested)

| + CGQREQ – quality of service profile (requested) | |
|---|--|
| Execute command | |
| Read command AT+CGQREQ? | Returns the current settings for each defined context in the format: +CGQREQ: <cid>,<precedence>,<delay>,<reliability>,<peak>,<mean> |
| Write command AT+CGQREQ = [<cid> [,<precedence > [,<delay> [,<reliability> [,<peak> [,<mean>]]]]] | <p>The command allows to specify a Quality of Service Profile that is used when the terminal sends an Activate PDP Context Request message to the network. It specifies a profile for the context identified by the (local) context identification parameter, <cid>.</p> <p>Parameters:</p> <p><cid> - PDP context identification (see +CGDCONT command).</p> <p>The following parameters are defined according to GSM 03.60:</p> <p><precedence> - precedence class <delay> - delay class <reliability> - reliability class <peak> - peak throughput class <mean> - mean throughput class</p> <p>If a value is omitted for a particular class then this class is not checked.</p> |
| Test command AT+CGQREQ=? | Returns parameter values supported as a compound value. |
| Example | <pre>AT+CGQREQ? +CGQREQ: 1,0,0,3,0,0 OK AT+CGQREQ=1,0,0,3,0,0 OK AT+CGQREQ=? +CGQREQ: (0-3),(0-3),(0-5),(0-9),(0-19,31) OK</pre> |
| Reference | GSM 07.07 |
| SW release | Version A |

6.5.8 Commands For Battery Charger

6.5.8.1 +CBC - Battery Charge

| + CBC – Battery Charge | |
|-----------------------------------|---|
| Execute command | |
| Read command AT+CBC | Returns the current Battery Charge status in the format: +CBC: <bc>,<bcl> Parameter: <bc> - battery status 0 - Me is powered by the battery <bcl> - battery charge level 0 - battery is exhausted, or ME does not have a battery connected 25 - battery charge remained is estimated to be 25% 50 - battery charge remained is estimated to be 50% 75 - battery charge remained is estimated to be 75% 100 - battery is fully charged. |
| Write command | |
| Test command AT+CGACT=? | Reports information on the supported PDP context activation states parameters in the format: +CGACT: (0,1) |
| Example | AT+CBC +CBC: 0,75 OK |
| NOTE | The ME does not make differences between being powered by a battery or by a power supply on the VBATT pins, so it is not possible to distinguish between these two cases. |
| Reference | GSM 07.07 |
| SW release | Version A |

6.6 ETSI GSM 07.05 AT Commands for SMS and CB services

6.6.1 General configuration

6.6.1.1 +CSMS - select message service

| +CSMS – select message service | |
|---|---|
| Execute command | |
| Read command AT+CSMS? | <p>Reports the value of the current parameters in the format: +CSMS: <service>,<mt>,<mo>,<cb></p> <p>where:</p> <p><service> - message syntax 0 - SMS syntax as defined in GSM-03.40 and GSM-03.41. AT commands are compatible with GSM 07.05 Phase 2. 1 - SMS syntax as defined in GSM-03.40 and GSM-03.41. AT commands are compatible with GSM 07.05 Phase 2+</p> <p><mt> - Mobile Terminated Messages <mo> - Mobile Originated Messages <cb> - Cell Broadcast Messages 0 - not supported 1 - supported</p> |
| Write command AT+CSMS = <service> | <p>Selects the SMS & CB services command syntax. Parameter:</p> <p><service> = 0 - SMS syntax as defined in GSM-03.40 and GSM-03.41. AT commands are compatible with GSM 07.05 Phase 2. <service> = 1 - SMS syntax as defined in GSM-03.40 and GSM-03.41. AT commands are compatible with GSM 07.05 Phase 2+</p> |
| Test command AT+CSMS=? | Reports the supported value of the parameter <service> = 0. |
| Example | |
| Reference | GSM 07.05 |
| SW release | Version A |

6.6.1.2 +CPMS - preferred message storage

| +CPMS – preferred message storage | |
|--|--|
| Execute command | |
| Read command AT+CPMS? | <p>Reports the message storage status in the format: +CPMS:<memr>,<usedr>,<totalr>,<memw>,<usedw>,<totalw>,<mems>,<useds>,<totals></p> <p>where <memr> , <memw> and <mems> are the selected storage memories for reading, writing and storing respectively.</p> |
| Write command AT+CPMS = <memr>,<memw>,<mems> | <p>Selects memory storages <memr>, <memw> and <mems> to be used for reading, writing, sending and storing received SMS.</p> <p>Parameter:</p> <p><memr> - memory storage for read and delete SMS commands "SM" - SIM SMS memory storage "ME" - Mobile Equipment internal storage (read only, no delete)</p> <p><memw> - memory storage for write and send SMS commands "SM" - SIM SMS memory storage</p> <p><mems> - memory storage for received SMS storing "SM" - SIM SMS memory storage</p> <p>The command returns the memory storage status in the format: +CPMS:<usedr>,<totalr>,<usedw>,<totalw>,<useds>,<totals></p> <p><usedr> - number of SMS stored into <memr> <totalr> - max number of SMS that <memr> can contain <usedw> - number of SMS stored into <memw> <totalw> max number of SMS that <memw> can contain <useds> - number of SMS stored into <mems> <totals> max number of SMS that <mems> can contain</p> <p>Note: The only memory storage for writing and sending supported is the SIM internal memory "SM", so <memw> = <mems> = "SM".</p> <p>Note: the received class 0 SMS are stored in the "ME" memory regardless the <mems> setting and they are automatically deleted at power off.</p> |
| Test command AT+CPMS=? | <p>Reports the supported values of the SMS storage memories in the format: +CPMS: ("ME","SM"), ("SM")</p> |
| Example | <p>AT+CPMS? +CPMS: "SM",5,10,"SM",5,10,"SM",5,10 OK (you have 5 SMS SIM positions occupied of 10)</p> |
| Reference | GSM 07.05 |
| SW release | Version A |

6.6.1.3 +CMGF - message format

| +CMGF –message format | |
|--|---|
| Execute command | |
| Read command AT+CMGF? | Reports the current value of the parameter <mode> = 0. |
| Write command AT+CMGF = <mode> | Selects the SMS format to be used in reading and writing messages. Parameter: <mode> = 0 - PDU as defined in GSM 3.40 and GSM 3.41 <mode> = 1 - text |
| Test command AT+CMGF=? | Reports the supported value of <mode> parameter. |
| Example | |
| Reference | GSM 07.05 |
| SW release | Version A |

6.6.1.4 +CSMP – Set parameters in text mode

| +CSMP –set parameters in text mode | |
|---|--|
| Execute command | |
| Read command AT+CSMP? | Reports the current setting in the format: +CSMP: < fo>,<vp>,<pid>,<dc> |
| Write command AT+CSMP = <fo>,<vp>,<pid>, <dc> | Set the additional parameters for storing and sending SMS when the text mode is used (+CMGF=1) Parameter: <fo>: message format, like defined for the first octet of message according to GSM 3.40 <vp>: Message validity period - numerical if in relative format or string if in absolute format according to GMS 3.40 <pid>: Protocol Identifier – defined by GSM 3.40 – in numerical format <dc>: Data coding Scheme - defined by GSM 3.40 – in numerical format |
| Test command AT+CSMP=? | Reports the supported range of values for <fo>,<vp>,<pid>,<dc> parameters. |
| Example | Set the parameters for an outgoing message with 24 hours of validity period and default properties: AT+CSMP=17,167,0,0 OK |
| Reference | GSM 07.05 |
| SW release | Version A |

6.6.1.5 +CSDH – Show parameters in text mode

| +CSDH –show parameters in text mode | |
|---|--|
| Execute command | |
| Read command AT+CSDH? | Report the current setting in the format: +CSDH: <show> |
| Write command AT+CSDH= <show> | Show the additional parameters of received or stored SMS when the text mode is used (+CMFG=1). Parameter: <show> = 0 - no additional parameters are shown <show> = 1 - parameters set by the +CSCA and +CSMP commands are shown and the length, sender/addressee address of SMS when +CMT, +CMGL, +CMGR commands are utilised |
| Test command AT+CSDH=? | Reports the supported range of values for the parameter <show> |
| Example | |
| Reference | GSM 07.05 |
| SW release | Version A |

6.6.1.6 +CSAS – Save setting text mode

| +CSAS –set saving text mode | |
|---|---|
| Execute command | |
| Read command | |
| Write command AT+CSAS=<profile> | Save setting which have been made by the +CSCA and +CSMP commands in local volatile memory (or in the SIM if it has a dedicated storage for this purpose). Parameter: <profile>: 0...3 - number of profile in which to save the setting. The number 0 corresponds to the non volatile memory, the others correspond to the SIM storage (if available). |
| Test command AT+CSAS=? | Return the possible range of values for the parameter <profile>. |
| Example | |
| Reference | GSM 07.05 |
| SW release | Version A |

6.6.1.7 +CRES – Restore text mode settings

| +CRES –restore text mode settings | |
|---|--|
| Execute command | |
| Read command | |
| Write command AT+CRES = <profile> | Restore any setting saved by +CSAS command for +CSCA and +CSMP commands in local non volatile memory (or in the SIM if it has a dedicated store for this purpose). Parameter: <profile>: 0...3 – number of profile from which to recall the setting. The number 0 corresponds to the non volatile memory, the others correspond to the SIM storage (if available). |
| Test command AT+CRES=? | Return the possible range of values for the parameter <profile>. |
| Example | |
| Reference | GSM 07.05 |
| SW release | Version A |

6.6.1.8 +CSCB – Select Cell Broadcast Message types

| +CSCB –select Cell Broadcast Message types | |
|--|---|
| Execute command | |
| Read command AT+CSCB? | Reports the current value of the parameters <mode>,<misd> and <dcss> in the format: +CSCB: <mode>,<mids>,<dcss> |
| Write command AT+CSCB= <mode>[,<mids>[,<dcss>]] | Selects the Cell Broadcast message types to be received by the device. Parameter: <mode> 0 - the message types defined by <mids> and <dcss> are accepted 1 - the message types defined by <mids> and <dcss> are rejected <mids> : all the possible combinations of the CBM identifiers <dcss> : all the possible combinations of CBM data coding schemes. |
| Test command AT+CSCB=? | Return the possible range of values for the parameter <mode>. |
| Example | AT+CSCB? +CSCB: 1,"","" (all CBMs are accepted, none is rejected) OK AT+CSCB=0,"0,1,300-315,450","0-3" OK |
| Reference | GSM 07.05 |
| SW release | Version A |

6.6.1.9 +CMS ERROR - message service failure result code

This is NOT a command, it is the error response to +Cxxx GSM 07.05 commands

Syntax: AT+CMS ERROR:<err>

Parameter: <err> - error code can be either numeric or verbose.

<err> values:

| <i>Numeric Format</i> | <i>Verbose Format</i> |
|-----------------------|--------------------------------------|
| 0...127 | GSM 04.11 Annex E-2 values |
| 128...255 | GSM 03.40 sub clause 9.2.3.22 values |
| 300 | ME failure |
| 301 | SMS service of ME reserved |
| 302 | operation not allowed |
| 303 | operation not supported |
| 304 | invalid PDU mode parameter |
| 305 | invalid text mode parameter |
| 310 | SIM not inserted |
| 311 | SIM PIN required |
| 312 | PH-SIM PIN required |
| 313 | SIM failure |
| 314 | SIM busy |
| 315 | SIM wrong |
| 316 | SIM PUK required |
| 317 | SIM PIN2 required |
| 318 | SIM PUK2 required |
| 320 | memory failure |
| 321 | invalid memory index |
| 322 | memory full |
| 330 | SMSC address unknown |
| 331 | no network service |
| 332 | network timeout |
| 340 | no +CNMA acknowledgement expected |
| 500 | unknown error |

6.6.2 Message configuration

6.6.2.1 +CSCA - service center address

| +CSCA –service center address | |
|---|---|
| Execute command | |
| Read command AT+CSCA? | <p>Reports the current value of the default SCA in the format: +CSCA: <number>,<type></p> <p>Note: if SCA is not present the device reports an error message.</p> |
| Write command AT+CSCA=<number>,<type> | <p>Sets the Service center Address to be used for mobile originated SMS transmissions.</p> <p>Parameter: <number> - SC phone number in the format defined by <type> <type> - the type of number <type> = 145 - international numbering scheme (contains the character "+") <type> = 129 - national numbering scheme</p> <p>Note: to use the SMS service, is mandatory to set a Service Center Address at which service requests will be directed. SCA depends on the operator, hence contact your operator to set the right SCA. When this address is input, it is stored on the SIM if possible, else will be stored on the device internal memory so, once set, the input of this parameter is not anymore needed.</p> <p>In PDU mode, this setting is used, but only when the length of the SMSC address coded into the <pdu> parameter equals zero; else SCA defined in the PDU will be used instead.</p> |
| Test command | |
| Example | |
| Reference | GSM 07.05 |
| SW release | Version A |

6.6.3 Message receiving and reading

6.6.3.1 +CNMI - new message indications to Terminal Equipment

| +CNMI – new message indications to terminal equipment | |
|---|--|
| <p>Read command AT+CNMI?</p> | <p>Returns the current parameter settings for +CNMI command in the form:</p> <p>AT+CNMI : <mode> , <mt> , <bm> , <ds> , <bfr></p> |
| <p>Write command AT+CNMI=<mode>[,<mt>[,<bm>[,<ds>[,<bfr>]]]]</p> | <p>Selects the behavior of the device on how the receiving of new messages from the network is indicated to the DTE.</p> <p>Parameter:</p> <p><mode>- unsolicited result codes buffering option</p> <p>0 - buffer unsolicited result codes in the TA in case the DTE is busy, e.g. a data call is active meanwhile.</p> <p>1- 1 Discard indication and reject new received message unsolicited result codes when TA-TE link is reserved, otherwise forward them to the TE.</p> <p>2 - buffer unsolicited result codes in the TA in case the DTE is busy and flush them to the TE after reservation. Otherwise report them immediately.</p> <p><mt> result code indication reporting for SMS-DELIVER</p> <p>0 - no SMS-DELIVER indications are reported to the TE.</p> <p>1 - indication of the memory location is reported to the TE using unsolicited result code:</p> <p>+CMTI: <memr>,<index></p> <p>where</p> <p><memr> - memory storage where the new message is stored ("SM" or "ME")</p> <p><index> - location on the memory where SMS is stored</p> <p><bm> - broadcast reporting option</p> <p>0 - Cell Broadcast Messages are not sent to the DTE</p> <p>2 - New Cell Broadcast Messages are sent to the DTE with the unsolicited result code:</p> <p>+CBM: <length><CR><LF><PDU> (in PDU mode)</p> <p>or</p> <p>+CBM:<sn>,<mid>,<dcs>,<pag>,<pags><CR><LF><text> (in text mode)</p> <p>where:</p> <p><length> - PDU length</p> |

| +CNMI – new message indications to terminal equipment | |
|---|--|
| | <p><PDU> - message PDU <sn> - message serial number <mid> - message ID <dcs> - Data Coding Scheme <pag> - page number <pags> - total number of pages of the message <text> - message text</p> <p><ds> - SMS-STATUS-REPORTs reporting option 0 - status report receiving is not reported to the DTE 1 - the status report is sent to the DTE with the unsolicited result code: +CDS: <length><CR><LF><PDU> (PDU mode) or +CDS: <fo>,<mr>,,,<scts>,<dt>,<st> (text mode) 2 - if a status report is stored, then unsolicited result code is sent: +CDSI: <memr>,<index> where <memr> - memory storage where the new message is stored ("SM") <index> - location on the memory where SMS is stored <length> - PDU length <PDU> - message PDU <fo> - first octet of the message PDU <mr> - message reference number <scts> - arrival time of the message to the SC <dt> - sending time of the message <st> - message status as coded in the PDU</p> <p><bfr> - buffered result codes handling method (NOT SUPPORTED) 0 - buffer flushed. (NOT SUPPORTED)</p> <p>Note: DTR signal is ignored, hence the indication is sent even if the DTE is inactive (DTR signal is Low). In this case the unsolicited result code may be lost so if GM862-GPRS remains active while DTE is not, at DTE startup is suggested to check whether new messages have reached the device meanwhile with command AT+CMGL=0 that lists the new messages received.</p> |
| <p>Test command AT+CNMI=?</p> | <p>Reports the supported range of values for the +CNMI command parameters.</p> |

+CNMI – new message indications to terminal equipment

| | |
|------------|-----------|
| Reference | GSM 07.05 |
| SW release | Version A |

6.6.3.2 +CMGL - list messages

+CMGL – list messages

| | |
|--|--|
| Execute command | |
| Read command | |
| Write command AT+CMGL = <stat> | <p>Reports the list of all the messages stored into <memr> (see command +CPMS) memory storage having the status equal to <stat> parameter.</p> <p>Parameter (PDU Mode):</p> <p><stat></p> <ul style="list-style-type: none"> 0 - new message 1 - read message 2 - stored message not yet sent 3 - store message already sent 4 - all messages (applies only to +CMGL command) <p>A report is sent for each message that has to be listed in the format: +CMGL: <index>,<stat>,<length><CR><LF><pdu></p> <p>where</p> <ul style="list-style-type: none"> <index> - message position in the memory storage list. <stat> - status of the message <length> - length of the PDU in bytes <pdu> - message in PDU format according to GSM 3.40 <p>Note: OK message is sent only at the end of the listing.</p> <p>Parameter (Text Mode):</p> <p><stat></p> <ul style="list-style-type: none"> "REC UNREAD" - new message "REC READ" - read message "STO UNSENT" - stored message not yet sent "STO SENT" - store message already sent "ALL" - all messages (applies only to +CMGL command) <p>A report is sent for each message that has to be listed in the format: +CMGL: <index>,<stat>,<oa/da>[,,<tooa/toda>,<length>]<CR><LF><text></p> <p>where</p> <ul style="list-style-type: none"> <index> - message position in the storage <stat> - message status |

| +CMGL – list messages | |
|-----------------------|--|
| | <p><oa/da> - originator/destination number < tooa/toda > - type of number <oa/da> 145 - number in international format (contains the "+") 129 - number in national format <length> - text length <text> - message text For each message delivery confirm a result code is reported in the format: +CMGL: <index>,<stat>,<fo>,<mr>,,<scts>,<dt>,<st> Where <index> - message position in the storage <stat> - message status <fo> - first octet of the message PDU <mr> - message reference number <scts> - arrival time of the message to the SC <dt> - sending time of the message <st> - message status as coded in the PDU</p> |
| Test command | |
| Example | |
| Reference | GSM 07.05 |
| SW release | Version A |

6.6.3.3 +CMGR - read message

| +CMGR – read message | |
|--|---|
| <p>Execute command AT+CMGR = <index></p> | <p>Reports the message with location value <index> from preferred message storage <memr> (see +CPMS) in the format:</p> <p>(PDU Mode) +CMGR: <stat>,<length><CR><LF><pdu> where <stat> - status of the message 0 - new message 1 - read message 2 - stored message not yet sent 3 - store message already sent <length> - length of the PDU in bytes. <pdu> - message in PDU format according to GSM 3.40.</p> <p>(Text Mode) For the sent messages: +CMGR: <stat>,<oa>,,<scts> [,<tooa>,<fo>,<pid>,<dcs>,<sca>,<tosca>,<length>]<CR><LF><text> For the received messages: +CMGR: <stat>,<da>[,<toda>,<fo>,<pid>,<dcs>,,<sca>,<tosca>,<length>]<CR><LF><testo> For the message delivery confirm: +CMGR: <stat>,<fo>,<mr>,,<scts>,<dt>,<st></p> <p>Where: <stat> - status of the message "REC UNREAD" - new received message unread "REC READ" - received message read "STO UNSENT" - message stored not yet sent "STO SENT" - message stored already sent <fo> - first octet of the message PDU <mr> - message reference number <scts> - arrival time of the message to the SC <dt> - sending time of the message</p> |

| | |
|---------------|---|
| | <p><st> - message status as coded in the PDU <pid> - Protocol Identifier <dc> - Data Coding Scheme <oa> - Originator address number <da> - Destination address number <sca> - Service Centre number <toa>,<toda >,<tosca> - type of number <oa>,<da>,<sca> 145 - number in international format (contains the "+") 129 - number in national format <length> - text length <text> - message text</p> <p>The status of the message and entire message data unit <pdu> is returned. If status of the message is 'received unread', status in the storage changes to 'received read'.</p> <p>Parameter: <index> Note: if record number <index> on message storage memory is empty, then an error message will be returned.</p> |
| Read command | |
| Write command | |
| Test command | |
| Example | |
| Reference | GSM 07.05 |
| SW release | Version A |

6.6.4 Message sending and writing

6.6.4.1 +CMGS - send message

| +CMGS – send message | |
|--|--|
| <p>Execute command (<i>PDU Mode</i>) AT+CMGS = <length></p> | <p>(PDU Mode) Sends to the network a SMS message input as a PDU. Parameter: <length> = 8...176 - represents the length of the PDU to be sent in bytes. The device responds to the command with the prompt '>' and awaits for the number of bytes of PDU specified. To complete the operation send Ctrl-Z char (0x1A hexadecimal) , to exit without sending the message send ESC char (0x1B hexadecimal). If message is successfully sent to the network, then the result is sent in the format: +CMGS: <mr> where <mr> is the message reference number. If message sending fails for some reason, an error code is reported.</p> |
| <p>(<i>Text Mode</i>) AT+CMGS=<da></p> | <p>(Text Mode) Sends to the network a SMS message input as a text message. Parameter: <da> = destination address number The device responds to the command with the prompt '>' and awaits for message text (max 160 characters). To complete the operation send Ctrl-Z char (0x1A hexadecimal) , to exit without sending the message send ESC char (0x1B hexadecimal). If message is successfully sent to the network, then the result is sent in the format: +CMGS: <mr> where <mr> is the message reference number. If message sending fails for some reason, an error code is reported.</p> <p>Note: Care must be taken to ensure that during the command execution, which might take several seconds, no other SIM interacting commands are issued.</p> <p>To avoid malfunctions is suggested to wait for the +CMGS:<mr> or +CMS ERROR:<err> response before issuing further commands.</p> |
| <p>Read command</p> | |

| +CMGS – send message | |
|-----------------------------|-----------|
| Write command | |
| Test command | |
| Example | |
| Reference | GSM 07.05 |
| SW release | Version A |

6.6.4.2 +CMSS - send message from storage

| +CMSS – send message from storage | |
|---|--|
| Execute command AT+CMSS = <index> | <p>Sends to the network, the message which is already stored in the <memw> storage (see +CPMS) at the location <index>.</p> <p>Parameter: <index></p> <p>If message is successfully sent to the network, Sends to the network, then the result is sent in the format:</p> <p>+CMSS: <mr></p> <p>where <mr> is the message reference number.</p> <p>If message sending fails for some reason, an error code is reported:</p> <p>+CMS ERROR:<err></p> <p>Note: to store a message in the <memw> storage see command +CMGW.</p> <p>Care must be taken to ensure that during the command execution, which might take several seconds, no other SIM interacting commands are issued.</p> <p>To avoid malfunctions is suggested to wait for the +CMGS:<mr> or +CMS ERROR:<err> response before issuing further commands.</p> |
| Read command | |
| Write command | |
| Test command | |
| Example | |
| Reference | GSM 07.05 |
| SW release | Version A |

6.6.4.3 +CMGW - write message to memory

| +CMGW – write message to memory | |
|---|--|
| <p>Execute command (PDU Mode) AT+CMGW = <length></p> | <p>(PDU Mode) Writes in the <memw> memory storage a new SMS message input as a PDU. Parameter: <length> - represents the length of the PDU to be written in bytes. The device responds to the command with the prompt '>' and awaits for the number of bytes of PDU specified. To complete the operation send Ctrl-Z char (0x1A hexadecimal) , to exit without writing the message send ESC char (0x1B hexadecimal). If message is successfully written in the memory, then the result is sent in the format: +CMGW: <index> where <index> is the message location index in the memory <memw>("SM"). If message storing fails for some reason, an error code is reported</p> |
| <p>(Text Mode) AT+CMGW = [<da>]</p> | <p>(Text Mode) Writes in the <memw> memory storage a new SMS message input as Text. Parameter: <da> - destination address number The device responds to the command with the prompt '>' and awaits for the message text (max 160 characters). To complete the operation send Ctrl-Z char (0x1A hexadecimal) , to exit without writing the message send ESC char (0x1B hexadecimal). If message is successfully written in the memory, then the result is sent in the format: +CMGW: <index> where <index> is the message location index in the memory <memw>("SM"). If message storing fails for some reason, an error code is reported</p> <p>Note: Care must be taken to ensure that during the command execution, no other SIM interacting commands are issued. To avoid malfunctions is suggested to wait for the +CMGS:<mr> or +CMS ERROR:<err> response before issuing further commands.</p> |

| +CMGW – write message to memory | |
|--|-----------|
| Read command | |
| Write command | |
| Test command | |
| Example | |
| Reference | GSM 07.05 |
| SW release | Version A |

6.6.4.4 +CMGD - delete message

| +CMGD – delete message | |
|---|---|
| Execute command AT+CMGD = <index>[,<delflag>] | <p>Deletes from memory the message/messages</p> <p>Note: if the location to be deleted is empty, an error message is reported.</p> <p>Parameter:</p> <p><index> - message position index in the selected storage <memr></p> <p><delflag> - delete mode selection flag</p> <ul style="list-style-type: none"> 0 (or not present) - delete message at position <index> 1 - delete all received read messages 2 - delete all received read and all sent messages 3 - delete all received read and all written sent/unsent messages 4 - delete all messages. |
| Read command | |
| Write command | |
| Test command | |
| Example | |
| Reference | GSM 07.05 |
| SW release | Version A |

6.7 Custom AT Commands

6.7.1 General configuration

6.7.1.1 #CAP - Change Audio Path

| #CAP – change audio path | |
|--|---|
| Execute command AT#CAP = <n> | <p>Switches the active audio path depending on parameter <n></p> <p>Parameter: <n> audio path</p> <ul style="list-style-type: none"> 0 - audio path follows the Axe input (default at start up): <ul style="list-style-type: none"> Axe = low - handsfree enabled Axe = high - internal path enabled 1 - enables handsfree external mic/ear audio path 2 - enables internal mic/ear audio path <p>Note: The audio path are mutually exclusive, enabling one disables the other.</p> <p>When changing the audio path, the volume level is set at the previously stored value for that audio path. (see AT+CLVL).</p> |
| Read command AT#CAP? | Reports the active audio path in the format: #CAP: <n>. |
| Write command | |
| Test command AT#CAP=? | Reports the supported values for the parameter <n>. |
| Example | |
| Reference | Telit GM862-GPRS AT Command Specification |
| SW release | Version A |

6.7.1.2 #SRS - Select ringer sound

| #SRS – select ringer sound | |
|---|--|
| <p>Execute command AT#SRS = <n>[,<timeout>]</p> | <p>Set the ringer sound. The parameters are:</p> <p><n> - ringing tone 0 - current ringing tone 1 .. 12 - ringing tone number</p> <p><timeout> ringing tone playing timeout in seconds. 0 - no ringing tone playing, only tone setting 1 .. 60 - <n> tone playing for <timeout> seconds and successive tone setting.</p> <p>Note: When the command is issued with <timeout> >0, the <n> ringing tone is played for <timeout> seconds and then stored as current tone.</p> <p>If command is issued with <timeout> = 0, the playing of the ringing is stopped (if present) and <n> ringing tone is set as default.</p> <p>If command is issued with <n> = 0 and <timeout> >0 then the default ringing tone is played.</p> <p>If both <n> and <timeout> are 0 then currently playing tone is set as default and ringing is stopped.</p> |
| <p>Read command AT#SRS?</p> | <p>Reports current selected ringing and its status in the form: #SRS: <n>,<status> where: <n> ringing tone number 1 .. 12 <status> ringing status 0 - selected but not playing 1 - currently playing</p> |
| <p>Write command</p> | |
| <p>Test command AT#SRS=?</p> | <p>Reports the supported values for the parameters <n> and <timeout></p> |
| <p>Example</p> | |
| <p>Reference</p> | <p>Telit GM862-GPRS AT Command Specification</p> |
| <p>SW release</p> | <p>Version A</p> |

6.7.1.3 #SRP –Select Ringer Path

| #SRP – select ringer path | |
|--|--|
| Execute command AT#SRP=<n> | <p>Selects the audio path towards whom sending ringer sounds and all signaling tones.</p> <p>Parameter:</p> <p><n> - Ringer path number</p> <ul style="list-style-type: none"> 0 - sound output towards current selected audio path (see command #CAP) 1 - sound output towards handsfree 2 - sound output towards headset 3 - sound output towards Buzzer Output pin GPIO7 <p>Note: In order to use the Buzzer Output an external circuitry must be added to drive it properly from the GPIO7 pin, furthermore the GPIO7 pin direction must be set to Buzzer output (Alternate function) see command #GPIO.</p> |
| Read command AT#SRP? | Reports the current ringer path setting in the format: #SRP:<n>. |
| Write command | |
| Test command AT#SRP=? | Reports the supported values for the parameter <n>. |
| Example | <pre>AT#SRP=? #SRP=(0-3) OK AT#SRP=3 OK</pre> |
| Reference | Telit GM862-GPRS AT Command Specification |
| SW release | Version A |

6.7.1.4 #STM - Signalling Tones Mode

| #STM – signalling tones mode | |
|---|---|
| Execute command | |
| Read command AT#STM? | Reports the current signaling tones status in the format:#STM: <mode> |
| Write command AT#STM = <mode> | Enables/disables the signaling tones output on the audio path selected with #SRP command Parameter : <mode> - signaling tones status <mode> = 0 - signaling tones disabled <mode> = 1 - signaling tones enabled |
| Test command AT#STM=? | Reports supported range of values for <mode> parameter. |
| Example | |
| Reference | Telit GM862-GPRS AT Command Specification |
| SW release | Version B |

6.7.1.5 #PCT – display PIN Counter

| #PCT – display PIN counter | |
|-----------------------------------|---|
| Execute command | |
| Read command AT#PCT? | Reports the PIN/PUK or PIN2/PUK2 input remaining attempts, depending on +CPIN requested password in the format: #PCT: <n> Note: If +CPIN requires the PIN then max 3 attempts are allowed, after that the PUK code is requested; if even PUK is input wrong for other three time then #PCT:0 and SIM remains blocked. |
| Write command | |
| Test command | |
| Example | |
| Reference | Telit GM862 AT-GPRS Command Specification |
| SW release | Version A |

6.7.1.6 #SHDN – Software Shut Down

| #SHDN – software shutdown | |
|-----------------------------------|--|
| Execute command AT#SHDN | <p>After the issuing of this command device detaches from the network and shuts down. Before definitive shut down an OK response is returned.</p> <p>Note: after the issuing of this command any previous activity is terminated and the device will not respond to any further command. To turn it on again Hardware pin ON/OFF must be tied low.</p> |
| Read command | |
| Write command | |
| Test command | |
| Example | |
| Reference | Telit GM862 AT-GPRS Command Specification |
| SW release | Version A |

6.7.1.7 #WAKE – Wake from Alarm mode

| #WAKE – Wake from Alarm Mode | |
|-------------------------------------|--|
| Execute command AT#WAKE=0 | <p>After the issuing of this command device exits the "Alarm mode" and enters the normal operating mode. After entering in normal operating mode an OK response is returned.</p> <p>With the execution of is command all Alarm activity (for example alarm tone playing) is immediately terminated.</p> <p>If the command is issued during the normal operating mode then the only action is to stop Alarm activity, if present, and return OK response.</p> |
| Read command AT#WAKE? | <p>This command returns the operating mode status of the device in the format:</p> <p>#WAKE: <status></p> <p>where:</p> <p><status> - operating mode</p> <ul style="list-style-type: none"> 0 - normal operating mode 1 - alarm mode <p>Note: The "alarm mode" is indicated by hardware pin CTS to the ON status and DSR to the OFF status, while the "power saving" status is indicated by a CTS - OFF and DSR - OFF status. The normal operating status is indicated by DSR - ON.</p> <p>During the "alarm mode" the device will not make any network scan and will not register to any network and therefore is not able to dial or receive any call or SMS, the only commands that can be issued to the GM862-GPRS in this state are the #WAKE and #SHDN, every other command must not be issued during this state.</p> |
| Write command | |
| Test command | |
| Example | |
| Reference | Telit GM862-GPRS AT Command Specification |
| SW release | Version A |

6.7.1.8 #QTEMP –Query Temperature overflow

| #QTEMP – query temperature overflow | |
|---|---|
| Execute command | |
| Read command AT#QTEMP? | <p>Queries the internal temperature sensor of the device for over temperature. The result is reported in the format: #QTEMP:<temp> where <temp> - over temperature indicator <temp> = 0 - device temperature is in the working range <temp> = 1- device temperature is out of the working range, may be too high or too low.</p> <p>Note: The device should not be operated out of its working temperature range; if temperature is out of range proper functioning of the device is not ensured.</p> |
| Write command AT#QTEMP = <mode> | <p>Sets the type of indication. Parameter: <mode> - type of indication 0 - result reported only when querying with #QTEMP? 1 - reserved for future use 2 – reserved for future use</p> |
| Test command #QTEMP=? | Reports supported range of values for <mode> parameter. |
| Example | |
| Reference | Telit GM862-GPRS AT Command Specification |
| SW release | Version A |

6.7.1.9 #SGPO –Set General Purpose Output

| #SGPO – set general purpose output | |
|--|---|
| Execute command | |
| Read command AT#SGPO? | Reports the #SGPO command setting, hence the opposite status of the open collector pin in the format: #SGPO: <stat>. |
| Write command AT#SGPO = <stat> | <p>Sets the value of the general purpose output pin GPIO2 according to <stat> parameter</p> <p>Parameter: <stat></p> <ul style="list-style-type: none"> 0 - output pin cleared to 0 (LOW) 1 - output pin set to 1 (HIGH) <p>Note: The GPIO2 is an OPEN COLLECTOR output, the command sets the transistor base level, hence <u>the open collector output is negated</u>:</p> <p>AT#SGPO= 0 sets the open collector output HIGH AT#SGPO= 1 sets the open collector output LOW</p> <p>A pull up resistor is required on pin GPIO2.</p> |
| Test command AT#SGPO=? | Reports the supported range of values of the command parameter <stat>. |
| Example | |
| Reference | Telit GM862-GPRS AT Command Specification |
| SW release | Version A |

6.7.1.10 #GGPI – Read General Purpose Input

| #GGPI – read general purpose input | |
|---|--|
| Execute command | |
| Read command AT#GGPI? | <p>Reports the read value for the input pin GPIO1 in the format: #GGPI: <dir>,<stat></p> <p>where <dir> direction setting (see #GGPI=<dir>) <stat> - logic value read from pin GPIO1</p> <p>Note: Since the reading is done after the insulating transistor, <u>the reported value is the opposite of the logic status of the GPIO1 input pin.</u></p> |
| Write command AT#GGPI = <dir> | <p>Set the General purpose input pin behavior depending on parameter <dir>.</p> <p>Parameter: <dir> - auxiliary input GPIO1 setting <dir> = 0 - the read command reports the logic input level read from GPIO1 pin. <dir> = 1...255 - reserved for future use</p> <p>Note: The device has an insulated input pin (the input goes the base of an internal decoupling transistor) which can be used as a logic general purpose input. This command sets the read behaviour for this pin, since only direct read report is supported, the issue of this command is not needed.</p> <p>In future uses the behavior of the read input may be more complex.</p> |
| Test command | |
| Example | |
| Reference | Telit GM862-GPRS AT Command Specification |
| SW release | Version A |

6.7.1.11 #GPIO –General Purpose Input/Output pin control

| #GPIO –General Purpose Input/Output pin control | |
|---|---|
| Execute command | |
| Read command AT#GPIO=<pin>,2 | <p>Reports the read value for the pin GPIO<pin> in the format: #GPIO: <dir>,<stat> where <dir> - current direction setting for the GPIO<pin> <stat> - logic value read from pin GPIO<pin> in the case the pin <dir> is set to input; - logic value present in output of the pin GPIO<pin> in the case the pin <dir> is currently set to output; - no meaning value for the pin GPIO<pin> in the case the pin <dir> is set to alternate function;</p> <p>Note for GPIO1: Since the reading is done after the insulating transistor, <u>the reported value is the opposite of the logic status of the GPIO1 input pin.</u></p> |
| Write command AT#GPIO =<pin>,<mode>,<dir> | <p>Sets the value of the general purpose output pin GPIO<pin> according to <dir> and <mode> parameter. Not all configuration for the three parameters are valid.</p> <p>Parameter:</p> <p><pin> - GPIO pin number supported range is from 1 to 7, but GPIO1 is input only and GPIO2 is output only.</p> <p><dir> - GPIO pin direction 0 - pin direction in INPUT 1 - pin direction is OUTPUT 2 - pin direction is ALTERNATE FUNCTION *see Note</p> <p><mode> - its meaning depends on <dir> setting: 0 - no meaning if <dir> = 0 - INPUT - output pin cleared to 0 (LOW) if <dir> = 1 - OUTPUT - no meaning if <dir> = 2 - ALTERNATE FUNCTION</p> |

| | |
|--|---|
| | <p>1 - no meaning if <dir> = 0 - INPUT</p> <ul style="list-style-type: none"> - output pin set to 1 (HIGH) if <dir> = 1 - OUTPUT - no meaning if <dir> = 2 - ALTERNATE FUNCTION <p>2 - Reports the read value from the input pin (see Read command) if <dir> = 0 - INPUT</p> <ul style="list-style-type: none"> - Reports the read value from the input pin (see Read command) if <dir> = 1 - OUTPUT - Reports a no meaning value (see Read command) if <dir> = 2 - ALTERNATE FUNCTION <p>Note: "ALTERNATE FUNCTION" value is valid only for pins GPIO6 - alternate function is "Alarm Output" (see command +CALA) GPIO7 - alternate function is "Buzzer Output" (see command #SRP) While using the pins in the alternate function, the GPIO read/write access to that pin is not accessible and shall be avoided. Note: The GPIO2 is an OPEN COLLECTOR output, the command sets the transistor base level, hence <u>the open collector output is negated</u></p> |
| <p>Test command AT#GPIO=?</p> | <p>Reports the supported range of values of the command parameters <pin>,<mode>,<dir>.</p> |
| <p>Example</p> | <pre>AT#GPIO=3,0,1 OK AT#GPIO=3,2 #GPIO: 1,0 OK AT#GPIO=4,1,1 OK AT#GPIO=5,0,0 OK AT#GPIO=6,2 #GPIO: 0,1 OK AT#GPIO=7,0,0 OK</pre> |
| <p>Reference</p> | <p>Telit GM862-GPRS AT Command Specification</p> |
| <p>SW release</p> | <p>Version A</p> |

6.7.1.12 #MONI – Monitor Cells

| #MONI – monitor cell | |
|--|---|
| Execute command AT#MONI | <p>Reports the available data for cell and dedicated channel (if exists) in the format:</p> <p>#MONI: <netname> BSIC:<bsic> RxQual:<qual> LAC:<lac> Id:<id> ARFCN:<arfcn> PWR:<dBm> dBm</p> <p>or in the case the network name is not known:</p> <p>#MONI: Cc:<cc> Nc:<nc> BSIC:<bsic> RxQual:<qual> LAC:<lac> Id:<id> ARFCN:<arfcn> PWR:<dBm> dBm</p> <p>or in the case in which the data of the adjacent cell are under observation (number>0):</p> <p>#MONI: Adj Cell<n> [LAC:<lac> Id:<id>] ARFCN:<arfcn> PWR:<dBm> dBm</p> <p>where:</p> <p>netname = name of network operator cc = country code nc = network operator code n = progressive number of adjacent cell bsic = base station identification code qual = quality of reception (0-7) lac = localization area code id = cell identifier arfcn = assigned radio channel dBm = received signal strength in dBm</p> |
| Read command | |
| Write command AT#MONI =<number> | <p>Set the neighbor cell to extract data of the cell number <number></p> <p>Parameter: <number></p> |
| Test command AT#MONI=? <i>(Version B)</i> | <p>Reports the available neighbour cells and current cell preset in the format: #MONI: <CellNo, CellSet></p> <p>where:</p> <p><CellNo> - neighbour cells number <CellSet> - cell preset = 0, ..., n where 0 is the serving cell</p> |
| Example | |
| Note | The refresh time of the measures is preset to 3 sec |
| Reference | Telit GM862-GPRS AT Command Specification |
| SW release | Version A |

6.7.1.13 #QSS – Query SIM Status

| #QSS – query SIM status | |
|---|---|
| Execute command | |
| Read command AT#QSS? | <p>Reports the query SIM status in the format: #QSS: <mode>,<status> where <mode>: type of enabled notification <mode> = 0 - query only <mode> = 1 - send unsolicited indication (#USS) every change of state <status>: current SIM status <status> = 0 - SIM NOT INSERTED <status> =1 - SIM INSERTED</p> |
| Write command AT#QSS = <mode> | <p>Set the type of notification. If enabled (mode = 1) at any status change is send: #USS: <status> Parameter: <mode></p> |
| Test command AT#QSS=? | Returns the supported range of values of the parameter <mode>. |
| Example | |
| Reference | Telit GM862-GPRS AT Command Specification |
| SW release | Version A |

6.7.1.14 #ACAL – Set Automatic Call

| #ACAL – set automatic call | |
|--|--|
| Execute command | |
| Read command AT#ACAL? | Returns the current status in the format: #ACAL: <mode> |
| Write command AT#ACAL = <mode> | Enable the automatic call. Parameter: <mode> = 0 – disable <mode> = 1 – enable If enabled, the transition OFF/ON of DTR causes an automatic data call to the number stored in position number 1 of the phone book. The &D command must be set to 2. |
| Test command AT#ACAL=? | Returns the supported range of values of the parameter <mode>. |
| Example | |
| Reference | Telit GM862-GPRS AT Command Specification |
| SW release | Future SW Version |

6.7.1.15 #SMOV – SMS Overflow

| #SMOV – SMS overflow | |
|---|---|
| Execute command | |
| Read command AT#SMOV? | Return the current status in the format: #SMOV: <mode>. |
| Write command AT#SMOV= <mode> | Enable the signalling of SMS overflow Parameter: <mode> = 0 - disable <mode> = 1 - enable If enable, when the maximum storage capacity has come, the #USMO:<memo> network initiated notification is send. |
| Test command AT#SMOV=? | Returns the supported range of values of the parameter <mode>. |
| Example | |
| Reference | Telit GM862-GPRS AT Command Specification |
| SW release | Version A |

6.7.1.16 #SHFEC – Set Handsfree echo canceller

| #SHFEC – set handsfree echo canceller | |
|--|--|
| Execute command | |
| Read command AT#SHFEC? | Return the current status in the format: #SHFEC: <mode>. |
| Write command AT#SHFEC= <mode> | Set echo canceller on audio handsfree output. Parameter <mode>: 0 - disable echo canceller for headset mode (default) 1 - enable, setting for handsfree mode 2...255 reserved Note: This setting returns to default after power off. |
| Test command AT#SHFEC=? | Returns the supported range of values of the parameter <mode>. |
| Example | |
| Reference | Telit GM862-GPRS AT Command Specification |
| SW release | Version A |

6.7.1.17 #HFMICG – Handsfree Microphone Gain

| #HFMICG – handsfree microphone gain | |
|---|--|
| Execute command | |
| Read command AT#HFMICG? | Return the current status of handsfree input gain in the format: #HFMICG: <level> |
| Write command AT#HFMICG = <level> | Set the microphone input gain Parameter: <level>: handsfree microphone input gain 0 - 7 handsfree microphone gain (+6dB/step) 8...255 reserved |
| Test command AT#HFMICG=? | Returns the supported range of values of the parameter <level>. |
| Example | |
| Reference | Telit GM862-GPRS AT Command Specification |
| SW release | Version A |

6.7.1.18 #HSMICG – Handset Microphone Gain

| #HSMICG – handset microphone gain | |
|---|--|
| Execute command | |
| Read command AT#HSMICG? | Return the current status of handset input gain in the format: #HSMICG: <level> |
| Write command AT#HSMICG = <level> | Set the microphone input gain Parameter: <level>: handset microphone input gain 0 - 7 handset microphone gain (+6dB/step) 8...255 reserved |
| Test command AT#HSMICG=? | Returns the supported range of values of the parameter <level>. |
| Example | |
| Reference | Telit GM862-GPRS AT Command Specification |
| SW release | Version A |

6.7.1.19 #SHFSD – Set Handsfree side tone

| #SHFSD – set handsfree side tone | |
|---|---|
| Execute command | |
| Read command AT#SHFSD? | Return the current status in the format: #SHFSD: <mode> |
| Write command AT#SHFSD = <mode> | Set the sidetone on handsfree audio output. Parameter <mode>: 0 - disabled - headset mode (default) 1 - enabled - handsfree mode 2...255 reserved Note: This setting returns to default after power off. |
| Test command AT#SHFSD=? | Returns the supported range of values of the parameter <mode>. |
| Example | |
| Reference | Telit GM862-GPRS AT Command Specification |
| SW release | Version A |

6.7.1.20 #/ – Repeat last command

| #/ – Repeat last command | |
|---------------------------------|--|
| Execute command AT#/# | It is used to execute again the last received command. Note: This command replaces the A/ command |
| Read command | |
| Write command | |
| Test command | |
| Example | |
| Reference | Telit GM862-GPRS AT Command Specification |
| SW release | Version A |

6.7.1.21 #BND – Select Band (DCS 1800 or PCS 1900)

| #BND – Select Band (DCS1800 or PCS1900) | |
|---|--|
| Execute command | |
| Read command AT#BND? | Return the current band selected in the format: #BND: <band> |
| Write command AT#BND = <band> | Set the band parameter to the Band value. Parameter <band>: 0 - DCS 1800MHz 1 - PCS 1900MHz Note: This setting is maintained even after power off. |
| Test command AT#BND=? | Returns the supported range of values of the parameter <band>. |
| Example | |
| Reference | Telit GM862-PCS AT Command Specification |
| SW release | Version A |

6.8 FAX Class 1 Commands

6.8.1 General configuration

6.8.1.1 +FCLASS - select active service class

| +FCLASS - select active service class | |
|--|---|
| Execute command | |
| Read command AT+FCLASS? | Returns the current configuration value of the parameter <n>. |
| Write command AT+FCLASS= <n> | Set the GM862-GPRS in specified connection mode (data, fax, voice), hence all the calls done after, will be data or voice. Parameter: <n>: 0 = data <n>: 1 = fax class 1 <n>: 8 = voice |
| Test command AT+FCLASS=? | Returns all supported values of the parameters <n>. |
| Example | |
| Reference | ITU T.31 and TIA/EIA-578-A specifications / GSM 07.07 |
| SW release | Version A |

6.8.1.2 +FMI – Report manufacturer ID

| +FMI – Report manufacturer ID | |
|--------------------------------------|---|
| Execute command | |
| Read command AT+FMI? | Reports the manufacturer ID |
| Write command | |
| Test command | |
| Example | AT+FMI? Telit Mobile Terminals OK |
| Reference | ITU T.31 and TIA/EIA-578-A specifications |
| SW release | Version A |

6.8.1.3 +FMM? – Report model ID

| +FMM – Report model ID | |
|--------------------------------|---|
| Execute command | |
| Read command AT+FMM? | Reports the model ID |
| Write command | |
| Test command | |
| Example | AT+FMM? GM862-GPRS - GSM900/1800 voice/data/fax module OK |
| Reference | ITU T.31 and TIA/EIA-578-A specifications |
| SW release | Version A |

6.8.1.4 +FMR – Report revision ID

| +FMR – Report revision ID | |
|----------------------------------|---|
| Execute command | |
| Read command AT+FMR? | Reports the software revision ID |
| Write command | |
| Test command | |
| Example | AT+FMR? 1.01.000 CS988 OK |
| Reference | ITU T.31 and TIA/EIA-578-A specifications |
| SW release | Version A |

6.8.2 Transmission/Reception control

6.8.2.1 +FTS – Stop Transmission and pause

| +FTS – Stop transmission and pause | |
|---|---|
| Execute command | |
| Read command | |
| Write command AT+FTS=<time> | This command causes the modem to terminate a transmission and wait for <time> 10 ms intervals before responding with the OK result code. Parameter <time> 0-255 : length of time in 10ms intervals of the pause |
| Test command AT+FTS=? | Returns all supported values of the parameters <time>. |
| Example | |
| Reference | ITU T.31 and TIA/EIA-578-A specifications |
| SW release | Version A |

6.8.2.2 +FRS – Wait for receive silence

| +FRS – Wait for receive silence | |
|---|--|
| Execute command | |
| Read command | |
| Write command AT+FRS=<time> | <p>this command causes the modem to listen and report an OK result code when silence has been detected for the specified period of time.</p> <p>This command when the required silence period is detected or when the DTE sends another character other than XON or XOFF.</p> <p>Parameter <time></p> <p>0-255 : length of time in 10ms intervals of the pause</p> |
| Test command AT+FRS=? | Returns all supported values of the parameters <time>. |
| Example | |
| Reference | ITU T.31 and TIA/EIA-578-A specifications |
| SW release | Version A |

6.8.2.3 +FTM – Transmit data modulation

| +FTM – Transmit data | |
|--|---|
| Execute command | |
| Read command | |
| Write command AT+FTM=<mod> | <p>this command causes the module to transmit facsimile data using the modulation defined by the parameter <mod>.</p> <p>parameter <mod> : carrier modulation</p> <p>24 - V27ter/2400 bps</p> <p>48 - V27ter/4800 bps</p> <p>72 - V29/7200 bps</p> <p>96 - V29/9600 bps</p> |
| Test command AT+FTM=? | Returns all supported values of the parameters <mod>. |
| Example | |
| Reference | ITU T.31 and TIA/EIA-578-A specifications |
| SW release | Version A |

6.8.2.4 +FRM – Receive data modulation

| +FRM – Receive data modulation | |
|--|--|
| Execute command | |
| Read command | |
| Write command AT+FRM=<mod> | <p>this command causes the module to receive facsimile data using the modulation defined by the parameter <mod>.</p> <p>parameter <mod> : carrier modulation</p> <p>24 - V27ter/2400 bps</p> <p>48 - V27ter/4800 bps</p> <p>72 - V29/7200 bps</p> <p>96 - V29/9600 bps</p> |
| Test command AT+FRM=? | Returns all supported values of the parameters <mod>. |
| Example | |
| Reference | ITU T.31 and TIA/EIA-578-A specifications |
| SW release | Version A |

6.8.2.5 +FTH – Transmit data with HDLC framing

| +FTH – Transmit data with HDLC framing | |
|---|--|
| Execute command | |
| Read command | |
| Write command AT+FTH=<mod> | <p>this command causes the module to transmit facsimile data using HDLC protocol and the modulation defined by the parameter <mod>.</p> <p>parameter <mod> : carrier modulation</p> <p>3 - V21/300 bps</p> |
| Test command AT+FTH=? | Returns all supported values of the parameters <mod>. |
| Example | |
| Reference | ITU T.31 and TIA/EIA-578-A specifications |
| SW release | Version A |

6.8.2.6 +FRH – Receive data with HDLC framing

| +FRH – Receive data data with HDLC framing | |
|---|--|
| Execute command | |
| Read command | |
| Write command AT+FRH=<mod> | this command causes the module to receive facsimile data using HDLC protocol and the modulation defined by the parameter <mod>. parameter <mod> : carrier modulation 3 - V21/300 bps |
| Test command AT+FRH=? | Returns all supported values of the parameters <mod>. |
| Example | |
| Reference | ITU T.31 and TIA/EIA-578-A specifications |
| SW release | Version A |

6.8.3 Serial port control

6.8.3.1 +FLO – Select flow control specified by type

| +FLO – Select flow control specified by type | |
|---|--|
| Execute command | |
| Read command | |
| Write command AT+FLO=<type> | Selects the flow control behavior of the serial port in both directions: from DTE to DTA and from DTA to DTE Parameter: <type> - flow control option for the data on the serial port 0 - flow control None 1 - flow control Software (XON-XOFF) 2 - flow control Hardware (CTS-RTS) Note: This command is a shortcut of the +IFC command. |
| Test command AT+FLO=? | Returns all supported values of the parameters <type>. |
| Example | |
| Reference | ITU T.31 and TIA/EIA-578-A specifications |
| SW release | Version A |

6.8.3.2 +FPR – Select serial port rate

| +FPR – Select serial port rate | |
|---|---|
| Execute command | |
| Read command | |
| Write command AT+FPR=<rate> | Selects the the serial port speed in both directions: from DTE to DTA and from DTA to DTE. When autobauding is selected, then the speed is detected automatically. Parameter: <rate> - serial port speed selection 0 - autobauding |
| Test command AT+FPR=? | Returns all supported values of the parameters <rate>. |
| Example | |
| Reference | ITU T.31 and TIA/EIA-578-A specifications |
| SW release | Version A |

6.8.3.3 +FDD – Double escape character replacement control

| +FDD – Double escape character replacement control | |
|---|--|
| Execute command | |
| Read command | |
| Write command AT+FDD=<mode> | This command sets the double escape character replacement behavior of the module depending on the parameter <mode>. Parameter <mode>= 0 DCE decode of <DLE><SUB>: <DLE><DLE> or discard DCE encode of <1/0><1/0>: <DLE><DLE><DLE><DLE> |
| Test command AT+FDD=? | Returns all supported values of the parameters <mode>. |
| Example | |
| Reference | ITU T.31 and TIA/EIA-578-A specifications |
| SW release | Version A |


6.9 Easy GPRS Extension

6.9.1 Overview

The Easy GPRS feature applies only to the **Telit GM862-GPRS** and allows a **Telit GM862-GPRS** user to contact a device in internet and establish with it a raw data flow over the GPRS and Internet networks.

This feature can be seen as a way to obtain a "virtual" serial connection between the Application Software on the Internet machine involved and the controller of the **Telit GM862-GPRS** module, regardless of all the software stacks underlying.

An example of the protocol stack involved in the devices is reported:

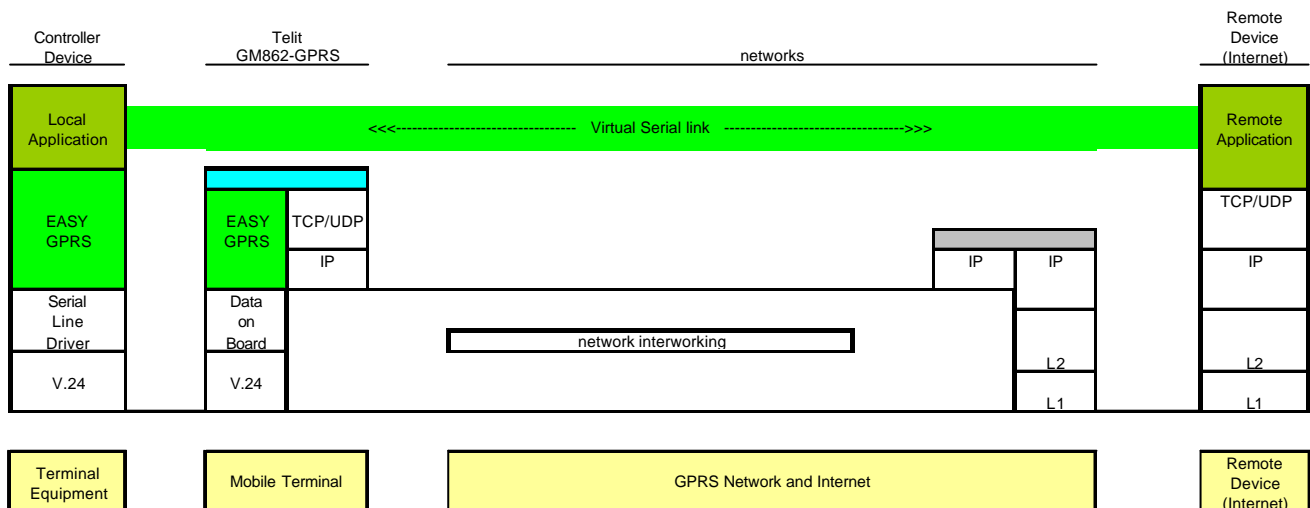

This particular implementation allows to the devices interfacing to the **Telit GM862-GPRS** module the use of the GPRS and Internet packet service without the need to have an internal TCP/IP stack since this function is embedded inside the module.

6.9.2 Easy GPRS definition

The Easy GPRS feature provides a way to replace the need of an Internet TCP/IP stack at the terminal equipment side. The steps that will be required to obtain a virtual serial connection (that is actually a socket) to the Internet peer are:

- configuring the GPRS Access
- configuring the embedded TCP/IP stack behaviour
- defining the Internet Peer to be contacted
- request the GPRS and socket connections to be opened (host is connected)
- exchange raw data
- close the socket and GPRS context

All these steps are achieved through AT commands.

As for common modem interface, two logical status are involved: command mode and data traffic mode.

- In Command Mode (CM), some AT commands are provided to configure the Data Module Internet stack and to start up the data traffic.
- In data traffic mode (Socket Mode, SKTM), the client can send/receive a raw data stream which will be encapsulated in the previously configured TCP / IP packets which will be sent to the other side of the network and viceversa. Control plane of ongoing socket connection is deployed internally to the module.

6.9.2.1 Configuring the GPRS access

The GPRS access configuration is done by setting:

- the GPRS context number 1 parameters (see +CGDCONT command)
- the Authentication parameters: User Name and Password (see commands #USERID, #PASSW)

6.9.2.2 Configuring the embedded TCP/IP stack

The TCP/IP stack behaviour must be configured by setting:

- the packetizer default packet size (see command #PKTSZ)
- the data sending timeout (see command #DSTO)
- the socket inactivity timeout (see command #SKTTO)

6.9.2.3 Defining the Internet peer to be contacted

As last setting definition, the host to be contacted and on which port/protocol must be set :

- the socket definition (see command #SKTSET)

This command permits also to specify the host name instead of its IP address, if a host name is given to the set command, then the module stores it as a host nick name. It is care of the module user to guarantee that the host nick name provided corresponds to an existing internet peer.

If an host nick name has been given then, while opening the connection in response to the AT#SKTOP command, the module will autonomously activate a GPRS connection and query its DNS to obtain the IP address relative to the host nick name provided. This process of context activation and DNS query may require a bit more time and requires that the GPRS network coverage is good enough to permit data transfers.

6.9.2.4 Open the connection with the internet host

With the AT#SKTOP all the process required to connect with the internet host starts:

- GM862-GPRS activates the first context
- GM862-GPRS proceeds to the authentication with the parameters specified on par. 6.9.2.1
- Eventually does the DNS query to resolve the IP address of the host name internet peer

- GM862-GPRS establishes a TCP/UDP (depending on the parameter request) connection with the given internet host
- Once the connection is up the module reports the code: CONNECT

From this moment the data incoming in the serial port is packet and sent to the Internet host, while the data received from the host is serialised and flushed to the Terminal Equipment.

6.9.2.5 Close the Socket and deactivate the context

The connection can be closed because of:

- remote host TCP connection close
- socket inactivity timeout
- Terminal Equipment by issuing the escape sequence "+++"
- Network deactivation

Note: if in the raw data to be sent there's an escape sequence, then the TE must work it out and sent it in a different fashion to guarantee that the connection is not closed.

The pause time is defined in the parameter S12.

On the reception of an escape sequence the GM862-GPRS closes the connection, deactivates the GPRS context returning to command mode and issuing the NO CARRIER code.

6.9.3 Known limitations

The implementation of the EASY GPRS feature has the following known limitations:

- Only one socket can be opened at a time, no multiple socket connections can be made;
- Only the first GPRS context is associated with this feature;
- The closing of a socket implies always the deactivation of the GPRS context associated;
- It is taken for granted that external processor will be able to handle at least a limited v.24 implementation: RTS, CTS and, highly recommended, DCD lines; this because software flow control is not applicable to the feature;
- Only Mobile initiated connections can be made, it is not possible to receive incoming TCP connection requests;
- Due to the particularity of this feature, the flow control of both the directions uplink and downlink is interlocked

6.9.4 Easy GPRS custom AT command Definition

6.9.4.1 #USERID – Authentication User ID control

| #USERID – Authentication User ID control | |
|--|---|
| Execute command | |
| Read command AT#USERID? | Reports the current value of the parameter <user>. |
| Write command AT#USERID="<user>" | This command sets the user identification string to be used during the authentication step to be the string <user>. Parameter: <user> - authentication User ID - any string value up to max length reported in the Test command. |
| Test command AT#USERID=? | Returns the maximum allowed length of the string parameter <user>. |
| Example | AT#USERID = "myName" OK AT#USERID? #USERID: "myName" OK |
| Reference | Telit specifications |
| SW release | Version C |

6.9.4.2 #PASSW – Authentication Password control

| #PASSW – Authentication Password control | |
|--|--|
| Execute command | |
| Read command AT#PASSW=? | Reports the maximum password length. |
| Write command AT#PASSW="<pwd>" | <p>This command sets the user password string to be used during the authentication step to be the string <pwd>.</p> <p>Parameter:</p> <ul style="list-style-type: none"> <pwd> - authentication password - any string value up to max length reported in the Test command. |
| Test command | No test command allowed, for password security |
| Example | <pre>AT#PASSW = "myPassword" OK</pre> |
| Reference | Telit specifications |
| SW release | Version C |

6.9.4.3 #PKTSZ –Packet Size control

| #PKTSZ –Packet Size control | |
|---|---|
| Execute command | |
| Read command AT#PKTSZ? | Reports the current value of the parameter <size>. |
| Write command AT#PKTSZ=<size> | This command sets the default packet size to be used by the TCP/UDP/IP stack for data sending. Parameter: <size> - packet size in bytes 0 - automatically chosen by the device 1...512 - packet size in bytes |
| Test command AT#PKTSZ=? | Returns the allowed values for the parameter <size>. |
| Example | AT#PKTSZ = 100 OK AT#PKTSZ? #PKTSZ: 100 OK |
| Reference | Telit specifications |
| SW release | Version C |

6.9.4.4 #DSTO – Data Sending Timeout control

| #DSTO –Data Sending Timeout control | |
|--|---|
| Execute command | |
| Read command AT#DSTO? | Reports the current value of the parameter <time>. |
| Write command AT#DSTO=<time> | <p>This timeout applies when the data to be sent is less than one full packet size and whose sending would have been delayed for a undefined time until new data to be sent is received and the full packet size is reached.</p> <p>This command sets the maximum time that the module awaits before sending anyway a packet whose size is less than the default one.</p> <p>Parameter: <time> - packet sending timeout in 100ms units 0 - no timeout, wait forever for packets to be completed before send. 1...255 hundreds of ms</p> |
| Test command AT#DSTO=? | Returns the allowed values for the parameter <time>. |
| Example | <pre>AT#DSTO = 10 (1 sec. Timeout) OK AT#DSTO? #DSTO: 10 OK</pre> |
| NOTE | In order to avoid possible low performances issues, it is suggested to set the <time> parameter to a value greater than 5 |
| Reference | Telit specifications |
| SW release | Version C |

6.9.4.5 #SKTTO – Socket inactivity timeout control

| #SKTTO – Socket inactivity timeout control | |
|---|---|
| Execute command | |
| Read command AT#SKTTO? | Reports the current value of the parameter <time>. |
| Write command AT#SKTTO=<time> | <p>This timeout applies when the no data is exchanged in the socket for a long time and therefore the socket connection is automatically closed and the GPRS context deactivated.</p> <p>This command sets the maximum time that the module awaits without data exchange on the socket before closing the socket and deactivating the GPRS context.</p> <p>Parameter: <time> - socket inactivity timeout in seconds units 0 - no timeout. 1...65535 s</p> |
| Test command AT#SKTTO=? | Returns the allowed values for the parameter <time>. |
| Example | <pre>AT#SKTTO = 30 (30 sec. Timeout) OK AT#SKTTO? #SKTTO: 30 OK</pre> |
| Reference | Telit specifications |
| SW release | Version C |

6.9.4.6 #SKTSET – Socket definition control

| #SKTSET – Socket definition control | |
|--|---|
| Execute command | |
| Read command AT#SKTSET? | Reports the current value of the parameters <socket type>,<remote port>, <remote address>. |
| Write command AT#SKTSET=<socket type>, <remote port>, "<remote address>" | This command sets the socket parameters values. Parameter: <socket type> - socket protocol type 0 - TCP 1 - UDP <remote port> - remote host port to be opened 0...65535 - port number <remote address> - address of the remote host this parameter can be either: - any valid IP address in the format: xxx.xxx.xxx.xxx - any host name to be solved with a DNS query in the format: <host name> |
| Test command AT#SKTSET=? | Returns the allowed values for the parameters. |
| Example | AT#SKTSET = 0,1024,"123.124.020.007" OK Or AT#SKTSET=0,1024,"www.telit.net" OK |
| NOTE | The resolution of the host name is done when opening the socket, therefore if an invalid host name is given to the #SKTSET command, then no error message will be issued to the #SKTSET command. The DNS Query to be successful requests that: - the GPRS context 1 is correctly set with AT+CGDCONT - the authentication parameters are set (#USERID, #PASSW) - the GPRS coverage is enough to permit a connection |
| Reference | Telit specifications |
| SW release | Version C |

6.9.4.7 #SKTOP – Socket Open command

| #SKTOP – Socket Open Command | |
|------------------------------------|--|
| Execute command AT#SKTOP | Activates the context number 1, proceeds with the authentication with the user ID and password previously set with #USERID #PASSW commands, and opens a socket connection with the host specified in the #SKTSET command. Eventually before opening the socket connection it issues automatically a DNS query to solve the IP address of the host name. If the connection succeeds a CONNECT indication is sent, otherwise a NO CARRIER indication is sent. |
| Read command | |
| Write command | |
| Test command | |
| Example | AT#SKTOP ... GPRS context activation, authentication and socket open... CONNECT |
| Reference | Telit specifications |
| SW release | Version C |

6.9.4.8 #QDNS – Query DNS

| #QDNS – Query DNS | |
|--|---|
| Execute command AT#QDNS=<host name>" | This command activates a context, authenticates and proceeds to execute a DNS query to solve the host name into an IP address. If the DNS query is successful then the IP address will be reported in the result code: #QDNS:<host name>,< IP address> the <IP address> is in the format: xxx.xxx.xxx.xxx else #QDNS:<host name>, NOT SOLVED |
| Read command | |
| Write command | |
| Test command | |
| NOTE | This command requires that the first context parameters, the authentication par. are correctly set and that the GPRS network is present. |
| Reference | Telit specifications |
| SW release | Version C |

6.9.4.9 #SKTSAV – Socket Parameters Save Command

| #SKTSAV – Socket Parameters Save Command | |
|---|---|
| Execute command AT#SKTSAV | Saves the actual Parameters of the Socket in the NVM of the device. The values stored are: <ul style="list-style-type: none"> - User Name - Password - Packet Size - Socket inactivity timeout - Data sending timeout - Socket type (UDP/TCP) - Remote port - Remote address |
| Read command | |
| Write command | |
| Test command | |
| Example | AT#SKTSAV OK ...socket parameters have been saved in NVM |
| Note | If some parameters have not been previously specified then a default value will be taken. |
| Reference | Telit specifications |
| SW release | Version C |

6.9.4.10 #SKTRST – Socket Parameters Reset Command

| #SKTRST – Socket Parameters Reset Command | |
|--|---|
| Execute command AT#SKTRST | Resets the actual Parameters of the Socket in the NVM of the device to the default ones. The values reset are: <ul style="list-style-type: none"> - User Name (none) - Password (none) - Packet Size - Socket inactivity timeout - Data sending timeout - Socket type (UDP/TCP) - Remote port (none) - Remote address (none) |
| Read command | |
| Write command | |
| Test command | |
| Example | AT#SKTRST OK ...socket parameters have been reset |
| Reference | Telit specifications |
| SW release | Version C |

6.10 Easy Camera custom commands

6.10.1 Camera management

6.10.1.1 #CAMON – Camera ON

| #CAMON – Camera ON Command | |
|------------------------------------|---|
| Execute command AT#CAMON | Turns ON the Camera. |
| Read command | |
| Write command | |
| Test command | |
| Example | AT#CAMON OK ... camera is now powered up. |
| Reference | Telit specifications |
| SW release | Version D |

6.10.1.2 #CAMOFF – Camera OFF

| #CAMOFF – Camera off Command | |
|-------------------------------------|--|
| Execute command AT#CAMOFF | Turns OFF the Camera. |
| Read command | |
| Write command | |
| Test command | |
| Example | AT#CAMOFF OK ... camera is now powered down. |
| Reference | Telit specifications |
| SW release | Version D |

6.10.1.3 #TPHOTO – Camera Take Photo

| #TPHOTO – Camera Take Photo Command | |
|--|---|
| Execute command AT#TPHOTO | Commands the CAMERA to take the photo and stores it in the GM862 memory. |
| Read command | |
| Write command | |
| Test command | |
| NOTE | <p>The photo is kept in the GM862-PCS RAM memory, therefore after a power off it is lost.</p> <p>There's only 1 position for the photo, every photo will overwrite the previous.</p> <p>The photo is taken during IDLE time, if the mobile is busy on network operations, (e.g. during a call) the photo cannot be taken.</p> |
| Example | <p>AT#TPHOTO</p> <p>OK</p> <p>... the camera has taken the photo and it is now stored on the GM862 memory.</p> |
| Reference | Telit specifications |
| SW release | Version D |

6.10.1.4 #RPHOTO – Camera Read Photo

| #RPHOTO – Camera Read Photo Command | |
|--|--|
| Execute command AT#RPHOTO | After this command the GM862 starts to flush the photo in its memory to the serial line, ending it with the Ok code.. |
| Read command | |
| Write command | |
| Test command | |
| NOTE | The photo is flushed as hexadecimal characters in the format selected. |
| Example | <p>AT#RPHOTO</p> <p>xxxxxxxxxxxx (binary digits of the JPEG image)</p> <p><cr><lf>OK<cr><lf></p> <p>... the photo has been flushed to the serial line.</p> |
| Reference | Telit specifications |
| SW release | Version D |

6.10.1.5 #CAMQUA – Camera Select Quality of Photo

| #CAMQUA - Camera Select Quality of Photo | |
|--|---|
| Execute command | |
| Read command AT#CAMQUA? | Reports the current value of the parameter <qual> |
| Write command AT#CAMQUA=<qual> | This command sets the quality of the photo stored on the memory of the GM862-PCS Parameter: <qual> - photo quality 0 - low (Jpeg compression high - low quality of picture) 1 - medium (Jpeg compression medium - med. quality of picture) 2 - high (Jpeg compression low - high quality of picture) - default |
| Test command AT#CAMQUA=? | Returns the allowed values for the parameters. |
| NOTE | Increasing the photo quality increases its size. |
| Example | AT#CAMQUA=2 OK |
| Reference | Telit specifications |
| SW release | Version D |

6.10.1.6 #CMODE – Camera Select Operating MODE

| #CMODE - Camera Select Operating MODE | |
|---|--|
| Execute command | |
| Read command AT#CMODE? | Reports the current value of the parameter <mode> |
| Write command AT#CMODE=<mode> | This command sets the operating mode of the GM862-PCS camera Parameter: <mode> - camera operating mode 0 - daylight (short exposure) - default 1 - nightlight (long exposure) |
| Test command AT#CMODE=? | Returns the allowed values for the parameters. |
| Example | AT#CMODE=0 OK |
| Reference | Telit specifications |
| SW release | Version D |

6.10.2 Email management

6.10.2.1 #ESMTP – Email SMTP server

| 6.10.2.1 #ESMTP – Email SMTP server | |
|---|--|
| Execute command | |
| Read command AT#ESMTP? | Reports the current value of the parameter <smtp> |
| Write command AT#ESMTP="<smtp>" | This command sets the SMTP server used for EMAIL sending. SMTP server can be specified as IP address or as nick name. Parameter: <smtp> - SMTP server address this parameter can be either: <ul style="list-style-type: none"> - any valid IP address in the format: xxx.xxx.xxx.xxx - any host name to be solved with a DNS query in the format: <host name> |
| Test command AT#ESMTP=? | Returns the max character length for the parameter. |
| Example | AT#ESMTP="smtp.mydomain.com" OK |
| Reference | Telit specifications |
| Note | The SMTP server used shall be inside the APN space (the smtp server provided by the network operator) or it must allow the Relay, otherwise it will refuse to send the email. |
| SW release | Version D |

6.10.2.2 #EADDR – Email sender address

| 6.10.2.2 #EADDR – Email sender address | |
|--|---|
| Execute command | |
| Read command AT#EADDR? | Reports the current value of the parameter <e-add> |
| Write command AT#EADDR="<e-add>" | This command sets the sender address string to be used for sending the Email. Parameter: <e-add> - sender address - any string value up to max length reported in the Test command. By default "" |
| Test command AT#EADDR=? | Returns the maximum allowed length of the string parameter <e-add>. |
| Example | AT#EADDR = "me@email.box.com" OK AT#EADDR? #EADDR: " me@email.box.com " OK |
| Reference | Telit specifications |
| SW release | Version D |

6.10.2.3 #EUSER – Email authentication USER NAME

| 6.10.2.2 #EUSER – Email authentication USER NAME | |
|---|--|
| Execute command | |
| Read command AT#EUSER? | Reports the current value of the parameter <e-user> |
| Write command AT#EUSER="<e-user>" | This command sets the user identification string to be used during the authentication step of the SMTP to be the string <e-user>. Parameter: <e-user> - authentication User ID for email - any string value up to max length reported in the Test command. By default "" |
| Test command AT#EUSER=? | Returns the maximum allowed length of the string parameter <e-user>. |
| Example | AT#USERID = "myE-Name" OK AT#USERID? #USERID: "myE-Name" OK |
| Reference | Telit specifications |
| Note | If no authentication is required then the e-user parameter shall be empty "". Note that it is a different user field than the one used for GPRS authentication (see AT#USERID). |
| SW release | Version D |

6.10.2.4 #EPASSW – Email authentication PASSWORD

| 6.10.2.2 #EPASSW – Email authentication PASSWORD | |
|---|--|
| Execute command | |
| Read command | |
| Write command AT#EPASSW="<e-pwd>" | <p>This command sets the user identification string to be used during the authentication step of the SMTP to be the string <user>.</p> <p>Parameter:</p> <p><e-pwd> - authentication Password for Email</p> <ul style="list-style-type: none"> - any string value up to max length reported in the Test command. <p>By default ""</p> |
| Test command AT#EPASSW=? | Returns the maximum allowed length of the string parameter <e-pwd>. |
| Example | <p>AT#USERID = "myPassword"</p> <p>OK</p> |
| Reference | Telit specifications |
| Note | <p>If no authentication is required then the e-pwd parameter shall be empty "".</p> <p>Note that it is a different pwd field than the one used for GPRS authentication (see AT#PASSW).</p> |
| SW release | Version D |

6.10.2.5 #SEMAIL - Send Email

| #SEMAIL - Send Email | |
|---|---|
| <p>Execute command AT#SEMAIL = "<da>","<subj>",<att>"</p> | <p>Sends an Email message .</p> <p>Parameter:</p> <p><da> - destination address <subj> - subject of the message <att> - attach image flag</p> <p>0 - don't attach any image 1 - attach the snapshot taken (must be already been taken...)</p> <p>The device responds to the command with the prompt >' and awaits for the message body text.</p> <p>To complete the operation send Ctrl-Z char (0x1A hexadecimal) , to exit without writing the message send ESC char (0x1B hexadecimal). If email message is successfully sent, then the response is OK. If message sending fails for some reason, an error code is reported</p> <p>Note: Care must be taken to ensure that during the command execution, no other commands are issued.</p> <p>To avoid malfunctions is suggested to wait for the OK or ERROR/+CMS ERROR:<err> response before issuing further commands.</p> <p>Note: sending a mail with an image attachment can take quite a long time since it can be over 50Kb to send and can take over 1 minute.</p> |
| Read command | |
| Write command | |
| Test command | |
| <p>Example</p> | <p>AT#SEMAIL="me@myaddress.com","subject of the mail",1</p> <p>➤ message body... this is the text of the mail message...</p> <p>CTRL-Z</p> <p>..wait..</p> <p>OK</p> <p>Message has been sent.</p> |
| Reference | Telit specifications |
| SW release | Version D |

7 Conformity Assessment Issues

The **Telit GM862-PCS/-GPRS/-GSM modules** are assessed to be conform to the R&TTE Directive as stand-alone products, so If the module is installed **in conformance with Dai Telecom installation instructions** require no further evaluation under Article 3.2 of the R&TTE Directive and do not require further involvement of a R&TTE Directive Notified Body for the final product.

In all other cases, or if the manufacturer of the final product is in doubt then the equipment integrating the radio module must be assessed against Article 3.2 of the R&TTE Directive.

In all cases assessment of the final product must be made against the Essential requirements of the R&TTE Directive Articles 3.1(a) and (b), safety and EMC respectively, and any relevant Article 3.3 requirements.

The **Telit GM862-PCS/-GPRS/-GSM modules** are conform with the following European Union Directives:

- ☞ R&TTE Directive 1999/5/EC (Radio Equipment & Telecommunications Terminal Equipments)
- ☞ Low Voltage Directive 73/23/EEC and product safety
- ☞ Directive 89/336/EEC for conformity for EMC

In order to satisfy the essential requisite of the R&TTE 99/5/EC directive, the GM862PCS module is compliant with the following standards:

- GSM (Radio Spectrum). Standard: EN 301 511 and 3GPP 51.010-1
- EMC (Electromagnetic Compatibility). Standards: EN 301 489-1 and EN 301 489-7
- LVD (Low Voltage Directive) Standards: EN 60 950

In this document and the Hardware User Guide, Software User Guide all the information you may need for developing a product meeting the R&TTE Directive is included.

Furthermore the **Telit GM862-PCS module** is FCC Approved as module to be installed in other devices. This device is to be used only for fixed and mobile applications. If the final product after integration is intended for portable use, a new application and FCC is required.

The **Telit GM862-PCS module** is conform with the following US Directives:

- ☞ Use of RF Spectrum. Standards: FCC 47 Part 24 (GSM 1900)
- ☞ EMC (Electromagnetic Compatibility). Standards: FCC47 Part 15

To meet the FCC's RF exposure rules and regulations:

- The antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all the persons and must not be co-located or operating in conjunction with any other antenna or transmitter.
- The antenna(s) used for this module must not exceed 7 dBi for mobile and fixed or mobile operating configurations.
- Users and installers must be provided with antenna installation instructions and transmitter operating conditions for satisfying RF exposure compliance.

Manufacturers of mobile, fixed or portable devices incorporating this module are advised to clarify any regulatory questions and to have their complete product tested and approved for FCC compliance.

7.1 GM862-GPRS: Conformity Assessment



DAI TELECOM S.p.A.
Dai Telecom Group

DECLARATION OF CONFORMITY

We, **Dai Telecom SpA**

Of: **V.le Stazione di Prosecco 5/b
34010 Sgonico TS
Italy**

declare under our sole responsibility that the product

GSM/GPRS 900/ 1800 Data Module type GM862GPRS

to which this declaration relates is in conformity with all the essential requirements of Directive 1999/05/EC

We hereby also declare that all essential [radio] test suites have been carried out and that the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex IV of Directive 1999/5/EC has been followed with the involvement of the following Notified Body:


**BABT, Claremont House, 34 Molesey Road, Walton-on-Thames, KT12 4RQ,
UK**

Identification mark: **0168**

The technical documentation relevant to the above equipment will be held at:



**Dai Telecom SpA
V.le Stazione di Prosecco 5/b
34010 Sgonico TS
Italy**

Trieste, **28/10/2003**


**Andrea Antonel
(Quality System Manager)**





7.2 GM862-GSM: Conformity Assessment

| | |
|---|--|
|  DAI TELECOM SpA Dai Telecom Group | DECLARATION OF CONFORMITY |
| We, <i>Dai Telecom SpA</i> | |
| Of: <i>V.le Stazione di Prosecco 5/b 34010 Sgonico TS Italy</i> | |
| declare under our sole responsibility that the product <i>GSM/GPRS 900/ 1800 Data Module type GM862GSM</i> | |
| to which this declaration relates is in conformity with all the essential requirements of Directive 1999/05/EC | |
| We hereby also declare that all essential [radio] test suites have been carried out and that the above named product is in conformity to all the essential requirements of Directive 1999/5/EC. | |
| The conformity assessment procedure referred to in Article 10 and detailed in Annex IV of Directive 1999/5/EC has been followed with the involvement of the following Notified Body: | |
| BAPT, Claremont House, 34 Molesey Road, Walton-on-Thames, KT12 4RQ, UK | |
| Identification mark: | 0168 |
| The technical documentation relevant to the above equipment will be held at: <i>Dai Telecom SpA V.le Stazione di Prosecco 5/b 34010 Sgonico TS Italy</i> | |
| Date: | <i>28/10/2003</i> |
| |  Andrea Antonel (Quality System Manager) |



7.3 GM862-PCS: Conformity Assessment

| | |
|---|--|
|  DAI TELECOM S.p.A. Dai Telecom Group | DECLARATION OF CONFORMITY |
| We, Dai Telecom SpA | |
| Of: V.le Stazione di Prosecco 5/b 34010 Sgonico TS Italy | |
| declare under our sole responsibility that the product GSM/GPRS/PCS 900/ 1800/1900 Data Module type GM862PCS | |
| to which this declaration relates is in conformity with all the essential requirements of Directive 1999/05/EC | |
| We hereby also declare that all essential [radio] test suites have been carried out and that the above named product is in conformity to all the essential requirements of Directive 1999/5/EC. | |
| The conformity assessment procedure referred to in Article 10 and detailed in Annex IV of Directive 1999/5/EC has been followed with the involvement of the following Notified Body: | |
| BABT, Claremont House, 34 Molesey Road, Walton-on-Thames, KT12 4RQ, UK | |
| Identification mark: | 0168 |
| The technical documentation relevant to the above equipment will be held at: | |
| Dai Telecom SpA V.le Stazione di Prosecco 5/b 34010 Sgonico TS Italy | |
| Trieste, 18/11/2003 |  Andrea Antonel (Quality System Manager) |

MOD.003 08/03 REV.5



Accredited by the
Council for
Accreditation



Certificate

This certificate is issued to

DAI Telecom S.p.A

of

Viale Stazione di Prosecco 5/B
Trieste
34010
Italy

to certify that the Equipment known as

GM862PCS

conforms to the essential requirements of the Council Directive 1999/5/EC of the European Parliament and of the Council on the basis of the Technical Construction File number 19296_GM862PCS_rev1 in relation to the essential requirements of Articles 3.1(a), 3.1(b) & 3.2 of the Directive.

Signed:

On Behalf of BABT

Issue Date: 11 December 2003

Number: NC/12058 Issue: 01

This certificate is issued by BABT.

The conditions for the validity of this certificate, if any, are listed in the Annex.
This certificate is not transferable and remains the property of BABT.

BABT, Clement House, 34 Molesey Road, Walton-On-Thames, Surrey KT12 4RQ, U.K.
National Tel: 01932 231231 Fax: 01932 231232
International Tel: +44 1932 231231 Fax: +44 1932 231232
Web address: <http://www.babt.com> email: Customer.Services@babt.com

7.4 GM862-PCS FCC Equipment Authorization

TCB

GRANT OF EQUIPMENT
AUTHORIZATION

TCB

Certification
Issued Under the Authority of the
Federal Communications Commission
By:

CETECOM ICT Services GmbH
Untertuerkheimer Strasse 6-10
D-66117 Saarbruecken,

Date of Grant: 12/15/2003
Application Dated: 12/15/2003

DAI Telecom S.p.A
Viale Stazione di Prosecco 5/b
Trieste, 34010
Italy

Attention: Andrea Fragiacomò , Ing.


NOT TRANSFERABLE

EQUIPMENT AUTHORIZATION is hereby issued to the named GRANTEE, and is VALID ONLY for the equipment identified hereon for use under the Commission's Rules and Regulations listed below.

| | |
|-------------------------|--------------------------|
| FCC IDENTIFIER: | R17GM862P |
| Name of Grantee: | DAI Telecom S.p.A |
| Equipment Class: | PCS Licensed Transmitter |
| Notes: | GSM Module |

| <u>Grant Notes</u> | <u>FCC Rule Parts</u> | <u>Frequency Range (MHZ)</u> | <u>Output Watts</u> | <u>Frequency Tolerance</u> | <u>Emission Designator</u> |
|--------------------|-----------------------|------------------------------|---------------------|----------------------------|----------------------------|
| | 24E | 1850.2 - 1909.8 | 0.845 | 0.0537 PM | 300KGXW |

Module Approval. Power Output listed is conducted. The antenna gain, including cable loss, must not exceed 7 dBi for fixed-mounted or mobile operating configurations, as defined in 2.1091 and 1.1307 of the rules for satisfying RF exposure compliance. Separate approval is required for portable operating configurations, as defined in 2.1093 of the rules. The final product operating with this transmitter must include operating instructions and applicable warnings, as described in this filing, for end-users and installers to satisfy RF exposure compliance requirements. OEM integrators must be informed of the specific requirements. This module contains 900 MHz and 1800 MHz GSM functions that are not operational in U.S. Territories. This filing is only applicable to GSM 1900 MHz operations.

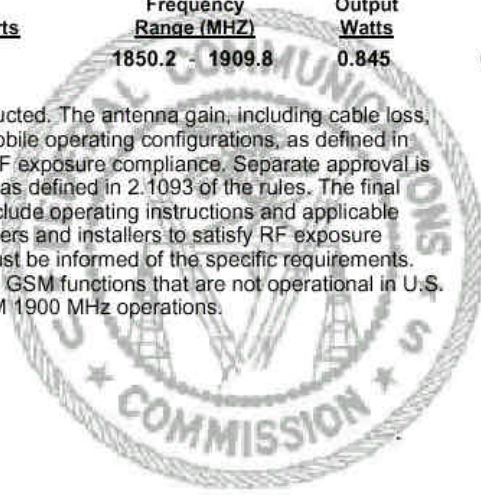

8 GM862-GPRS Technical Support

Telit technical support to **Telit GM862-PCS/GPRS/GSM modules** customer is included into the dedicated Website (www.GM862.com) and official Website (www.telit.net) which contains also all available technical documentation download, application examples, Telit engineering support accessible via selective E-Mail (ts-gm862@telital.com) service with 24 hr replies assured.

9 List of acronyms

| | |
|--------------|--|
| ACM | Accumulated Call Meter |
| ASCII | American Standard Code for Information Interchange |
| AT | Attention commands |
| CB | Cell Broadcast |
| CBS | Cell Broadcasting Service |
| CCM | Call Control Meter |
| CLIP | Calling Line Identification Presentation |
| CLIR | Calling Line Identification Restriction |
| CMOS | Complementary Metal-Oxide Semiconductor |
| CR | Carriage Return |
| CSD | Circuit Switched Data |
| CTS | Clear To Send |
| DAI | Digital Audio Interface |
| DCD | Data Carrier Detected |
| DCE | Data Communications Equipment |
| DRX | Data Receive |
| DSR | Data Set Ready |
| DTA | Data Terminal Adaptor |
| DTE | Data Terminal Equipment |
| DTMF | Dual Tone Multi Frequency |
| DTR | Data Terminal Ready |
| EMC | Electromagnetic Compatibility |
| ETSI | European Telecommunications Equipment Institute |
| FTA | Full Type Approval (ETSI) |
| GPRS | General Radio Packet Service |
| GSM | Global System for Mobile communication |
| HF | Hands Free |
| IMEI | International Mobile Equipment Identity |
| IMSI | International Mobile Subscriber Identity |
| IRA | Internationale Reference Alphabet |
| ITU | International Telecommunications Union |
| IWF | Inter-Working Function |

| | |
|-------------|---|
| LCD | Liquid Crystal Display |
| LED | Light Emitting Diode |
| LF | Linefeed |
| ME | Mobile Equipment |
| MMI | Man Machine Interface |
| MO | Mobile Originated |
| MS | Mobile Station |
| MT | Mobile Terminated |
| OEM | Other Equipment Manufacturer |
| PB | Phone Book |
| PDU | Protocol Data Unit |
| PH | Packet Handler |
| PIN | Personal Identity Number |
| PLMN | Public Land Mobile Network |
| PUCT | Price per Unit Currency Table |
| PUK | PIN Unblocking Code |
| RACH | Random Access Channel |
| RLP | Radio Link Protocol |
| RMS | Root Mean Square |
| RTS | Ready To Send |
| RI | Ring Indicator |
| SCA | Service Center Address |
| SIM | Subscriber Identity Module |
| SMD | Surface Mounted Device |
| SMS | Short Message Service |
| SMSC | Short Message Service Center |
| SS | Supplementary Service |
| TIA | Telecommunications Industry Association |
| UDUB | User Determined User Busy |
| USSD | Unstructured Supplementary Service Data |

10 Document Change Log

| Revision | Date | Changes |
|------------|----------|---|
| ISSUE#1 | 11/07/02 | initial release |
| ISSUE#2 | 08/01/03 | Added GM862-GPRS conformity assessment certificate |
| ISSUE#3 | 29/01/03 | Par. 2.10.2 Sim Reader updated. |
| ISSUE#4 | 11/02/03 | Par. 6.9 Easy GPRS Extension added. |
| ISSUE#5 | 03/03/03 | Par. 6.2.4 Command issuing timing added Par. 6.9.2.3 Defining the Internet peer to be contacted updated. Par. 6.9.2.3 Defining the Internet peer to be contacted updated. Par. 6.9.2.4 Open the connection with the internet host updated. Par. 6.9.2.5 Close the Socket and deactivate the context updated. Par. 6.9.4.2 #PASSW – Authentication Password control updated. Par. 6.9.4.4 #DSTO – Data Sending Time Out control updated. Par. 6.9.4.6 #SKTSET – Socket definition control updated. Par. 6.9.4.7 #SKTOP – Socket Open command updated. Par. 6.9.4.9 Socket Parameters Save Command added Par. 6.9.4.10 Socket Parameters Reset Command added |
| ISSUE#6 | 06/03/03 | Change all Finmek Telit references to DAI Telecom |
| ISSUE#7 | 09/05/03 | Par. 1 Overview updated Par. 2.4 Operating Frequency updated Par. 2.5 Transmitter output power updated Par. 2.6 Reference sensitivity updated Par. 2.7 Antenna updated Par. 2.10.1 Speech Coding updated Par. 2.10.2 Sim Reader updated Par. 2.10.5 Data/fax transmission updated Par. Par. 2.14 Interface connectors on GM862-GPRS pull-up resistors updated Par. 6.2.1 Command lines Par. 6.2.3 Command Response Timeout updated. Par. 6.2.4 Command issuing timing updated. Par. 6.2.5 Factory Profile and parameters stored in the profile added. Par. 6.3 Command availability table updated. Par. 7 Conformity Assessment Issues updated. Par. 7.1 GM862-GPRS: Conformity Assessment updated Par. 7.2 GM862-GSM: Conformity Assessment updated Par. 8 GM862-GPRS Technical Support updated. |
| ISSUE#8 | 03/06/03 | Par. 1 Overview updated Par. 2.10 Embodied Battery charger added |
| ISSUE#9 | 14/07/03 | Par. 6.3 Command availability table updated. Par. 6.7.1.21 #BND – Select Band (DCS 1800 or PCS 1900) command added Par. 6.5.8 Commands for battery charger added Par. 2.10 Embodied Battery charger updated |
| ISSUE#10 | 25/11/03 | Par. 6.3 Command availability table updated Par. 6.10 Easy Camera Custom Commands added |
| ISSUE#11 | 10/12/03 | Par. 6.3 Command availability table updated Par. 6.10 Easy Camera Custom Commands updated. Par. 5 Service and firmware update modified. |
| ISSUE#12 | 12/12/03 | Par. 7.3 GM862-PCS Conformity Assessment updated |
| ISSUE#13 | 17/12/03 | Par. 7 Conformity Assessment issues updated. Par. 6.5.4.2 +CFUN Set phone functionality (Power Saving Management) updated. |
| ISSUE#13.1 | 22/01/04 | Par. 6.10.1.5 Command change name from #CSQUAL to #CAMQUA Par. 6.10.1.6 Command change name from #CSMODE to #CMODE |